

Operation Manual

Loading Ramp

30182-30198



Illustration similar, may vary depending on model

Read and follow the operating instructions and safety information before using for the first time.

Technical changes reserved!

Due to further developments, illustrations, functioning steps and technical data can differ insignificantly.

Updating the documentation

If you have suggestions for improvement or have found any irregularities, please contact us.



The information contained in this document is subject to change without prior notice. No part of this document can be copied or duplicated in another form without the prior written consent of WiITec Wildanger Technik GmbH. The WiITec Wildanger Technik GmbH assumes no liability for any errors in this user manual or the connection diagram.

Although WiITec Wildanger Technik GmbH has made every effort to make sure that this user manual is complete, accurate and updated, errors cannot always be avoided. In the event of problems with this user manual please complete and send this form back to us.

FAX-notification (+++49 2403 55592-15),

from: _____

Name: _____

Firm: _____

Tel/Fax: _____

I would like to report the following mistakes:

Customer Service WiITec Wildanger Technik GmbH

e-mail: **service@WiITec.info**

Tel: ++49 2403 55592-0

Introduction

Thank you for purchasing this quality product. **To minimize the risk of injury we urge that our clients take some basic safety precautions when using this device. Please read the operation instructions carefully and make sure you have understood its content.**


Leave the maintenance, adjustment and repair to qualified technical personnel. In case of unauthorised intervention, the 2-year warranty is no longer valid! Keep these operation instructions safe.

Loading Ramp Instructions

Ramps are intended for specific applications and it's imperative that the purchased ramp is not used for any other applications than it's intention. Please read carefully and comply with the instructions on how to use quality loading ramps.

Instructions are as follows:

1. The bolt must be inserted and hand-tighten though the barrel hinge.
2. Ramp surface must be dry, clean and free from oil or grease.
3. Park vehicle or trailer on flat, firm ground. Be sure that the vehicle is parked with emergency/parking brake on and the engine turned off.
4. Place ramps on the tailgate or trailer to accommodate the wheelbase of the loading vehicle.
5. Insure that the plate or fingers of the ramp are securely in place.
6. Install and secure safety straps. An illustration of how to secure the safety straps is as follows:

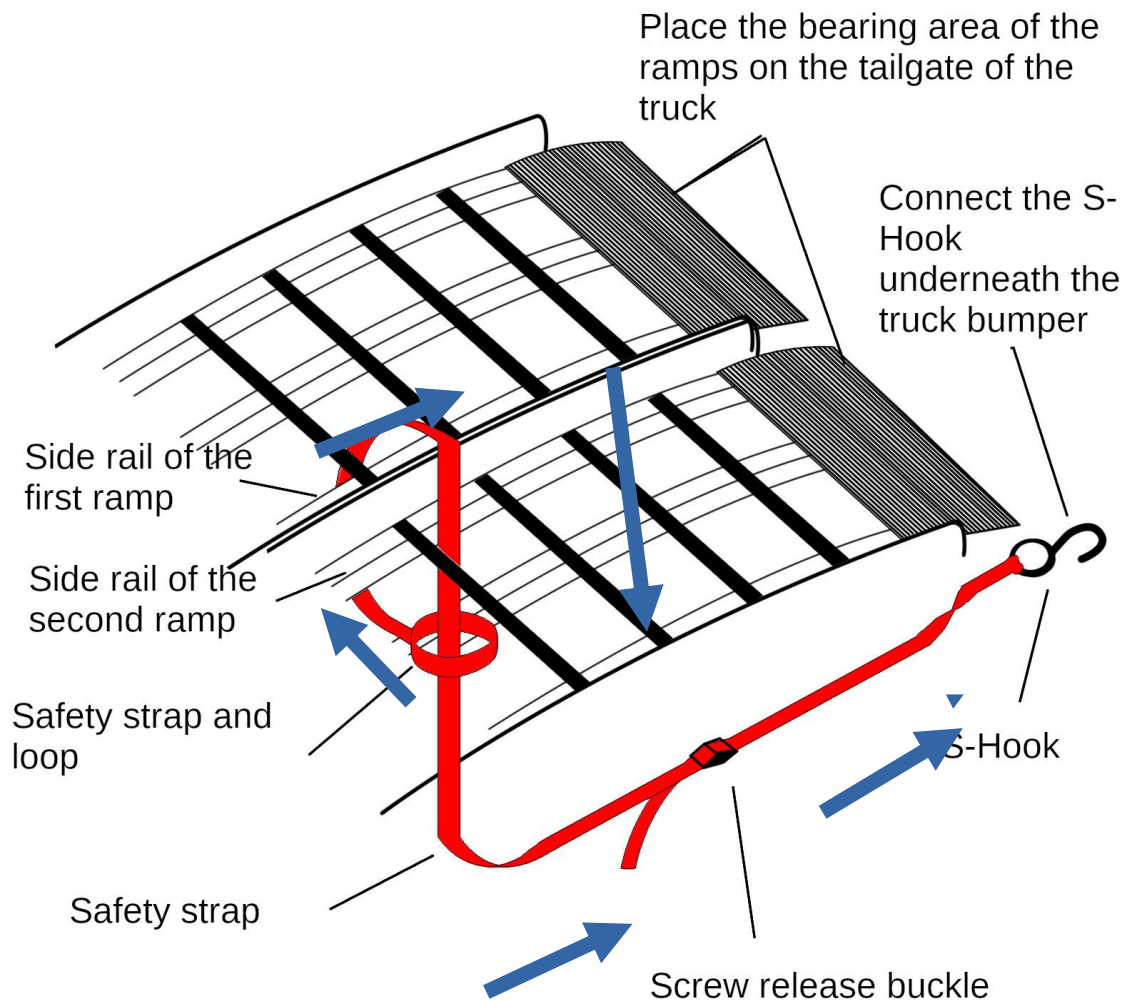



7. **Always** attach safety strap(s). Make sure that the strap is properly adjusted for length to prevent kick-back of the loading ramp.
8. Ensure the safety strap does not allow rear-ward movement of the loading ramp.

Motorcycle use:

- Never ride an Motorcycle or any other motorized equipment up or down a single runner loading ramp.
- Slowly push machine up the ramps making sure that the tires are centered on the ramp at all times. Two or more adult Persons are recommended for loading.
- Acceleration must be slow, controlled and constant. The Operator must remain in control of the machinery at all times during loading and unloading.
- Use the brake as necessary to control your speed while unloading. Sudden or erratic braking or accelerating will cause tamps to pull away from the tailgate or trailer or even break the ramp.

ATV use:

- Always have a second adult person to spot for the rider when loading.
- Slowly drive machine up to the ramps. Make sure that the tires are centered on the ramp all the times.
- Acceleration must be slow, controlled and constant. The Operator must remain in control of the machinery at all times during loading and unloading.
- Use the brake as necessary to control your speed while unloading. Sudden or erratic braking or accelerating will cause tamps to pull away from the tailgate or trailer or even break the ramp.

Warning: Never exceed the maximum loading capacity of the Ramps. Use at your own risk.

Please follow the Instructions. Failure to follow these procedures may result in damage to the machinery, injury or death.