


 
 

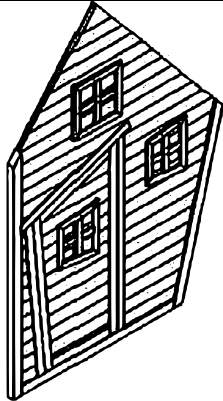 
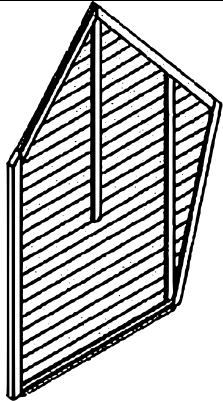 
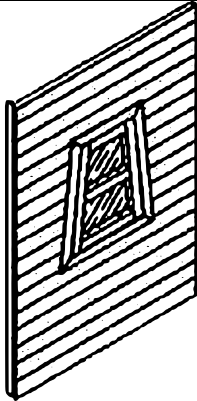 
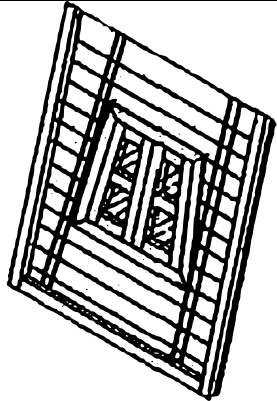 
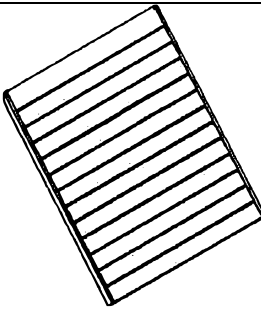 
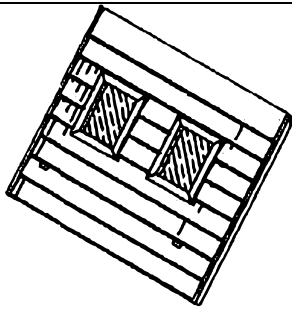 
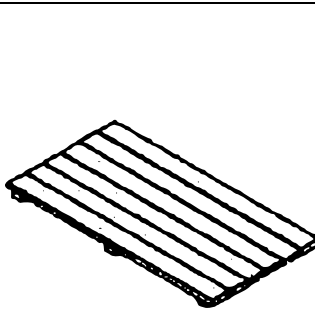 
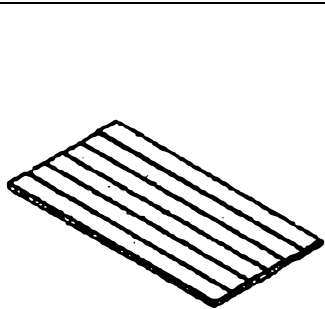 




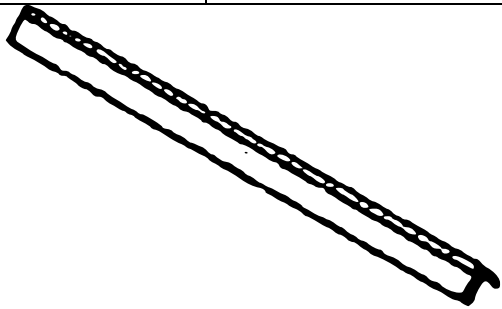 
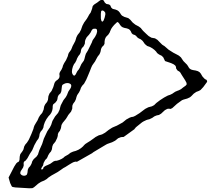 
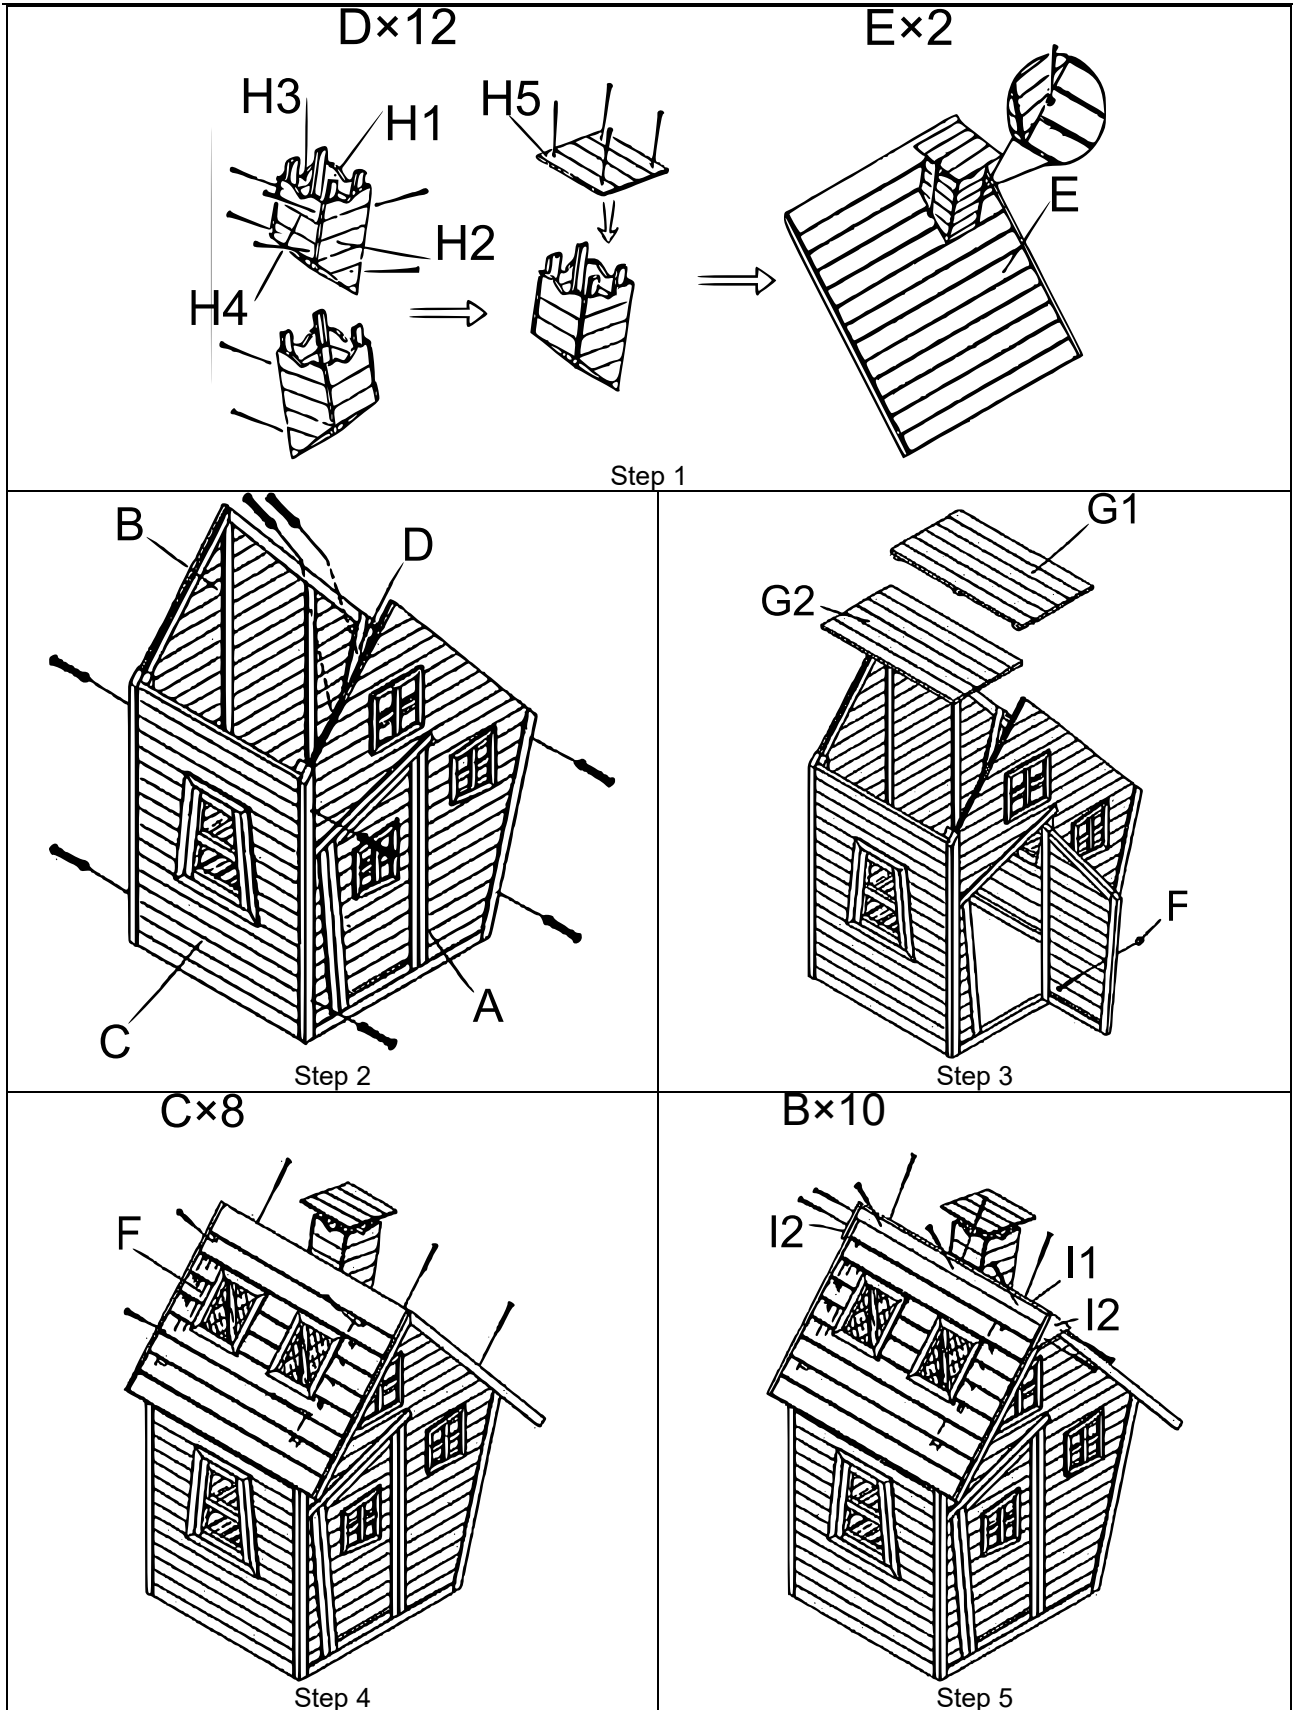 




<p><b>A</b></p>  <p>M6×55 mm (8)</p>	<p><b>B</b></p>  <p>3.5×25 mm (10)</p>	<p><b>C</b></p>  <p>3.5×30 mm (12)</p>	
<p><b>D</b></p>  <p>3.0×20 mm (12)</p>	<p><b>E</b></p>  <p>3.0×12 mm (2)</p>	<p><b>F</b></p>  <p>(1)</p>	
 <p>A×1</p>	 <p>B×1</p>	 <p>C×1</p>	 <p>D×1</p>
 <p>E×1</p>	 <p>F×1</p>	 <p>G1×1</p>	 <p>G2×1</p>
 <p>H1×1</p>	 <p>H2×1</p>	 <p>H3×1</p>	 <p>H4×1</p>
 <p>I1×1</p>		 <p>I2×1</p>	



Important Note:

Reproduction and any commercial use (of parts) of this operating manual, requires a written permission of WilTec Wildanger Technik GmbH.