

Operation Manual

Waste Water Pump

51537–51541

wiltec



Illustration similar, may vary depending on model

Read and follow the operating instructions and safety information before using for the first time.

Technical changes reserved!

Due to further developments, illustrations, functioning steps and technical data can differ insignificantly.

Updating the documentation

If you have suggestions for improvement or have found any irregularities, please contact us.



The information contained in this document may alter at any time without previous notice. It is prohibited to copy or spread any parts of this document in any way without prior written allowance. All rights reserved.

The WilTec Wildanger Technik GmbH cannot be held accountable for any possible mistakes in this operating manual, nor in the diagrams and figures shown.

Even though, the WilTec Wildanger Technik GmbH has undergone biggest possible efforts to ensure that the operating manual is complete, faultless and up to date, mistakes cannot be entirely avoided.

If you should find a mistake or wish to make a suggestion for improvement, we look forward to hearing from you.

Send an e-mail to:

service@wiltec.info

or use our contact form:

<https://www.wiltec.de/contacts/>

The most recent version of this manual in various languages can be found in our online shop via:

<https://www.wiltec.de/docsearch>

Our postal address is:

WilTec Wildanger Technik GmbH
Königsbenden 12
52249 Eschweiler
Germany

To return orders for exchange, repair or for other purposes, please use the following address. Attention! To allow for a smooth execution of your complaint or return, it is important to contact our customer service team before returning the goods.

Returns Department
WilTec Wildanger Technik GmbH
Königsbenden 28
52249 Eschweiler

E-mail: **service@wiltec.info**
Tel: +49 2403 55592-0
Fax: +49 2403 55592-15



Introduction

Thank you for purchasing this quality product. **To minimize the risk of injury we urge that our clients take some basic safety precautions when using this device. Please read the operation instructions carefully and make sure you have understood its content.**

Keep these operation instructions safe.

Please note before starting:

The pump can be attached to any protective contact socket, which has been installed properly. The socket needs a supply voltage of 230 V and a fuse of at least 6 A.



Warning! If the pump is meant to be used near swimming pools or garden ponds and in their protective area, it needs to be equipped with an earth fault circuit breaker with a normal tripping current of max. 30 mA. The pump must not be operated if there are people within the pool or pond. Please contact an electrician.

Safety notes for the pump

General safety notes

- Know the application of the pump and ensure to be familiar with the limitations and potential dangers.
- Make sure that the electricity source corresponds to the requirements of the device.
- Disconnect the pump from the electricity supply before carrying out any maintenance work.
- Release the pressure from the system before maintaining a part.
- Release the liquid from the system before maintaining the pump.
- Secure the pressure line before starting the pump. An unsecured pressure line can retaliate and thus lead to injuries and/or damages.
- Check the hose for wear and damage before every use. Ensure that all connections are secured.
- Occasionally check the pump and the system components. Keep the pump and the system free of residues and foreign bodies. If necessary, carry out a routine maintenance.
- Keep a remedy for pressure relief near pumps, the pressure lines of which can be closed off or clogged.

Personal safety

- Always wear protective glasses when working with the pump.
- Keep your working area clean, tidy, and well illuminated. Store tools and equipment when the pump is not in use.
- Keep bystanders away from your working area.
- Make sure to make the working area safe for children by using padlocks and main switches and by removing ignition keys.
- When connecting an electrically powered pump, all electrical and safety instructions need to be regarded.
- The pump motor is equipped with an automatic resetting thermal protection and can unexpectedly re-start.
- Danger of electric shock: This device is designed to only be operated with 230 V. To reduce the risk of electric shock, ensure that the pump is connected to a safety plug properly installed.
- The entire wiring should be done by a qualified technician.
- Protect the power cable from sharp objects, hot surfaces, oil, and chemicals. Avoid bending the cable. Damaged or worn cables need to be replaced immediately.
- Use cables with a sufficient size to minimise a voltage drop to the motor.
- Do not touch a running motor. Modern motors can reach very high temperatures when running.

Additional safety precautions

Have the following checked by an expert before using the pump (important for your own safety, too):

- Ground connection
- Neutral conductor
- Fault-current circuit breaker needs to comply with the safety regulations and needs to work faultless.
- The electrical connections need to be protected from humidity.
- When a danger of flooding occurs, the electrical connections need to be placed in a high area.
- The circulation of aggressive liquids as well as the circulation of abrasive substances is to be avoided.
- The motorised waste water pump needs to be protected from frost.
- The pump needs to be protected from dry-running. The pump should be kept away from children.

Resistance

- The waste water pump is suited for a circulation of water with a maximal temperature of 35 °C.
- The pump might not be suited for other liquids, especially motor oils, cleaning detergents, and other chemical products.

Assembly

The waste water pump is installed the following way:

- in stationary position with a fixed pipeline or
- in stationary position with a flexible pipe.



Please note!

- The pump should never be installed hanging self-supporting of the pressure line or the electricity cable. The waste water pump needs to be hung up by the designated handle or placed on the floor of the shaft. To ensure the impeccable functioning of the pump, the shaft floor needs to be kept free of mud and dirt of any kind.
- When the water level has sunk too low, the mud in the shaft dries fast and stops the pump from starting. It is necessary to regularly check the pump (by performing tests before operation).
- The float switch is adjusted to allow the pump to start immediately.

Note! The pump shaft should have a minimum size of 40×40×50 cm, so that the floater can move freely.

Power supply

The pump is equipped with a proper protective contact plug. The pump is meant to be connected to a 220/230 V~50 Hz safety socket. Ensure that the socket is sufficiently secured (at least 6 A) and is in an excellent condition. Place the electricity plug into the socket and the pump is ready for use.

Important note! If the main cable or the socket has been damaged due to external influences, repairs on the cable are prohibited. Repair-work may only be carried out by a qualified technician.



Areas of application

This pump is mainly used as a cellar pump. When placing this into a shaft, the pump provides protection from flooding. Additionally, the pump can be used, where water needs to be transported from one area to another, e.g., at home, in agriculture, in gardening, for sanitary work and so forth.

Work settings

After thoroughly reading the operating manual and understanding it, the pump can be put into operation. Please note the following things in advance:

- The pump is on the floor of the shaft.
- Ensure that the pressure line is attached properly.
- Check if the electrical connection has 230 V and 50 Hz. All fibre particles possibly collected in the pump casing should be removed with a water stream.
- Check if the socket is in a good condition.
- Make sure that water and humidity never reach the main components.
- Avoid any running dry of the pump.

Maintenance instructions

- This waste water pump is an approved, maintenance-free, high-quality product subject to a strict final inspection.
- We recommend a regular inspection and maintenance to ensure a longer lifespan of the device and an interruption-free operation.

Important notes!

- Before every maintenance work, pull out the plug.
- In case the pump should be transported frequently, it needs to be cleaned with clear water after every use.
- When installing the pump stationary, the function of the floater should be checked every 3 months.
- All fibre particles possibly collected in the pump casing should be removed with a water stream.
- Every 3 months, the shaft bottom should be freed from mud.
- Remove the residues on the float switch with clear water.

Cleaning the drive wheel

If there are excessive residues collected in the pump casing, the bottom part of the pump needs to be demounted the following:

1. Loosen the 4 screws on the bottom of the inlet cage.
2. Remove the suction cage from the pump casing.
3. Clean the drive wheel with clear water.
4. **Important! The pump must not be placed on the drive wheel.** Build the pump back together in the reversed order.

Adjusting the on/off position of the operating point

The on/off switching point and the shut-off point of the floating switch can be adjusted via the floating switch and its snap holder. Before putting the pump into operation, check the following:

1. The float switch needs to be installed so that the filling level of the shut-off point and the filling level of the switch-on point can be activated with little effort.
To check this, place the pump into a container filled with water. Carefully lift the float switch by hand and lower it again. Then check if the pump switches on and off.
2. Ensure that the distance between the float switch head and the snap holder is not too small. A proper operation cannot be guaranteed if the gap is too small.
3. When adjusting the float switch, ensure that it does not touch the basis before switching the pump off. **Attention!** Danger of dry-running.

To modify the pump and allow a lower suction point, first remove the two screws of the back float switch cover.



The cover can then be pushed away downward. We recommend tilting the pump sideways to more easily remove the cover.



There are two different mounting possibilities of both float switches. Fig. 1 shows the factory setting of the float switch and bracket mounting. Here the upper float switch can only move.

With this way of mounting the switch-on point is at 145 mm/180 mm water level depending on the pump variation. See the following table:

| Item number | Switch-on point (mm) | Switch-off point (mm) |
|-------------|----------------------|-----------------------|
| 51537 | 145 | 60 |
| 51538 | | |
| 51539 | | |
| 51540 | 180 | 100 |
| 51541 | | |

To reassemble the pump to version 2, both screws need to be loosened and the brackets to be turned. This allows both float switches to move and the switch-on point to sink.

Tighten the screws up again carefully.


With this assembly, the switch-on point is at 160 mm water level/ 190 mm depending on the pump adjustment. See the following table.

| Item number | Switch-on point (mm) | Switch-off point (mm) |
|-------------|----------------------|-----------------------|
| 51537 | 160 | 60 |
| 51538 | | |
| 51539 | | |
| 51540 | 190 | 100 |
| 51541 | | |

1



2

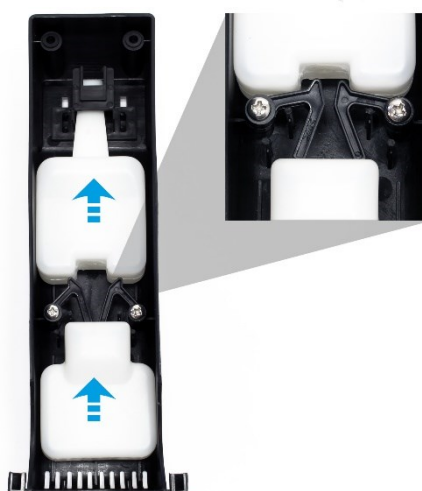



Troubleshooting

| Problem | Reason | Solution |
|---|--|--|
| Pump does not start | No power supply | Check power supply. |
| | Float switch does not switch | Place float switch in a higher position. |
| No flow | Inlet filter clogged | Clean inlet filter with water stream. |
| | Compressed air hose bent | Adjust hose. |
| Pump does not switch off | Float switch cannot sink | Place pump properly on the shaft floor. |
| Insufficient flow | Inlet filter clogged | Clean inlet filter. |
| | Reduced pumping performance due to dirty water or grinding water | Clean pump and replace worn parts. |
| The pump switches itself off after short running period | Thermal switch stops pump due to waste water. | Pull power plug, clean pump and shaft. |
| | Water too hot, thermal switch stops pump | Ensure that the maximal water temperature does not exceed 35 °C. |

Technical data

| | 51537 | 51538 | 51539 | 51540 | 51541 |
|--|-----------------------------------|-------|-------|-------|-------|
| Voltage (V) | 230 | | | | |
| Frequency (Hz) | 50 | | | | |
| Power consumption (W) | 250 | 400 | 750 | 400 | 750 |
| Max. delivery rate ($\frac{l}{h}$) | 6000 | 7000 | 12500 | 8000 | 13000 |
| Max. delivery head (m) | 5.5 | 7.5 | 8.5 | 5 | 7.5 |
| Max. immersion depth (m) | 8 | | | 5 | 8 |
| Max. water temperature (°C) | 35 | | | | |
| Hose connections (cm) | 2.54 (1"), 3.17 (1¼"), 3.81 (1½") | | | | |
| Max. ø of foreign bodies (mm) | 5 | | | 35 | |

Disposal regulations

EU guidelines regarding the disposal of scrap electric appliances (WEEE, 2012/19/EU) were implemented in the law related to electrical and electronic equipment and appliances.

All WilTec electric devices that fall under the WEEE regulations are labelled with the crossed-out wheeled waste bin logo. This logo indicates that this electric equipment must not be disposed with the domestic waste.

The company WilTec Technik GmbH has been registered in the German registry EAR under the WEEE-registration number DE45283704.

Disposal of used electrical and electronic appliances (intended for use in the countries of the European Union and other European countries with a separate collection system for these appliances).

The logo on the article or on its packaging points out that this article must not be treated as normal household waste but must be disposed to a recycling collection point for electronic and electrical waste equipment. By contributing to the correct disposal of this article you protect the environment and the health of your fellow men. Environment and health are threatened by inappropriate disposal.



Materials' recycling helps reduce the consumption of raw materials.

Additional information on recycling this article can be provided by your local community, municipal waste disposal facilities or the store where you purchased the article.

Address:
WilTec Wildanger Technik GmbH
Königsbenden 12 / 28
D-52249 Eschweiler

Important notice:

The reprint or reproduction, even of excerpts, and any commercial use, even in part of this instructions manual require the written permission of WilTec Wildanger Technik GmbH.