



52416 – Children's Play Kitchen

<p>A 3,5×40 18</p> <p>B 3,0×25 7</p> <p>C 3,5×35 4</p>	
	<p>① ② ③ ④ ⑤</p>
<p>A 3.5×40 (4) C 3.5×35 (4) Step 1</p>	<p>A 3.5×40 (4) Step 2</p>
<p>A 3.5×40 (4) B 3.0×25 (4) Step 3</p>	<p>A 3.5×40 (2) B 3.0×25 (3) Step 4</p>
<p>A 3.5×40 (4) Step 5</p>	<p>Step 6</p>

Important note: The reprint or reproduction, even of excerpts, and any commercial use, even in part of this instruction manual requires the written permission of the WilTec Wildanger Technik GmbH.