


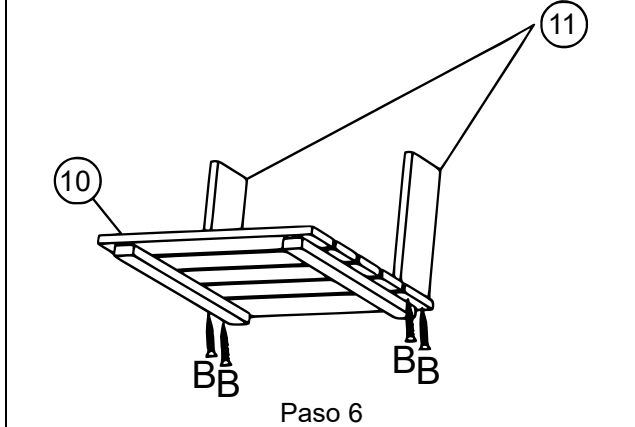
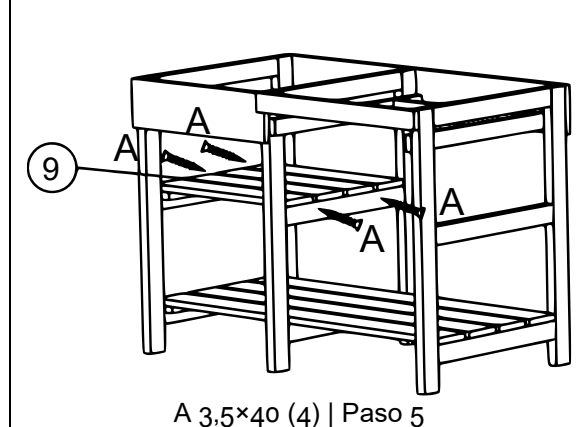
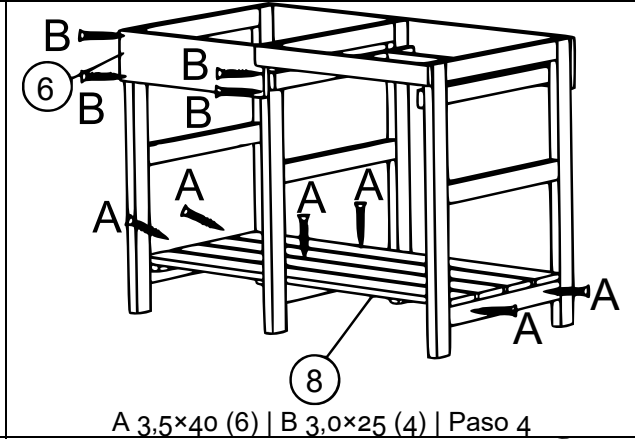


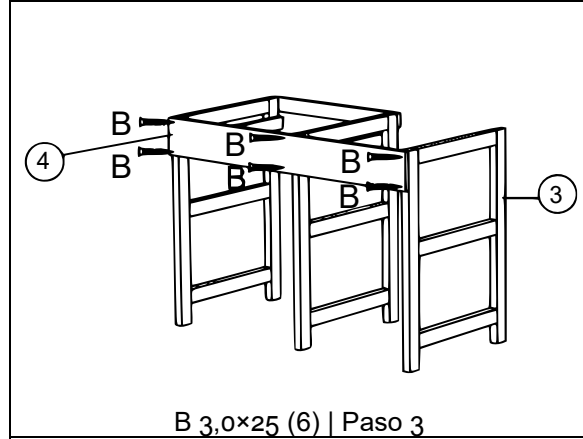

52417 – Cocina para jugar en el exterior con estantería

A 3,5×40		18								
B 3,0×25		42	①	②	③	④	⑤	⑥	⑦	⑧
C 3,5×30		4								
D 3,0×20		14								
⑨	⑩	⑪×2	⑫	⑬	⑭	⑮	⑯×2	⑰×4	⑱	⑲×2
									⑳	㉑

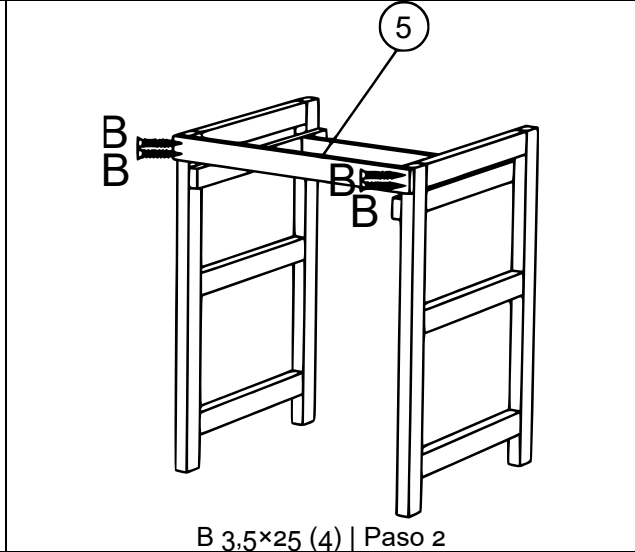

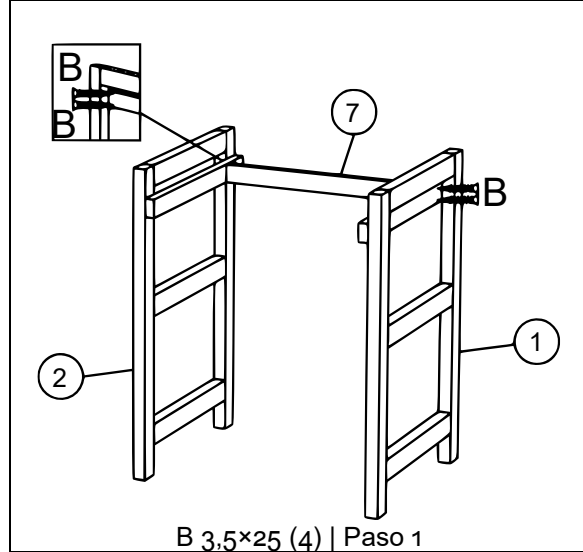

<p>B 3,0×25 (4) Paso 7</p>	<p>B 3,0×25 (2) Paso 8</p>
<p>B 3,0×25 (4) Paso 9</p>	<p>B 3,0×25 (6) Paso 10</p>
<p>B 3,0×25 (4) Paso 11</p>	<p>D 3,0×20 (14) Paso 12</p>

¡Sacad las ollas y sartenes! ¡Ni os queméis ni socarréis!

AVISO IMPORTANTE:

La reproducción total o parcial, así como cualquier uso comercial que se le pudiera dar a este manual, al todo o alguna de sus partes, solo mediante autorización escrita por parte de la empresa WilTec Wildanger Technik GmbH.