




toboli ASSEMBLY INSTRUCTIONS


52418 – Children's Outdoor Play Kitchen




<p>A 3,5×40  12</p> <p>B 3,0×25  24</p>	
<p>A 3.5×40 (2×) Step 1</p>	<p>A 3.5×40 (2×) Step 2</p>
<p>A 3.5×40 (2×) Step 3</p>	<p>A 3.5×40 (6×) Step 4</p>
<p>Step 5</p>	<p>B 3.0×25 (4×) Step 6</p>

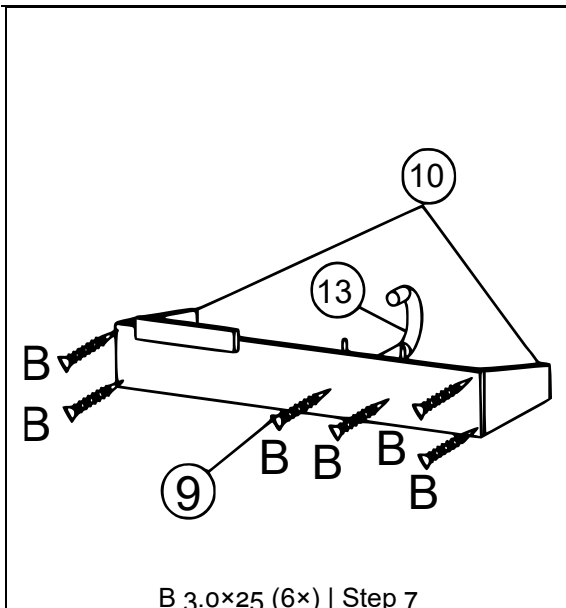


B 3.0×25 (6×) | Step 7

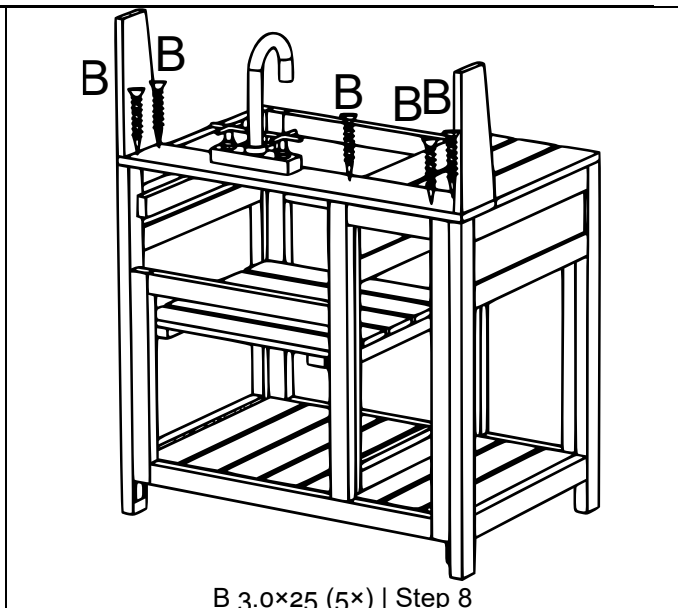


B 3.0×25 (5×) | Step 8

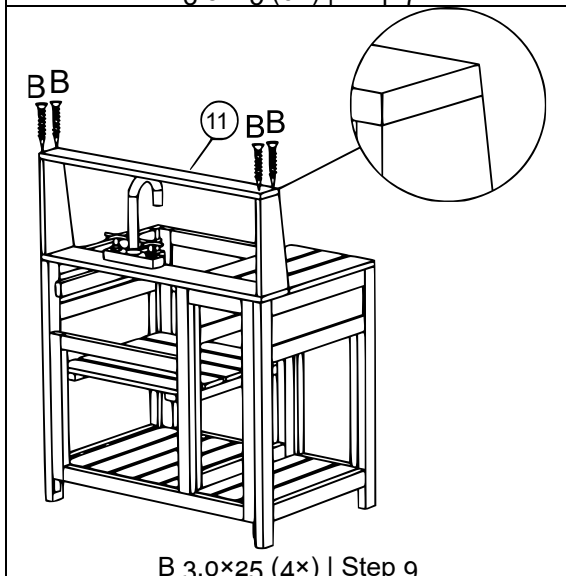


B 3.0×25 (4×) | Step 9

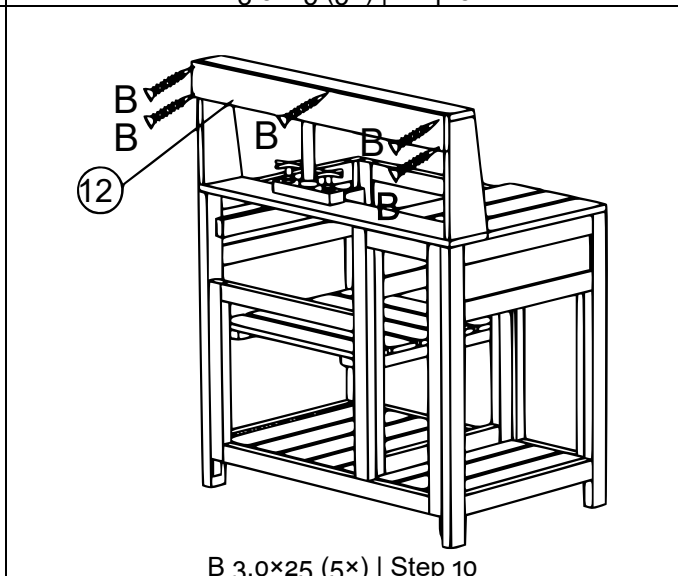

B 3.0×25 (5×) | Step 10

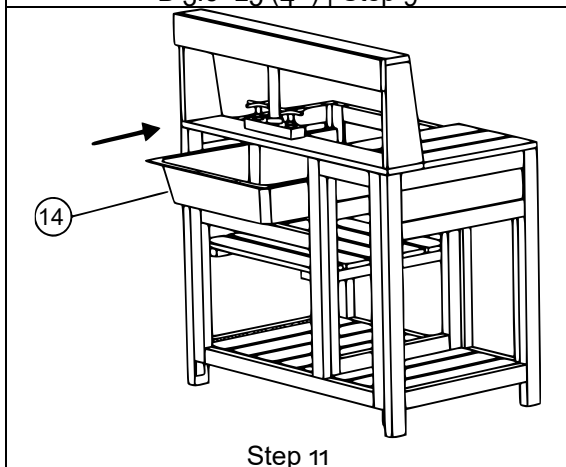

Step 11

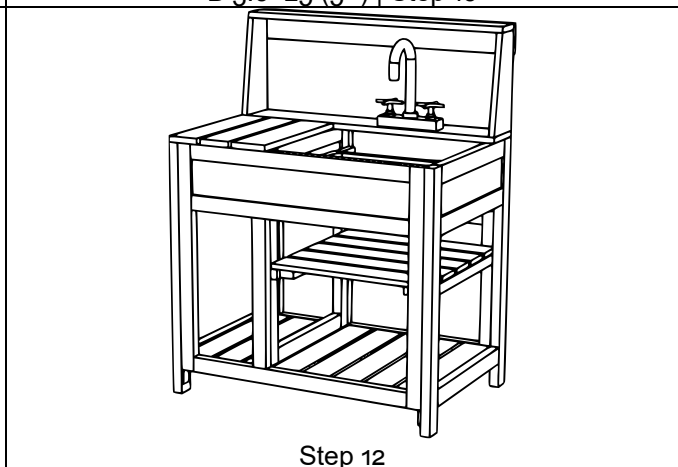

Step 12

First fill, then clear, last do the dishes!

Important note:

The reprint or reproduction, even of excerpts, and any commercial use, even in part of this instruction manual requires the written permission of the WilTec Wildanger Technik GmbH.