 
 

 
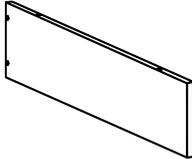

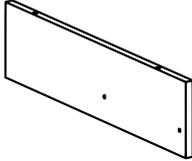
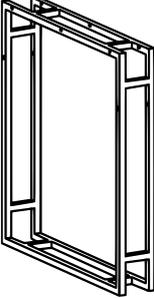
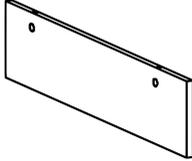
 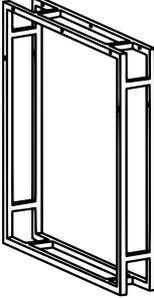
 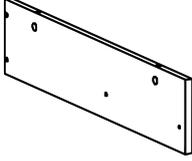
 
 









Nr.	Abbildung	Anz.	Nr.	Abbildung	Anz.
1		1	9		2
2		1	10		2
3		1	11		2
4		1	12		2
5		1	13		1
6		1	14		1
7		1	15		2
8		2			1


A	B	C	D1	D2
 St7×40	 M6×35	 St5×50	 St4×10	
22	14	10	4	4

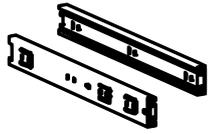


E1	E2	F	G	H
 M4x18		 M4x18		
4	2	16	4	10

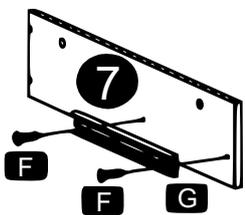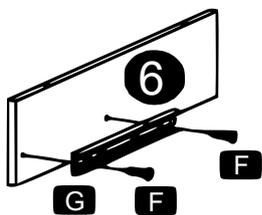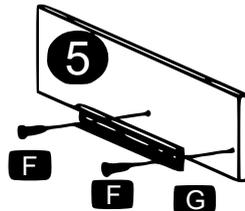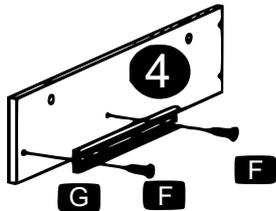


Schritt 1 | F (8), G (4)

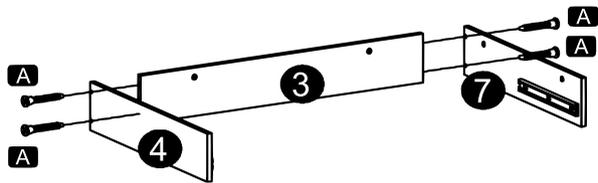


Schritt 2 | A (4)

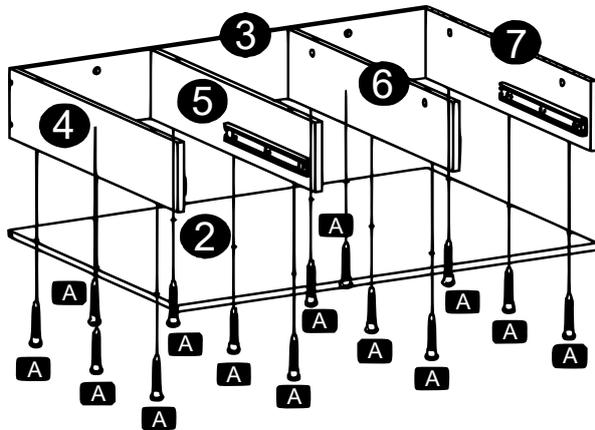


Schritt 3 | A (14)

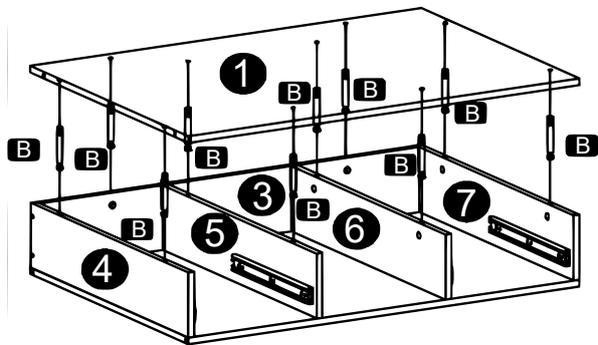


Schritt 4 | B (10)

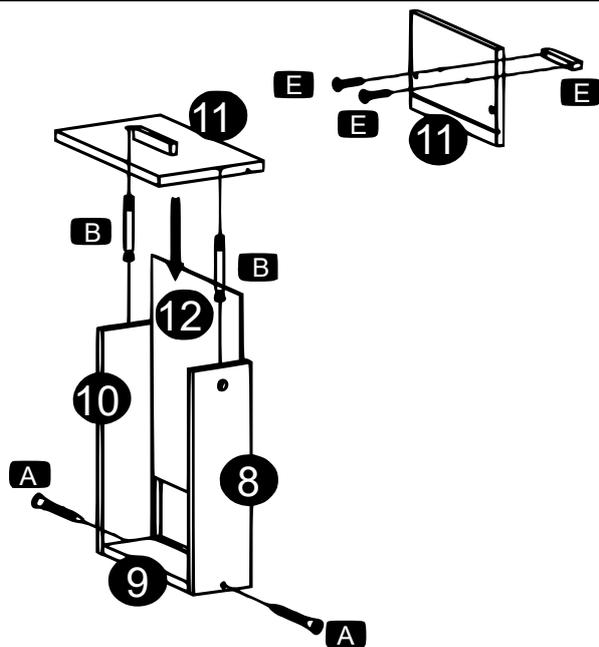


Schritt 5 | B (2), E1 (1), E2 (2), A (2)

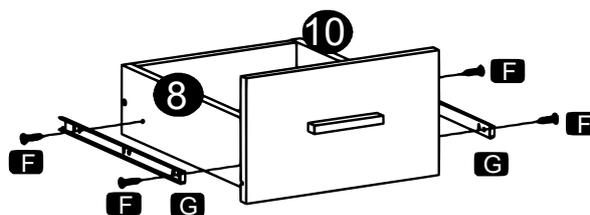


Schritt 6 | G (2), F (4)

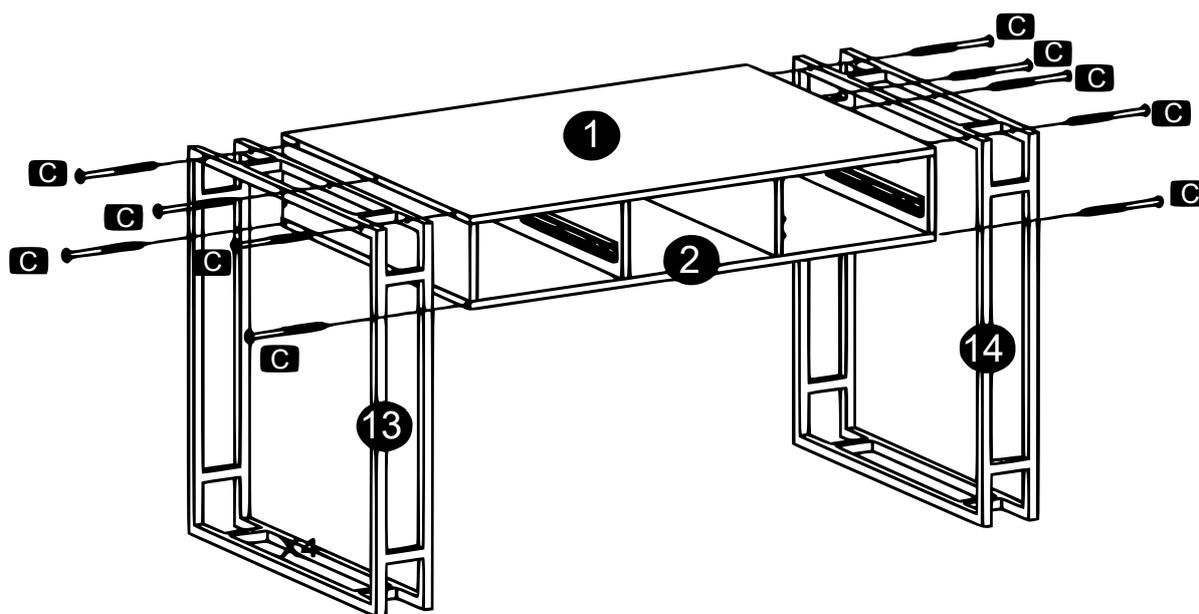

Schritt 7 | G (10)

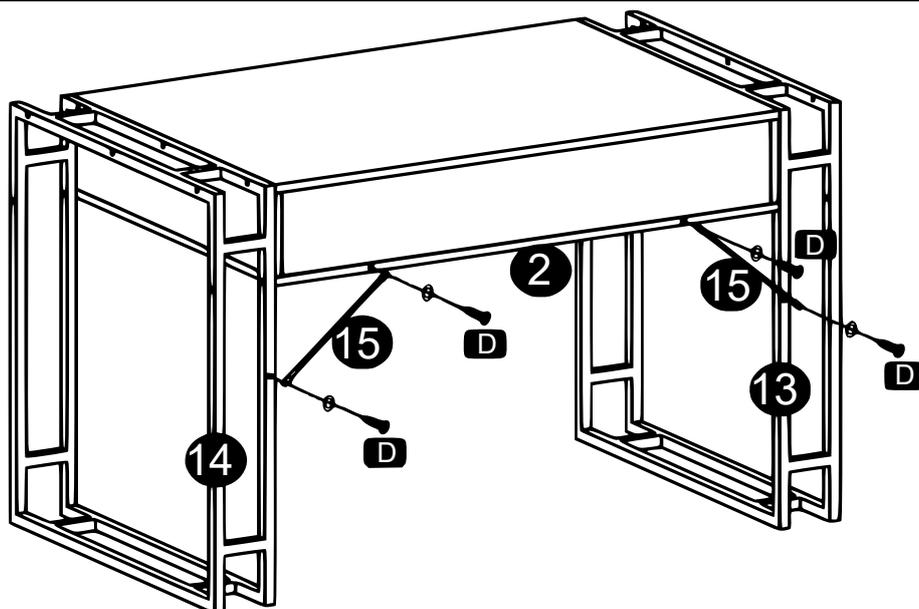



Schritt 8 | D1, D2 (4)

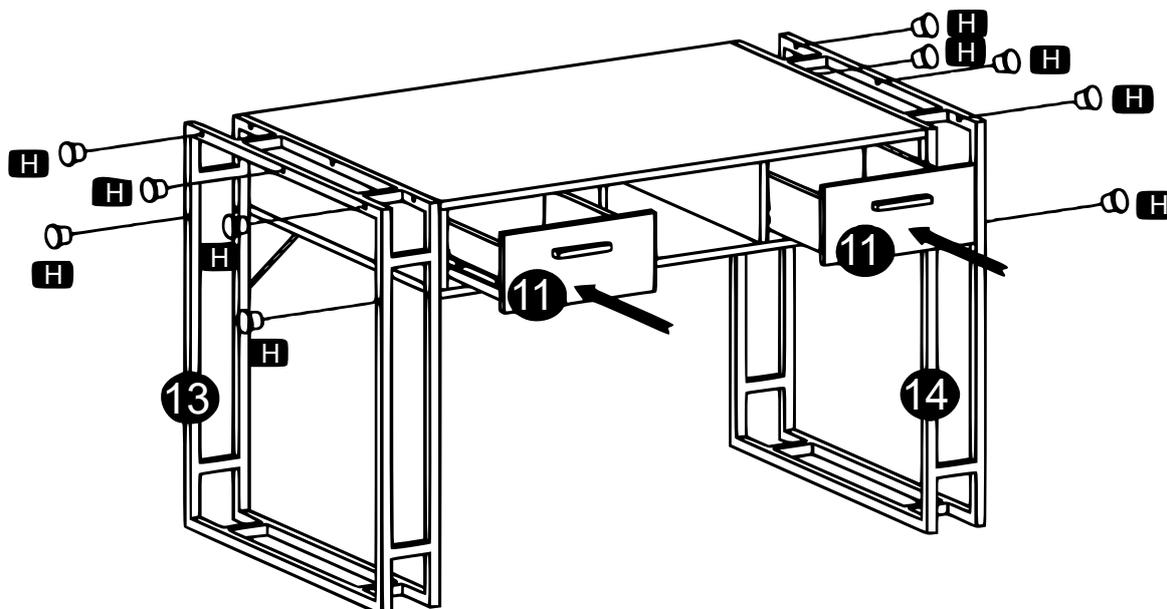

Schritt 9 | H (10)



VERWENDUNG DER
EXZENTERSCHRAUBEN

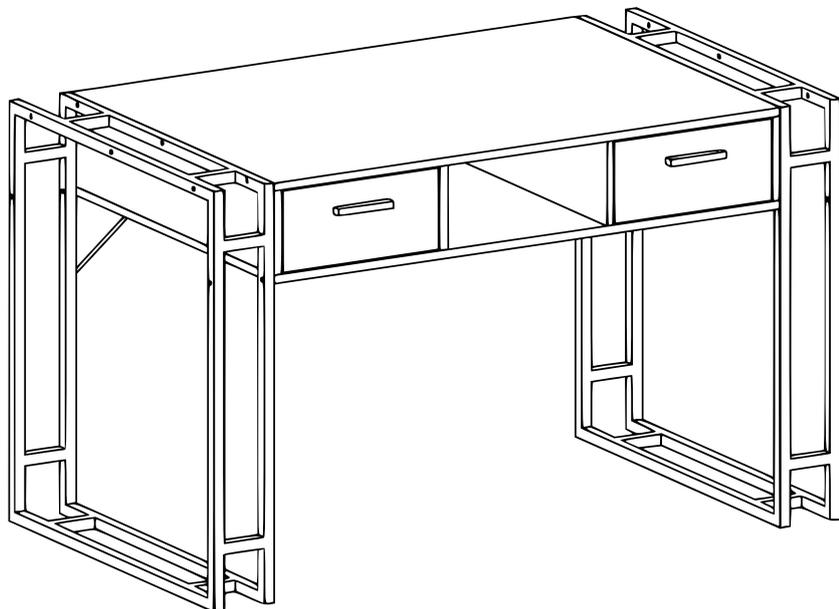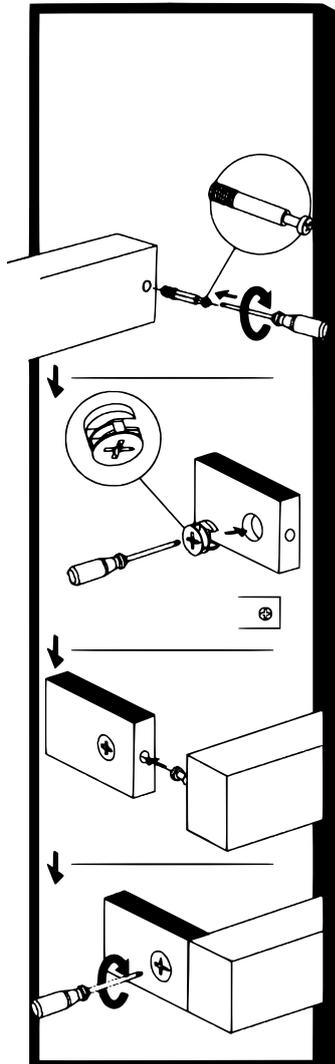

Wichtiger Hinweis:

Nachdruck, auch auszugsweise, und jegliche kommerzielle Nutzung, auch von Teilen der Anleitung, nur mit schriftlicher Genehmigung, der WilTec Wildanger Technik GmbH.