

Operation Manual

Halogen Ceiling Heater

61020



Illustration similar, may vary depending on model

Read and follow the operating instructions and safety information before using for the first time.

Technical changes reserved!

Due to further developments, illustrations, functioning steps and technical data can differ insignificantly.

Updating the documentation

If you have suggestions for improvement or have found any irregularities, please contact us.

The information contained in this document may alter at any time without previous notice. It is prohibited to copy or spread any parts of this document in any way without prior written allowance. All rights reserved.

The WilTec Wildanger Technik GmbH cannot be held accountable for any possible mistakes in this operating manual, nor in the diagrams and figures shown.

Even though, the WilTec Wildanger Technik GmbH has undergone biggest possible efforts to ensure that the operating manual is complete, faultless and up to date, mistakes cannot be entirely avoided.

If you should find a mistake or wish to make a suggestion for improvement, we look forward to hearing from you.

Send an e-mail to:

service@wiltec.info

or use our contact form:

<https://www.wiltec.de/contacts/>

The most recent version of this manual in various languages can be found in our online shop via:

<https://www.wiltec.de/docsearch>

Our postal address is:

WilTec Wildanger Technik GmbH
Königsbenden 12
52249 Eschweiler
Germany

Do you wish to pick goods up? Our pick-up address is:

WilTec Wildanger Technik GmbH
Königsbenden 28
52249 Eschweiler
Germany

To shorten the waiting time and allow for a rapid on-site transaction, we ask you to call us previously or placing your order via the webshop.

E-mail: service@wiltec.info
Tel: +49 2403 55592-0
Fax: +49 2403 55592-15

To return orders for exchange, repair or for other purposes, please use the following address. Attention! To allow for a smooth execution of your complaint or return, it is important to contact our customer service team before returning the goods.

Returns Department
WilTec Wildanger Technik GmbH
Königsbenden 28
52249 Eschweiler

E-mail: service@wiltec.info
Tel: +49 2403 55592-0
Fax: +49 2403 55592-15

Introduction

Thank you for purchasing this quality product. **To minimize the risk of injury we urge that our clients take some basic safety precautions when using this device. Please read the operation instructions carefully and make sure you have understood its content.**

Keep these operation instructions safe.

Important Instructions

Warning:

- Do not use the heater with a programmer, timer, separate remote-control system, or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.
- It is dangerous to install the device close to curtains and other combustible materials.
- Do not use the heater close to a shower, bath or swimming pool.
- The heater should not be located below a socket.
- If the supply cord is damaged, it must be replaced by a qualified electrician in order to avoid a hazard.
- This device can be used by children aged 8 years and above and people with reduced physical, sensory or mental capabilities or lack of experience and/or knowledge if they are being supervised and instructed on how to use of the appliance in a safe way and understand the hazards involved. Children must not play with the device. Cleaning and maintenance work cannot be carried out by children unless they are older than 8 and are being supervised.
- Keep the appliance and its cable out of reach of children younger than 8 years of age.
- **Warning:** This heater is not equipped with a device to control the room temperature. Do not use this heater in small rooms when they are occupied by people not capable of leaving the room on their own, unless constant supervision is provided.
- Pay attention that, no combustible materials, such as curtains, marquees, flags, plastic foils, etc. cover or obstruct the device due to wind/ draft or other environmental influences.
- **Caution:** Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

Safety notes

When using this electric unit, basic safety precautions should be followed to reduce the risk of fire, electric shock, and injury to people, including the following:

- Do read **all** instructions before using this device.
- **Caution! Risk of electric shock!** Do **not** open or try to repair the heater yourself.
- This heater may get hot when in use. To avoid burns, do **not** let bare skin touch hot surfaces. If provided, use handles when moving this heater.
- Keep combustible materials, such as furniture, pillows, bedding, paper, clothes, and curtains at least 90 cm/3 feet from the front of the heater and keep them away from the sides, top, and rear. Do **not** place towels or other objects on the heater.
- Extreme caution is necessary when any heater is used by or near children or disabled people or when the heater is left operating and unattended.
- Do **not** operate any heater with a damaged cable or if the heater has malfunctions, has been dropped or damaged in any way. Bring the heater to an authorized servicing facility for examination, electrical or mechanical adjustment or repair.
- This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. **Never** locate the heater where it may fall into a bathtub or other water bodies. To protect against electrical hazards, do **not** immerse it in water or other liquids.
- Do **not** touch the control panel with a wet hand.




- Do **not** run the cable under carpeting. Do **not** cover the cable with rugs, runners or similar coverings. Place the cable away from busy/frequently used areas and where it will not be tripped over.
- Do **not** insert or allow foreign objects to enter any ventilation opening as this may cause an electric shock or fire or damage the heater.
- To prevent a possible fire, do **not** block the air intakes in any way. Do **not** use the device on soft surfaces, like a bed, etc. where openings may become blocked.
- A heater has hot and arcing or sparking parts inside. Do **not** use in areas where gasoline, paint, explosive and/ or flammable liquids are used or stored. Keep unit away from heated surfaces and open flames.
- Avoid the use of an extension cable as it may overheat and cause a risk of fire. However, if an extension cable is required it should have a minimum wire size of 1.5 mm².
- To disconnect the heater, first turn the switch to **off**. Always turn the device off before moving or cleaning it or whenever the heater is not in use.
- Only use it for the intended purpose described in this manual. Any other use is not recommended by the manufacturer and may cause fire, electric shock or injury to people. The use of attachments is not recommended especially when sold by unauthorized dealers, as these may cause hazards.
- Always use on a dry and level surface. Only use it hanging from a ceiling.
- **Warning:** To reduce the risk of fire or electric shock, do **not** use this device with any solid-state speed control device.
- Do not attempt to repair or adjust any electrical or mechanical functions on this device. Doing so will void your warranty. The inside of the device contains parts which are not serviceable by the user. Only qualified technicians should carry out all servicing works.
- Only connect the device to properly earthed outlets. These devices must be supplied with the correct voltage and frequency (220–240 V, 50 Hz, AC) and connected to a single, properly earthed branch circuit protected by a circuit breaker that must be attached to the chain according to the wiring rules. The power cord of this device must be fastened with the chain, the installation can only be carried out by a qualified person in order to avoid a hazard.


Technical specifications

Tension (V)	220–240
Frequency (Hz)	50
Power consumption (W)	500/1000/1500
Size (mm)	545 (∅) × 350 (H)
Weight (kg)	2.3

Remote control and names of parts

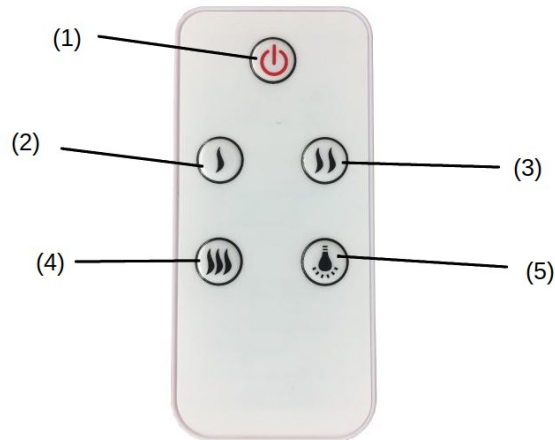

No	Name	No	Name
1	On/off switch	4	Level 3
2	Level 1	5	LED lamp
3	Level 2		

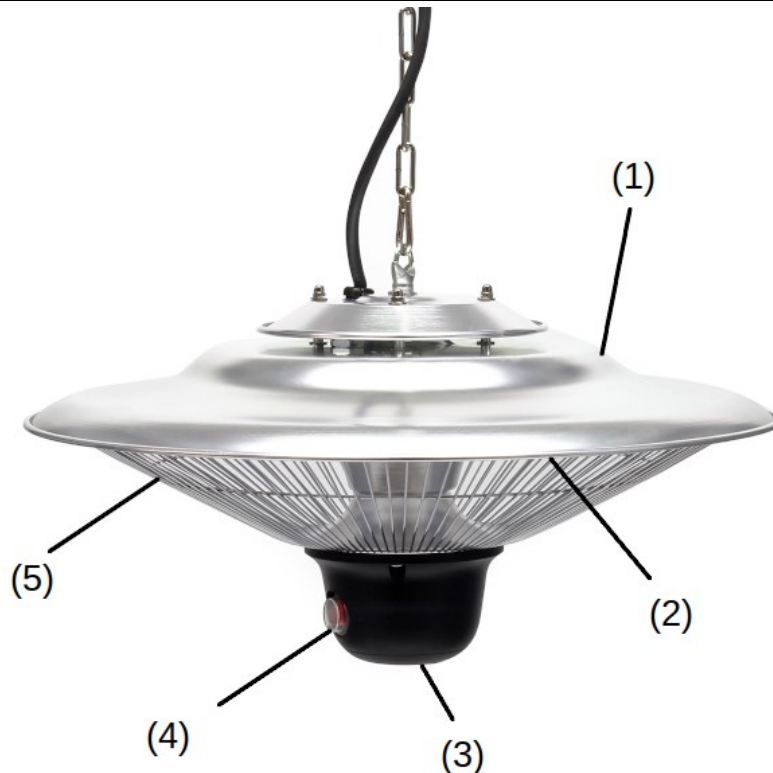

No	Name	No	Name
1	Cover	4	Switch
2	Heating element	5	Grid
3	LED lamp		



Mounting and operation instructions

- Hang the heater from a firm and level ceiling.
- The hook hanging from the ceiling holding the heater must be able to securely hold a weight 3 or 4 times that of the heater itself.
- Hang the heater hook on the ceiling hook and place a ring of the heater chain onto the ceiling hook at the required height.
- The distance between the bottom of the heater to the floor must be over 1.8 m and the distance between the top of the heater and ceiling must be at least 30 cm.
- Only operate the heater when it is in an upright position. The heater has three heating levels (500 W, 1000 W or 1500 W) that can be set via the buttons.
- The device can be switched on or off via the on/off switch of the remote control or the switch of the device.
- For additional lighting, the built-in LED light can be switched on using the remote control as required.

Maintenance

Switch off the device before performing any reparation or maintenance work; let the device completely cool down.

- To keep the heater clean, the outer cover can be cleaned with a soft, damp cloth. You can use a mild detergent if necessary. Dry with a soft cloth after cleaning.
- Do not use alcohol, gasoline, abrasive powder, furniture polish, or rough brushes to clean the heater. This can lead to damage or scratches on the surface of the heater.
- Although this heater is approved for use outdoors (on balconies and patios), for your own safety do not immerse it in water. Before use, wait until the device is completely dry.

Storage

If the heater will not be used for a longer period of time, store it in a cool, dry location when not in use. To prevent dust and dirt build-up, use the original packaging to repack the unit for storage.

Troubleshooting

If the heater will not operate, please check the following before thinking of repair or servicing work:

- check if the electricity to the main fuse is working;
- make sure that the power switches are turned on. If not, switch it on.

Disposal regulations

EU guidelines regarding the disposal of scrap electric appliances (WEEE, 2012/19/EU) were implemented in the law related to electrical and electronic equipment and appliances.

All WiITec electric devices that fall under the WEEE regulations are labelled with the crossed-out wheeled waste bin logo. This logo indicates that this electric equipment must not be disposed with the domestic waste.

The company WiITec Technik GmbH has been registered in the German registry EAR under the WEEE-registration number DE45283704.

Disposal of used electrical and electronic appliances (intended for use in the countries of the European Union and other European countries with a separate collection system for these appliances).

The logo on the article or on its packaging points out that this article must not be treated as normal household waste but must be disposed to a recycling collection point for electronic and electrical waste equipment. By contributing to the correct disposal of this article you protect the environment and the health of your fellow men. Environment and health are threatened by inappropriate disposal.



Material recycling helps reduce the consumption of raw materials.

Additional information on recycling this article can be provided by your local community, municipal waste disposal facilities or the store where you purchased the article.

Address:
WiITec Wildanger Technik GmbH
Königsbenden 12 / 28
D-52249 Eschweiler

Important notice:

The reprint or reproduction, even of excerpts, and any commercial use, even in part, of this instruction manual require the written permission of WiITec Wildanger Technik GmbH.