

Go-kart for Hoverboard 61214-61217

toboli



Illustration similar, may vary depending on model

Please read and follow the operating instructions and safety information prior to initial operation.

Technical changes reserved!

Illustrations, functional steps, and technical data may deviate insignificantly due to continuous further developments.





The information contained in this document may alter at any time without prior notice. No part of this document may be copied or otherwise duplicated without prior written consent. All rights reserved. WilTec Wildanger Technik GmbH cannot be held liable for any possible mistakes in this operating man-

ual, nor in the diagrams and illustrations shown. Although WilTec Wildanger Technik GmbH has made every possible effort to ensure that this operating manual is complete, accurate, and up-to-date, errors cannot be ruled out entirely.

If you have found an error or wish to suggest an improvement, we look forward to hearing from you. Send us an e-mail to:

service@wiltec.info

or use our contact form:

https://www.wiltec.de/contacts/

The most recent version of this manual in several languages can be found in our online shop:

https://www.wiltec.de/docsearch

Our postal address is:

WilTec Wildanger Technik GmbH Königsbenden 12 52249 Eschweiler Germany

Do you wish to collect your goods? Our address for collection is:

WilTec Wildanger Technik GmbH Königsbenden 28 52249 Eschweiler Germany

In order to shorten the waiting time and to allow for an easy on-site processing, we kindly ask you to contact us briefly beforehand or to place your order via the webshop.

E-mail: service@wiltec.info Phone: +49 2403 55592–0 Fax: +49 2403 55592–15

To return your goods for exchange, repair, or other purposes, please use the following address. Attention! To allow for a trouble-free complaint or return, it is important to contact our customer service team before returning your goods.

Retourenabteilung WilTec Wildanger Technik GmbH Königsbenden 28 52249 Eschweiler Germany

E-mail: **service@wiltec.info** Phone: +49 2403 55592–0 Fax: (+49 2403 55592–15)





Introduction

Thank you for choosing to purchase this quality product. To minimise the risk of injury, we ask you to always take some basic safety precautions when using this product. Please read this operating manual carefully and make sure that you understand it.

Keep these operation instructions in a safe place.

General safety instructions

- Please read the instructions carefully before first use and keep them.
- Keep children and animals away from the packaging materials. Danger of suffocation!
- Make sure that all components, screws, and nuts are well fixed and that they are not loose.

• Check the wheels and bearings of the seat scooter (not included in the scope of delivery) for any damage. If necessary, replace them immediately.

- Be aware of the speed limit and comply with it.
- Misuse of the go-kart can endanger users and bystanders and result in serious injury or even death.
- Do not use the go-kart on steep slopes or uneven surfaces.
- Under no circumstances should adjustments or changes be made, as these may endanger the user's safety.
- The seat scooter may only be used in accordance with the operating instructions.
- Regularly check the go-kart for damage and wear. All parts worn or damaged should be replaced immediately.
- Do not use the seat scooter if it is damaged.
- Before using the device, it is recommended that you learn how to use the go-kart correctly; if unsure, contact an experienced person or obtain information on the Internet.
- **ATTENTION!** The go-kart must not be used on traffic routes, pavements, or other public places. Make sure that you do not violate any local regulations concerning the use of this type of accessory in public spaces. If you are not sure, contact the local authorities.
- The go-kart may only be used by one person at a time.
- Never use the go-kart in the dark or under poor visibility conditions.



- It is recommended to wear protective clothing (knee pads, elbow pads, and wrist pads) and a helmet, preferably with a neck guard.
- Use a hair net for long hair.
- The go-kart is only intended for private use and not for commercial use.
- Never allow small children to play with the go-kart. Use is recommended for children 6 years and older under supervision.
- The go-kart is not to be used by older people or pregnant women.
- Do not use the scooter under the influence of alcohol or medicine.
- Do not transport any loads with the go-kart.
- In a group of go-karts, keep a safe distance from other users to avoid collisions.
- Under no circumstances should you telephone or listen to music while riding the go-kart, as you could be distracted and have an accident.
- Make sure that you do not use the go-kart on slippery or wet surfaces. It should not be used on snowy or icy surfaces either.





IMPORTANT



Please always observe the Road Traffic Licensing Regulations of your country and all other valid legal regulations and requirements. A self-balancing, electric seat scooter does **NOT** have a General Operating Permit (ABE in Germany). This means that it <u>must</u> <u>not</u> be used on public roads.

Use is recommended for children from 6 years up to a weight of 120 kg. Never leave the child unattended and only use the go kart on a locked



private property. Respect the maximum recommended speed of 10 ${\rm km}/{\rm h}.$

Parts list



N⁰	Name	N⁰	Name
1	Washers (4×)	6	Quick clamp/knob (1×)
2	Screw M8×20 mm (4×)	7	Spanner (1×)
3	Flange nut M8 (4×)	8	Allen key (1×)
4	Locking screw (2×)		Without illustration: lashing straps (2×)
5	Spanner (1×)		


Assembly

To assemble the go-kart correctly, please proceed as follows:

- 1. Open the packaging, remove all parts and check for completeness.
- 2. Place the seat on the frame and fix it with the four M8×20 mm screws (2) and the matching M8 flange nuts (3). Use the Allen key (8) to tighten the bolts and the spanner (5) for the nuts.
- 3. To fix the control levers, please use the locking screws (4) and the spanner (7).





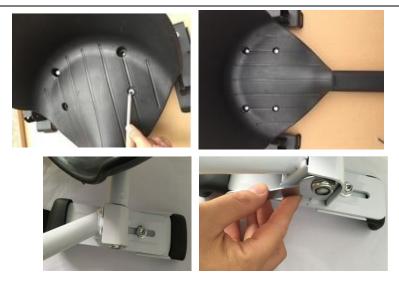

4. Adjust to the desired length (comfortable and safe sitting position) and secure the tube with the spanner/knob **(6)**.





5. Adjust the seat scooter mount to the size of your board and secure the setting with the screws. Use the spanner (5) for this. Now fix the board with the supplied fabric straps with Velcro. Make sure that the go-kart is held firmly in place. Only use the kart with your board if it can be mounted appropriately.









Main components





N⁰	Name	N⁰	Name
1	Handlebar grip	5	Quick clamp/knob
2	Seat shell (the kart may only be used if the seat shell is in perfect condition)	6	Steering base rod
3	Universal holder for go-kart	7	Front frame with foot holder
4	Rear frame with seat support	8	Front wheel

Make sure that all brackets and attachments are in perfect condition. Do not use the scooter if it is defective. Only use suitable spare parts. Contact the manufacturer or your salesperson for the appropriate information.





Drive off

Before each ride, please check that all screws are tight and that there is no damage to the cart. Do not switch on the board until you are safely seated on the cart.

<i>Brake:</i> Keep both levers in a horizontal position. <i>Reverse:</i> Pull both levers up to move backwards. Pay attention to your surround- ings.
<i>Forwards:</i> Press the levers down evenly to move forward.
<i>Turn left:</i> Push the left lever down and pull the right lever up.
<i>Turn right:</i> Push the right lever down and pull the left lever up.

- Always pay attention to your surroundings while driving and drive at an appropriate speed. Never exceed the recommended maximum speed of 10 km/h. Avoid any sudden steering movements. Always try to operate the steering smoothly and evenly. Always be ready to brake.
- Please do not ride continuously at the maximum speed of the hoverboard. Do not ride on slippery, wet, or frozen surfaces. Avoid steeply sloping terrain and slopes. Always ride carefully and smoothly on curves. You could lose your balance and injure yourself on sharp bends.
- Only use the scooter on flat surfaces, avoid holes, grooves, and kerbs. Do not drive over loose materials, e.g., branches, stones, grass, or sand.
- Only use the go-kart with a suitable hoverboard. Before use, make sure you have understood the instructions for the scooter. Check that the go-kart meets the general safety requirements before assembling it.

Cleaning and storing

- Only clean the go-kart with a damp cloth and, if necessary, with a mild cleaning agent.
- Store the go kart in a dry place.

Important Note:

Reproduction and any commercial use (of parts) of this operating manual, requires a written permission of WilTec Wildanger Technik GmbH.