

Operation Manual

Electric Double Cooking Plate

61233

toboli



Illustration similar, may vary depending on model

Read and follow the operating instructions and safety information before using for the first time.

Technical changes reserved!

Due to further developments, illustrations, functioning steps, and technical data can differ insignificantly.

Updating the documentation

If you have suggestions for improvement or have found any irregularities, please contact us.



The information contained in this document may alter at any time without previous notice. It is prohibited to copy or spread any parts of this document in any way without prior written allowance. All rights reserved.

The WilTec Wildanger Technik GmbH cannot be held accountable for any possible mistakes in this operating manual, nor in the diagrams and figures shown.

Even though, the WilTec Wildanger Technik GmbH has undergone biggest possible efforts to ensure that the operating manual is complete, faultless, and up to date, mistakes cannot be entirely avoided.

If you should find a mistake or wish to make a suggestion for improvement, we look forward to hearing from you.

Send an e-mail to:

service@wiltec.info

or use our contact form:

<https://www.wiltec.de/contacts/>

The most recent version of this manual in various languages can be found in our online shop via:

<https://www.wiltec.de/docsearch>

Our postal address is:

WilTec Wildanger Technik GmbH
Königsbenden 12
52249 Eschweiler
Germany

To return orders for exchange, repair, or other purposes, please use the following address. Attention! To allow for a smooth execution of your complaint or return, it is important to contact our customer service team before returning the goods.

Returns Department
WilTec Wildanger Technik GmbH
Königsbenden 28
52249 Eschweiler

E-mail: **service@wiltec.info**

Tel: +49 2403 55592-0

Fax: +49 2403 55592-15

Introduction

Thank you for purchasing this quality product. **To minimise the risk of injury we urge that our clients take some basic safety precautions when using this device. Please read the operation instructions carefully and make sure you have understood its content.**

Keep these operation instructions safe.

Before starting: Before using the electric cooker, carefully read the operating manual below, as this will help with a trouble-free usage of the unit. Wrong use and careless handling might cause the unit to malfunction and lead to injuries. In this case, the manufacturer assumes no responsibility for the warranty or injuries caused by improper use or failure to follow the instructions.

Technical data

Dimensions (cm)	Total size	46 × 26.5 × 7
	Plate size	∅ 15.5
Input voltage (V)		230
Input frequency (Hz)		50
Power consumption (W)		2000
Cable length (m)		1
Weight (kg)		2.9

Safety Instructions

- The unit is only for use at home and is not to be used in restaurants or for industrial use.
- Only use the cooking plates in enclosed spaces.
- Never immerse the unit in water.
- Do not use the unit if the cable is damaged or if one of the cooking plates has a crack.
- Avoid the cable from getting into contact with the cooking plates.
- Only use the cooking plate on a firm and horizontal surface. Avoid using it on a flammable base (such as covers, plastic materials, etc.).
- Children do not know the dangers that may occur when using electric equipment. Keep children out of the reach of this product
- Put this user manual in a safe place.
- This equipment being passed to a third party, hand over the operating manual as well.
- This appliance can only be used by children aged 8 years and above. Children and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge may only use the devise if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the possible hazards involved.
- Children should be supervised to ensure that they do not play with the appliance.
- Keep the appliance and its cable out of reach of children younger than 8 years.
- The temperature of surrounding surfaces may be high when the appliance is in operation.
- The appliances are not intended to be operated by means of an external timer or separate remote-control system.
- If the supply cord is damaged, it must be replaced by a qualified technician to avoid any hazards.



This symbol means that surfaces will get hot during use.

Note: Please do not touch the cooker during operation to avoid burns! Please unplug the cooker before washing it!

Circuit diagram

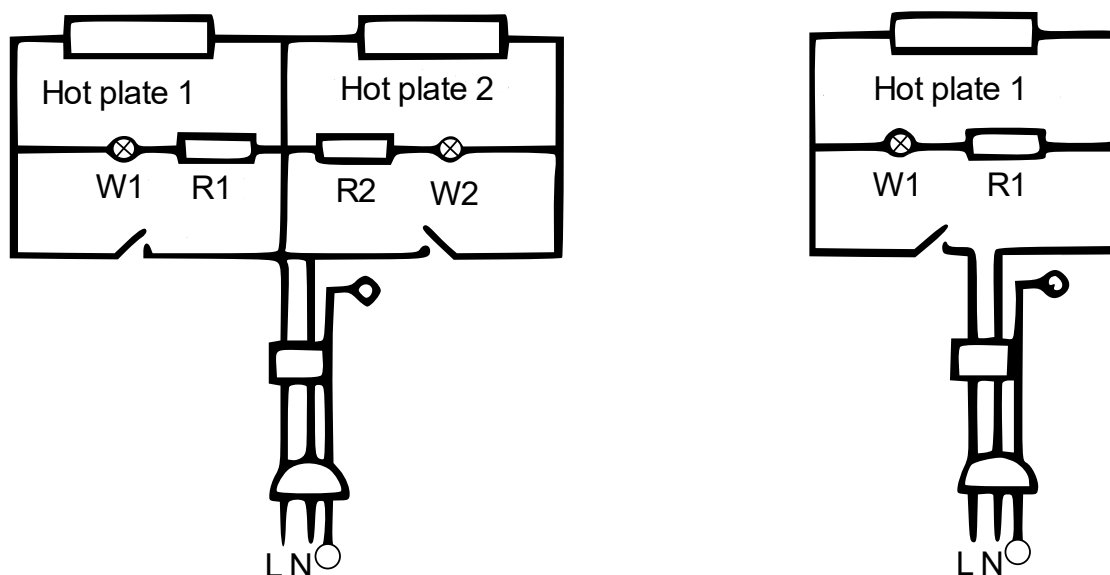 


Figure 1

Using the product

- The cooker should be connected to 220–240 V or a main circuit (like shown on the product) that is conform with the official regulations.
- The cooking plates have been equipped with a 6-step switch. The digits on the rotary controls show the heating options:

Step	for ...
OFF	Switching off the cooking plate
1	Simmering delicate foods and thickening sauces, etc.
2	Slow cooking
3	Simmering large quantities
4	Slightly frying meat and pan dishes
5	Rapidly heating all sorts of dishes

Note: The LED light will go out when the heating plate reaches the selected temperature and will go on and out in cycles which shows that the temperature is maintained. These indications are only approximate. The individual switch steps may vary for different pots and pans and also depending on the meals being cooked.

Notes before the first use

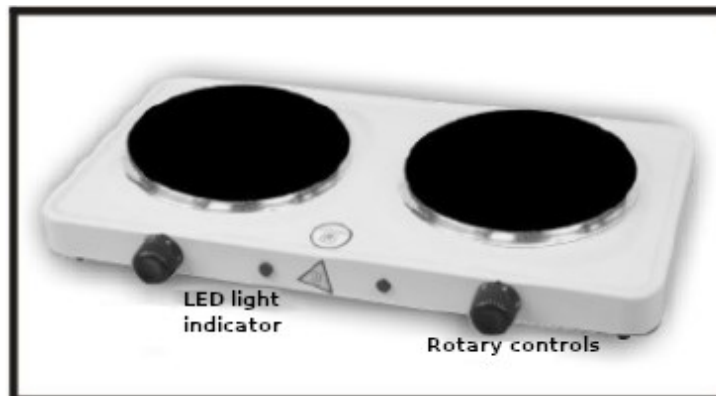 


Figure 2

 
Only use suitable pots and pans. Pots and pans should have flat bottoms in order to transfer heat steadily and to obtain the exact specifications indicated for the temperature controls. The dimension of the pan and the plate should be identical.

This is the right pan. It has a flat bottom and absorbs the heat of the cooking plate very well.

This pan is too small and does not cover the edges, resulting in heat loss.

This pan is too large.

This pan is not suitable. The transfer of heat between the cooking plate and pan is inefficient.

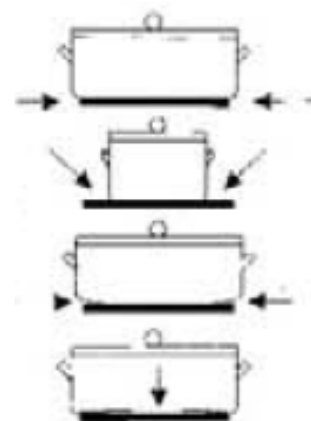

Operating the heating plates

- The lid put on the pot or pan should fit tightly so that no steam can escape. The cooking plate is equipped with a thermostat, which prevents overheating. You should nevertheless always switch the unit off after using it.
- Switch the unit off or to a lower level early enough to save energy. The cooking plate still will emit intensive heat for a few minutes, which can be used to complete the cooking process. Yet the remaining cooking time should be **less than 1 hour**.

Disposal regulations

EU guidelines regarding the disposal of scrap electric appliances (WEEE, 2012/19/EU) were implemented in the law related to electrical and electronic equipment and appliances.

All WiTec electric devices that fall under the WEEE regulations are labelled with the crossed-out wheeled waste bin logo. This logo indicates that this electric equipment must not be disposed with the domestic waste.

The company WiTec Technik GmbH has been registered in the German registry EAR under the WEEE-registration number DE45283704.

Disposal of used electrical and electronic appliances (intended for use in the countries of the European Union and other European countries with a separate collection system for these appliances).

The logo on the article or on its packaging points out that this article must not be treated as normal household waste but must be disposed to a recycling collection point for electronic and electrical waste equipment. By contributing to the correct disposal of this article you protect the environment and the health of your fellow men. Environment and health are threatened by inappropriate disposal.



Material recycling helps reduce the consumption of raw materials.

Additional information on recycling this article can be provided by your local community, municipal waste disposal facilities, or the store where you purchased the article.

Address:
WiTec Wildanger Technik GmbH
Königsbenden 12 / 28
D-52249 Eschweiler

Important notice:

The reprint or reproduction, even of excerpts, and any commercial use, even in part, of this instruction manual require the written permission of WiTec Wildanger Technik GmbH.