

Operation Manual

Electric Weed Burner

61286



Illustration similar, may vary depending on model

Read and follow the operating instructions and safety information before using for the first time.

Technical changes reserved!

Due to further developments, illustrations, functioning steps and technical data can differ insignificantly.

Updating the documentation

If you have suggestions for improvement or have found any irregularities, please contact us.

The information contained in this document may alter at any time without previous notice. It is prohibited to copy or spread any parts of this document in any way without prior written allowance. All rights reserved.

The WilTec Wildanger Technik GmbH cannot be held accountable for any possible mistakes in this operating manual, nor in the diagrams and figures shown.

Even though, the WilTec Wildanger Technik GmbH has undergone biggest possible efforts to ensure that the operating manual is complete, faultless and up to date, mistakes cannot be entirely avoided.

If you should find a mistake or wish to make a suggestion for improvement, we look forward to hearing from you.

Send an e-mail to:

service@wiltec.info

or use our contact form:

<https://www.wiltec.de/contacts/>

The most recent version of this manual in various languages can be found in our online shop via:

<https://www.wiltec.de/docsearch>

Our postal address is:

WilTec Wildanger Technik GmbH
Königsbenden 12
52249 Eschweiler
Germany

Do you wish to pick goods up? Our pick-up address is:

WilTec Wildanger Technik GmbH
Königsbenden 28
52249 Eschweiler
Germany

To shorten the waiting time and allow for a rapid on-site transaction, we ask you to call us previously or placing your order via the webshop.

E-mail: service@wiltec.info
Tel: +49 2403 55592-0
Fax: +49 2403 55592-15

To return orders for exchange, repair or for other purposes, please use the following address. Attention! To allow for a smooth execution of your complaint or return, it is important to contact our customer service team before returning the goods.

Returns Department
WilTec Wildanger Technik GmbH
Königsbenden 28
52249 Eschweiler

E-mail: service@wiltec.info
Tel: +49 2403 55592-0
Fax: +49 2403 55592-15

Introduction

Thank you for purchasing this quality product. **To minimize the risk of injury we urge that our clients take some basic safety precautions when using this device. Please read the operation instructions carefully and make sure you have understood its content.**

Keep these operation instructions safe.

Symbols



Universal warning sign



Burn hazard due to hot surfaces! Do not touch!



Do not expose to rain or moisture!



Read the manual before using the device!



Class II device

Intended use

This device complies with the recognized rules of technology and the relevant safety regulations and has been designed for private use. It is suited for the removal of weeds between paving stones, in brickwork and beets located in yards and gardens as well as the ignition of charcoal in barbecue grills (please refer to the instructions and information provided by the respective manufacturer of the barbecue grill). Abiding by the instructions and information found inside this manual is essential for the safe and correct use of this device. **Improper use or modification of this electric weed burner can damage the device as well as its surrounding area and can further lead to severe injuries and even death, for which the manufacturer cannot be held responsible.**

Safety instructions

- Thoroughly read and understand the instructions and information provided in this manual. Keep the manual in order to avoid risks and dangers of injury due to incorrect use.
- Only use this device for the intended purposes stated in this manual. It is neither suited to be used as heating source inside houses or any other enclosed space, nor in order to melt ice or snow, and must not be abused in any way.



- Do not use this product in moist environments.
- Do not modify the device in any way.
- Only specially trained persons are allowed to perform repairs and maintenance on this device.
- This device can only be used by individuals with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have received instructions concerning the use of the device from and are being supervised by a person familiar with the product and responsible for their health and safety. Children should be supervised at all times in order to ensure that they do not play with the device.
- Do not use this device if you are tired or under the influence of alcohol, drugs or medication.
- Children are not allowed to clean the device unless they are being supervised by a person familiar with the product and responsible for their safety.
- It is recommended to wear protective, electrically non-conductive clothes as well as safety gloves and non-slip footwear equipped with steel toe caps. Long hair should be tied up or kept out of the way with a hairnet or similar item.
- Do not leave the device unattended.
- Teenagers under the age of 16 and individuals unfamiliar with the instruction manual are not allowed to operate the device.
- Only use original or qualitatively equal spare parts and equipment authorised by the manufacturer.
- Do not use the device if it is visibly damaged, and do not attach broken or run-down parts or equipment.
- The line voltage has to conform to the voltage information depicted on the type label. Only connect the device to secure wall outlets with an alternating current.
- Only use earthed extension cables suitable for outdoor use, with a wire size of min. 1.0 mm².
- The installation of a residual-current operated protective device with a rated sensitivity current of max. 30 mA grants additional security in your household. Contact your electrician for further information.
- Always make sure to disconnect the device from the power supply if it is not in use or before performing repair and maintenance work. Further make sure to immediately unplug the device in case of errors.
- The device must not be exposed to water or moisture. Do not submerge it in water, clean it with water or touch it with wet hands, as this might lead to severe injuries and even electrocution. If the device should be submerged while being connected to the mains supply, immediately disconnect it and do not touch the water while the device is still connected.
- Parts of the device heat up immensely during usage and touching them can lead to severe burns. Therefore make sure not to touch the heat shield, heating element or conical nozzle while using the device or before the same had time to cool down again.
- Never direct the device at people and animals. Neither direct the device at pressurised objects (e.g., gas bottles), as this might lead to explosions and in turn to severe injuries and even death.
- Be aware of fire hazard due to the possibility of flying sparks.
- Only use the device outside. Never use it inside garages or other in environments that might contain highly combustible substances, such as gas, petrol or other materials.
- Do not smoke while working with the device, and keep it away from other heat sources and other sources of ignition.
- Make sure to always keep the device out of reach of children.
- Protect the device from frost and intensive solar radiation.
- Always be aware that dry foliage, fir needles and grasses may catch fire! Therefore make sure to observe the plants after they have been treated. Ignition may still happen several minutes after the treatment has been completed.
- In case of fire always prioritise the safety of the people in the area including yourself. Only try to fight fires with the help of an extinguisher, if there is no danger of you getting trapped or being injured by the flames.
- Make sure not to strain the device and take appropriate breaks. The device should not be directed at the same point for too long. Allow the device to cool down for approximately 10 s after every 30 s of use in order to prevent the item from overheating.
- Be aware that heat can be transferred and ignite items in the nearby area that are not directly affected by the device.

- Always use the insulated grip surfaces in order to carry the device and only transport it if it has cooled down entirely.
- Neither pull at the power cable, nor use it to hold or carry the device.
- Always make sure that the power cord is not bent, trapped or rubbing against sharp edges.
- The device must not be used in case of the power cable being damaged. Do not try to perform repairs by yourself and instead have a professional tend to the device and replace the power cord with a new, undamaged one.

Scope of delivery


- 1× device with demounted tube
- 1× housing
- 2× screw
- 1× support stand
- 1× operating manual

Parts list

No	Name	No	Name
A	Ergonomic handle	E	Housing with heating element and fan
B	Power cord	F	Heating element
C	Power switch	G	Heat shield
D	Air intake opening	H	Conical nozzle

Technical data

Model	GW9004 / LG-GW-2000A
Tension (V)	230
Frequency (Hz)	50
Power output (W)	2000

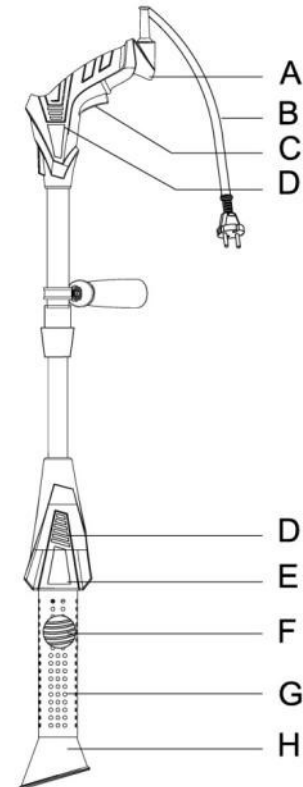

Application

- Before using the device, always make sure that the air intake openings as well as the air outlet located on the conical nozzle are neither clogged nor covered.
- Direct the nozzle of the device at the weed you wish to remove. Be aware that the effect that the heat has on the plants will not be visible immediately. Plants with soft leaves generally react most sensitively to heat and only require a single treatment in order to be dealt with while older plants and plants with harder leaves such as thistles require multiple treatments in intervals of one to two weeks.
- In order to succeed in permanently removing weeds, the treatment has to be more intense in the beginning and requires repetition. Once the decline has become noticeable, the intervals in between treatments can be increased.
- Be aware that it is not necessary to burn the weeds; simple heating is already enough to dry the leaves and thereby make sure the weeds are not viable any longer.

Maintenance

Turn the device off, ensure that it is not connected to the power supply, and wait until all parts have cooled down entirely before performing any kind of cleaning, repair or maintenance work. Repairs and in-depth maintenance should only be performed by professionally trained people. We advise the use of a dry piece of cloth or a brush for cleaning purposes.

Disposal regulations

EU guidelines regarding the disposal of scrap electric appliances (WEEE, 2012/19/EU) were implemented in the law related to electrical and electronic equipment and appliances.

All WiITec electric devices that fall under the WEEE regulations are labelled with the crossed-out wheeled waste bin logo. This logo indicates that this electric equipment must not be disposed with the domestic waste.

The company WiITec Technik GmbH has been registered in the German registry EAR under the WEEE-registration number DE45283704.

Disposal of used electrical and electronic appliances (intended for use in the countries of the European Union and other European countries with a separate collection system for these appliances).

The logo on the article or on its packaging points out that this article must not be treated as normal household waste but must be disposed to a recycling collection point for electronic and electrical waste equipment. By contributing to the correct disposal of this article you protect the environment and the health of your fellow men. Environment and health are threatened by inappropriate disposal.



Material recycling helps reduce the consumption of raw materials.

Additional information on recycling this article can be provided by your local community, municipal waste disposal facilities or the store where you purchased the article.

Address:
WiITec Wildanger Technik GmbH
Königsbenden 12 / 28
D-52249 Eschweiler

Important notice:

The reprint or reproduction, even of excerpts, and any commercial use, even in part, of this instruction manual require the written permission of WiITec Wildanger Technik GmbH.