Instruction Manual

Gas Burner/Flaming Device





Illustration similar, may vary depending on model

Please read and follow the operating instructions and safety information prior to initial operation.

Technical changes reserved!

Illustrations, functional steps, and technical data may deviate insignificantly due to continuous further developments.





The information contained in this document may alter at any time without prior notice. No part of this document may be copied or otherwise duplicated without prior written consent. All rights reserved. WilTec Wildanger Technik GmbH cannot be held liable for any possible mistakes in this operating manual, nor in the diagrams and illustrations shown.

Although WilTec Wildanger Technik GmbH has made every possible effort to ensure that this operating manual is complete, accurate, and up-to-date, errors cannot be ruled out entirely.

If you have found an error or wish to suggest an improvement, we look forward to hearing from you. Send us an e-mail to:

service@wiltec.info

or use our contact form:

https://www.wiltec.de/contacts/

The most recent version of this manual in several languages can be found in our online shop:

https://www.wiltec.de/docsearch

Our postal address is:

WilTec Wildanger Technik GmbH Königsbenden 12 52249 Eschweiler Germany

To return your goods for exchange, repair, or other purposes, please use the following address. Attention! To allow for a trouble-free complaint or return, it is important to contact our customer service team before returning your goods.

Retourenabteilung WilTec Wildanger Technik GmbH Königsbenden 28 52249 Eschweiler Germany

E-mail: **service@wiltec.info** Phone: +49 2403 55592-0 Fax: (+49 2403 55592-15)





Introduction

Thank you for choosing to purchase this quality product. To minimise the risk of injury, we ask you to always take some basic safety precautions when using this product. Please read this operating manual carefully and make sure that you understand it.

Keep these operation instructions in a safe place.

Use

Gas burners are suited for destroying pest plants. They are especially used for unwanted weeds to be removed from interstices of flagstones on drives, pavements, and terraces. This is a fast and effective alternative to manual weeding and a good choice to avoid using chemical herbicides; thus, environment is also treated with care. Many chemical products like well-known household remedies salt and vinegar are banned by law because of their polluting effects.

Safety instructions

- Before use, read the manual. Make sure to have understood all notes and instructions and to be able to obey all safety warnings of this manual.
- Do not use the device near open flames or sparks. While using the gas burner, do not smoke or use other devices. Other devices might generate flames or sparks that might cause a fire or an explosion.
- The device may only be used outdoors. It is not suitable for indoor use.
- Neither store nor use petrol or other flammable liquids or vapours near devices operated by propane gas.
- Remove all debris (e.g., leaves or twigs) from surfaces before using the gas burner. They might catch fire and are therefore dangerous.
- Wear appropriate protection equipment when using the burner (e.g., flame-retarding gloves, protective goggles, etc.).
- Watch your feet while using the gas burner. Wear sturdy and closed shoes.
- Make sure that no children or animals are in the work area.
- Avoid using the gas burner in immediate vicinity of flammable objects and plants (keep a min. safety distance of 50 cm). Hedges, fences, shed, and other elements could catch fire and be damaged. Fire hazard!
- It is recommended to keep a suitable extinguishing agent at hand before beginning to work (e.g., a fire extinguisher, water bucket, or garden hose).
- Make sure that the hose and valves are securely screwed together.
- After use, make sure that the gas knob is completely closed.
- Never modify the flaming device or compressed gas cylinder.
- Attention! Certain parts of the flaming device can become very hot. Keep it away from children and avoid touching the parts heated. Burning hazard!
- Never put down the flaming device during use and never leave it unattended. Make sure that the device is completely cooled down before putting it on or near flammable material.
- Be careful not to twist the hose and avoid any overheating. Should the hose be damaged, it must immediately be replaced.






- Only use the device at an angle below 90°.
- Do not use the device during rain, wind, or other influences that complicate its use. Should the gas flame be extinguished by wind, immediately close the gas knob.
- Should you not manage to ignite the flame several times, close the valve and wait for the gas escaped to have dissipated before you re-try to ignite the flame.
- Should gas leak from the cylinder, this must immediately be brought to a well-ventilated place free from sources of ignition. Make sure that all valves are closed.
 - **Note!** One can recognise escaping gas by the typical gas smell. The odorous substance added to the propane gas is similar to the smell of rotten eggs.
 - Warning! Risk to your health due to gas contact! Escaping gas that is not ignited might cause limited injuries when being inhaled or absorbed through the skin. Consult a doctor if symptoms develop or if you have doubts.
- Only qualified persons should perform repair works. Otherwise, there is a risk of gas leaks and other risks.
- Store the flaming device and the gas cylinder in a safe place and out of children's reach. Make sure that no gas escapes from cylinders. Do not store any flammable material, e.g., cardboard, paper, or chipped wood, in the immediate vicinity of the flaming device. Make sure that the room is well ventilated and protected from sunlight.





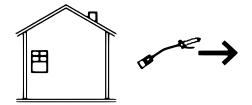


Attention! This burner may only be used with HD 5 propane gas. The propane gas tank should not contain more than 20 pounds LP gas. Do not use bulk containers with bigger capacities. Do not use any other fuel.

Important! To safely connect the burner to a current gas cylinder, you must **always** use a <u>pressure</u> reducer that is not included in delivery.





Main parts

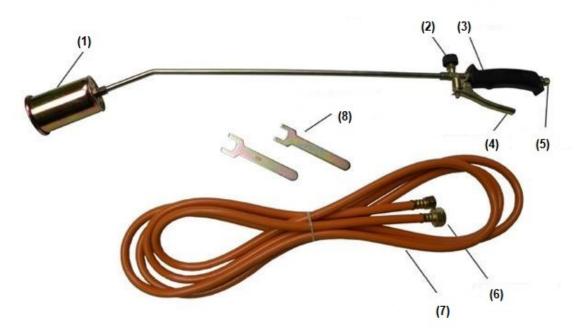

| Nº | Name | Nº | Name |
|----|----------|----|---------------------|
| 1 | Burner | 5 | Handle connection |
| 2 | Gas knob | 6 | Cylinder connection |
| 3 | Handle | 7 | Hose |
| 4 | Trigger | 8 | Wrench |

Assembly

- 1. Screw the burner and extension tube together. Tighten the connection with the wrench.
- 2. Connect the flexible hose connection with the handle and the other hose connection with the pressure reducer.
- 3. After connecting the gas cylinder, make sure that its valve is closed.
- 4. Make sure that all gaskets are present and undamaged. Replace them if necessary.
- 5. Connect the device to the gas cylinder with the help of the valve and tighten the pressure reducer nut with the wrench.
- 6. Before use, re-check all gaskets.

Operation

- 1. Open the valve head of the gas cylinder.
- 2. Slightly turn the gas knob at the handle counter-clockwise.
- 3. Immediately ignite the gas next to the burner with a match or lighter.
 Attention! Should you not manage to ignite the flame several times, close the valve and wait for the gas escaped to have dissipated before you re-try to ignite the flame.
- 4. Regulate the burning power with the help of the trigger.
- 5. If you wish to extinguish the flame, close the gas cylinder valve and wait for to flame to go out. After that, close the gas knob at the handle.
 - **Attention!** Never operate the device if gaskets are damaged or missing. Only check gaskets outdoors and with the help of leak spray or soapy water. Never search leaks with a flame.





Disassembly

- 1. Make sure that the gas cylinder valve is closed.
- 2. Close the gas knob at the handle.
- 3. Untighten the nut with the help of the wrench and disconnect the device from the gas cylinder.

Technical specifications

| | Total length (mm) | 850 |
|------------------------|-------------------------|--------|
| | Nozzle size (mm) | 60 |
| Dimensions | Hose length (m) | 5 |
| | Diameter of burner (mm) | 60 |
| | Length of lance (cm) | 86 |
| Weight (kg) | | 1.95 |
| Temperature range (°C) | | < 2000 |

Important Note:

Reproduction and any commercial use (of parts) of this operating manual, requires a written permission of WilTec Wildanger Technik GmbH.