

Operation Manual

File Shredder

61894



Illustration similar, may vary depending on model

Read and follow the operating instructions and safety information before using for the first time.

Technical changes reserved!

Due to further developments, illustrations, functioning steps, and technical data can differ insignificantly.

Updating the documentation

If you have suggestions for improvement or have found any irregularities, please contact us.



The information contained in this document may alter at any time without previous notice. It is prohibited to copy or spread any parts of this document in any way without prior written allowance. All rights reserved.

The WilTec Wildanger Technik GmbH cannot be held accountable for any possible mistakes in this operating manual, nor in the diagrams and figures shown.

Even though, the WilTec Wildanger Technik GmbH has undergone biggest possible efforts to ensure that the operating manual is complete, faultless, and up to date, mistakes cannot be entirely avoided.

If you should find a mistake or wish to make a suggestion for improvement, we look forward to hearing from you.

Send an e-mail to:

service@wiltec.info

or use our contact form:

<https://www.wiltec.de/contacts/>

The most recent version of this manual in various languages can be found in our online shop via:

<https://www.wiltec.de/docsearch>

Our postal address is:

WilTec Wildanger Technik GmbH
Königsbenden 12
52249 Eschweiler
Germany

To return orders for exchange, repair, or other purposes, please use the following address. Attention! To allow for a smooth execution of your complaint or return, it is important to contact our customer service team before returning the goods.

Returns Department
WilTec Wildanger Technik GmbH
Königsbenden 28
52249 Eschweiler

E-mail: **service@wiltec.info**

Tel: +49 2403 55592-0

Fax: +49 2403 55592-15



Introduction

Thank you for purchasing this quality product. **To minimise the risk of injury we urge that our clients take some basic safety precautions when using this device. Please read the operation instructions carefully and make sure you have understood its content.**

Keep these operation instructions safe.

Safety instructions

Your safety and the safety of others is important to us. Please follow all safety instructions and warnings outlined in this manual, on the product and product packaging. **Please read this manual in its entirety before attempting to operate the shredder.**

- **Keep children and pets away from the shredder. Serious injury could occur.**
- Read all instructions before use. Save these instructions for future reference.
- Never insert your hand or fingers into the shredder feed opening. Serious injury could occur.
- This shredder is intended to shred paper, CDs/DVDs, credit card, and staples only. Do not shred paper clips or other hard materials. Do not shred labels or envelopes. Doing so will damage the cutting system.
- Do not use for heavy or commercial use. Do not exceed the recommended shred capacity. Do not shred continuous forms. Do not operate for extended periods of time.
- The shredder should never be placed near or over a radiator, heat register or water.
- Always turn off and unplug the shredder prior to moving, cleaning, servicing, or any other action other than normal operation.
- The housing may be cleaned with a soft, damp cloth. Do not use solvents, degreaser or any other chemical to clean the shredder. Unplug before cleaning!
- Do not alter or deface the shredder or its housing in any way. Doing so could cause injury and/or void the warranty.
- Do not remove warning stickers/labels from the shredder.
- Do not rest any object on the power cord. Do not place shredder in an area where persons may walk on the power cord.
- If an extension cord is used, ensure that the total ampere ratings of the products plugged into the extension cord do not exceed the extension cord ampere rating. The total of all items plugged into the wall outlet must not exceed 15 A.
- Socket outlet should be installed near by the machine and should be easily accessible.
- The power cord serves as the disconnect function for the shredder. Please be sure the cord is always easily accessible. The power cord cannot be replaced. If the cord is damaged in any way, the shredder should be discarded immediately.
- Do not attempt to service the shredder yourself. Opening and/or removing covers could expose you to dangerous voltage points and/or other serious risks. This action will also void the shredder warranty.
- Use only approved shredder lubricant and cleaning products. Do not use common household cleaners, lubricants, or alcohol on or near the shredder. Do not use aerosols or any product marked flammable. Some agents may combust causing serious injury.
- Never use any type of compressed air or air dusters to clean the shredder housing, basket, feed entry or shredder head. This might lead to serious injuries. Do not use any product that is marked flammable.
- This shredder should only be operated with an operator in attendance.
- Empty the waste receptacle frequently for smooth, trouble-free operation.



Technical specifications


Model	TSC510 A
Paper entry (mm)	220
Sheet capacity (75 g/m²)	10
Cut type	Cross cut
Cut size (mm)	5×40
Security level	3
Shreds	Paper, CDs/DVDs, credit cards, staples
Max. run time (min)	2 min on (continuous operation) / 30 min off
Rated speed (r/min)	2
Noise level (dB)	72
Bin capacity (ℓ)	15
Basket	Lifted upwards
Automatic bin-full stop?	None
Size (mm)	340×170×390
Net weight (kg)	4



Warnings:

- Do not shred continuously for more than 2 min.
- Do not use solvents, cleaning degreasers or any other chemicals to clean the shredder.
- Only shred paper, CDs/DVDs, credit cards and staples.
- Do not exceed the shredder intake capacity.
- Avoid touching the document feed opening with hands or other body parts. Never insert hand or fingers into the opening.
- Always unplug the shredder before removing excess paper shreds/debris from the head or before performing any other action than normal shredding. Always unplug the shredder and make sure the main switch is in "off" position while not in use to prevent any possible accidents.
- Do not operate the unit with a power damaged power supply cord.
- Do not use compressed air or spray any liquid into the shredder. Doing so could be hazardous.
- Product is not intended for use by children (product is not a toy). Keep children and pets away from the shredder at any time.
- Avoid hair touching the document feed opening. Keep hair/face away from the opening!
- Keep aerosol products away from the shredder. Do not use flammable, petroleum-based or aerosol cleaners on or near this product. Some agents may combust causing serious injury.
- Avoid contact of your clothes with the feed opening. Keep personal and loose objects (jewellery, ties, etc.) away from the feed opening.

Operation

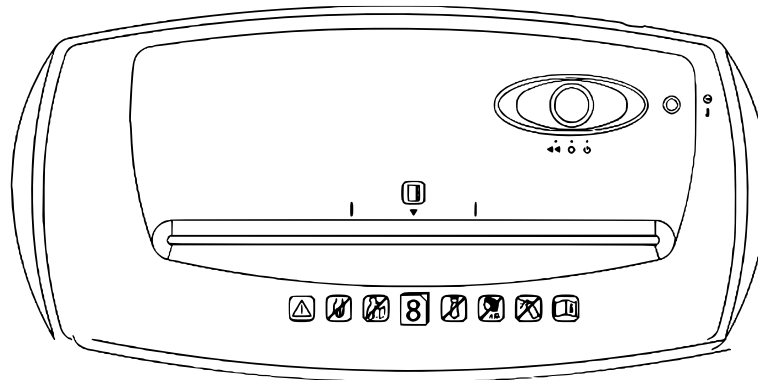

Shredding

- Plug the shredder into the electrical outlet.
- Slide the power switch into the auto position (to the right).
- To shred paper or credit card: insert straight into the intake throat.
- Empty the paper bin frequently to avoid jams.

For all safety purposes, always turn off the shredder when not in use.

Emptying paper bin

The shred level in the bin should be checked frequently to avoid jams and damaging to the cutter mechanism.

1. Slide the power switch into the off position and unplug the cord from the electrical outlet.
2. Lift the shredder head by the handles to remove from paper bin. Empty contents into the trash or recycle bin.
3. Securely place the shredder head back on the paper bin.
4. Plug the power cord back into the electrical outlet and slide the power switch into the auto position to resume normal operation.

Overheating

- The overheat indicator will turn red and the machine will shut off if the motor becomes too hot after shredding for more than 2 min.
- Let the shredder cool until the overheat indicator turns off (about 30 min).
- Turn the shredder off and on again and continue shredding as normal.

Clearing a jam

- The shredder will automatically stop when a jam occurs.
- To clear a jam:
 - Move the power switch to the reverse position (to the left).
 - Grasp the excess paper.
 - Pull paper out.
- Clearing a jam while in reverse
 - Move the power switch to the auto position.
 - Let the shredder run for about 5 s.
 - If the jam does not clear, move the power switch to the reverse position and run for five seconds. Repeat this procedure until the jam is cleared.
 - If the jam still does not clear, unplug the machine and remove paper manually.

Disposal regulations

EU guidelines regarding the disposal of scrap electric appliances (WEEE, 2012/19/EU) were implemented in the law related to electrical and electronic equipment and appliances.

All WiTec electric devices that fall under the WEEE regulations are labelled with the crossed-out wheeled waste bin logo. This logo indicates that this electric equipment must not be disposed with the domestic waste.

The company WiTec Technik GmbH has been registered in the German registry EAR under the WEEE-registration number DE45283704.

Disposal of used electrical and electronic appliances (intended for use in the countries of the European Union and other European countries with a separate collection system for these appliances).

The logo on the article or on its packaging points out that this article must not be treated as normal household waste but must be disposed to a recycling collection point for electronic and electrical waste equipment. By contributing to the correct disposal of this article you protect the environment and the health of your fellow men. Environment and health are threatened by inappropriate disposal.



Material recycling helps reduce the consumption of raw materials.

Additional information on recycling this article can be provided by your local community, municipal waste disposal facilities, or the store where you purchased the article.

Address:
WiTec Wildanger Technik GmbH
Königsbenden 12 / 28
D-52249 Eschweiler

Important notice:

The reprint or reproduction, even of excerpts, and any commercial use, even in part, of this instruction manual require the written permission of WiTec Wildanger Technik GmbH.