

Operation Manual

Ultrasonic Aroma Diffuser 61896



Illustration similar, may vary depending on model

Read and follow the operating instructions and safety information before using for the first time.

Technical changes reserved!

Due to further developments, illustrations, functioning steps, and technical data can differ insignificantly.

Updating the documentation

If you have suggestions for improvement or have found any irregularities, please contact us.



The information contained in this document may alter at any time without previous notice. It is prohibited to copy or spread any parts of this document in any way without prior written allowance. All rights reserved.

The WilTec Wildanger Technik GmbH cannot be held accountable for any possible mistakes in this operating manual, nor in the diagrams and figures shown.

Even though, the WilTec Wildanger Technik GmbH has undergone biggest possible efforts to ensure that the operating manual is complete, faultless, and up to date, mistakes cannot be entirely avoided.

If you should find a mistake or wish to make a suggestion for improvement, we look forward to hearing from you.

Send an e-mail to:

service@wiltec.info

or use our contact form:

<https://www.wiltec.de/contacts/>

The most recent version of this manual in various languages can be found in our online shop via:

<https://www.wiltec.de/docsearch>

Our postal address is:

WilTec Wildanger Technik GmbH
Königsbenden 12
52249 Eschweiler
Germany

To return orders for exchange, repair, or other purposes, please use the following address. Attention! To allow for a smooth execution of your complaint or return, it is important to contact our customer service team before returning the goods.

Returns Department
WilTec Wildanger Technik GmbH
Königsbenden 28
52249 Eschweiler

E-mail: **service@wiltec.info**

Tel: +49 2403 55592-0

Fax: +49 2403 55592-15



Introduction

Thank you for purchasing this quality product. **To minimise the risk of injury we urge that our clients take some basic safety precautions when using this device. Please read the operation instructions carefully and make sure you have understood its content.**

Keep these operation instructions safe.

Safety instructions

- Always disconnect the device from the power supply before removing the top cover or when the device is not use.
- Do not submerge the top cover into water and do not wash it under running water. Only use a damp cloth or a sponge to dry.
- It is advisable that you replace the water every 8 hours and clean the equipment once a month.
- Keep out of children's and animals' reach. Do not allow children to play with it.
- Do not overfill the water container.
- Always position your USB humidifier on a stable surface where it is unlikely to be knocked over.
- Do not use any chemicals to clean the USB humidifier, always use tap water.
- Do not allow the USB humidifier to run dry, this will damage the motor.
- Do not leave the USB humidifier unattended while it is switched on.
- There are no self-serviceable parts; consult an electrician if the USB humidifier needs repair.
- Do not use if the water container has been dropped and broken.
- Do not tip the unit when it is working or contains water
- Only use room temperature tap water, purified water or mineral water. Do not use any other liquid (except for the essential oils used.)

Technical specifications

Power supply	5 V DC, 800–980 mA, 4–5 W
Capacity (ℓ)	0.2
Effective area (m²)	approx. 10–13
Max. effective time (h)	10
Size (mm)	165×165×160
Weight (kg)	0.34
Acoustic level (dB (A))	< 36
Operation mode	USB operated

Use

1. Remove the top cover and fill the container with clean tap water, ensuring that you do not fill over the maximum fill line.
2. Add 2–3 drops of your preferred water-soluble essential oil (optional).
3. Replace the top diffuser cover.
4. Plug in the USB power cord and press the “mist” button once to turn it on, it will run for 1 h, then switch off. To increase the time to you wish the diffuser to run, press the “mist” button twice for 3 hours and three times for 6 hours. Pressing the “mist” button for a fourth time will turn it on continuously. A fifth time will turn it off.
5. If the water tank empties during the desired usage time, the diffuser will automatically switch off.
6. Press the light switch once so it slowly moves through all the colours. Pressing the light switch a second time will keep the present colour lit. To change the colour manually, repeatedly press



the light switch until you find your preferred colour. To turn the light off, hold the light switch down for two seconds.



Note: If the mist function turns off automatically, the light will still need to be switched off manually.

Cleaning and maintenance

After use and before storing, drain any left-over water. Wipe with a soft damp cloth and dry thoroughly, do not use abrasive chemicals as this will damage the diffuser.

Troubleshooting

Problem	Solution suggestion
No power	Ensure that the power lead is connected correctly and it is the correct lead that was originally supplied with the product. If so, unplug the lead from the product and re-install.
Turns off.	Check that there is sufficient water in the tank and that the product is turned on.
No or irregular mist	1. Check the inner part for any dirt or debris.
	2. Ensure that there is sufficient water in the tank or that it is not over the maximum fill level.
	3. Ensure that the upper and inner covers are assembled correctly.
	4. Check that there is no dirt or debris in the air intake vent on the base of the product.
	5. Some environmental factors (such as temperature and humidity) will affect the visibility of the mist.
Water leakage	1. Ensure that the upper and inner covers are assembled correctly.
	2. In low temperatures or humidity, condensation can occur.
	3. Ensure the product is sat on a smooth, level surface.

Disposal regulations

EU guidelines regarding the disposal of scrap electric appliances (WEEE, 2012/19/EU) were implemented in the law related to electrical and electronic equipment and appliances.

All WiTec electric devices that fall under the WEEE regulations are labelled with the crossed-out wheeled waste bin logo. This logo indicates that this electric equipment must not be disposed with the domestic waste.

The company WiTec Technik GmbH has been registered in the German registry EAR under the WEEE-registration number DE45283704.

Disposal of used electrical and electronic appliances (intended for use in the countries of the European Union and other European countries with a separate collection system for these appliances).

The logo on the article or on its packaging points out that this article must not be treated as normal household waste but must be disposed to a recycling collection point for electronic and electrical waste equipment. By contributing to the correct disposal of this article you protect the environment and the health of your fellow men. Environment and health are threatened by inappropriate disposal.



Material recycling helps reduce the consumption of raw materials.

Additional information on recycling this article can be provided by your local community, municipal waste disposal facilities, or the store where you purchased the article.

Address:
WiTec Wildanger Technik GmbH
Königsbenden 12 / 28
D-52249 Eschweiler

Important notice:

The reprint or reproduction, even of excerpts, and any commercial use, even in part, of this instruction manual require the written permission of WiTec Wildanger Technik GmbH.