

Operation Manual

Cable Stripping Machine

61952

XPO ^{the} **tool**
experts



Illustration similar, may vary depending on model

Read and follow the operating instructions and safety information before using for the first time.

Technical changes reserved!

Due to further developments, illustrations, functioning steps, and technical data can differ insignificantly.

Updating the documentation

If you have suggestions for improvement or have found any irregularities, please contact us.



The information contained in this document may alter at any time without previous notice. It is prohibited to copy or spread any parts of this document in any way without prior written allowance. All rights reserved.

The WilTec Wildanger Technik GmbH cannot be held accountable for any possible mistakes in this operating manual, nor in the diagrams and figures shown.

Even though, the WilTec Wildanger Technik GmbH has undergone biggest possible efforts to ensure that the operating manual is complete, faultless, and up to date, mistakes cannot be entirely avoided.

If you should find a mistake or wish to make a suggestion for improvement, we look forward to hearing from you.

Send an e-mail to:

service@wiltec.info

or use our contact form:

<https://www.wiltec.de/contacts/>

The most recent version of this manual in various languages can be found in our online shop via:

<https://www.wiltec.de/docsearch>

Our postal address is:

WilTec Wildanger Technik GmbH
Königsbenden 12
52249 Eschweiler
Germany

To return orders for exchange, repair, or other purposes, please use the following address. Attention! To allow for a smooth execution of your complaint or return, it is important to contact our customer service team before returning the goods.

Returns Department
WilTec Wildanger Technik GmbH
Königsbenden 28
52249 Eschweiler

E-mail: **service@wiltec.info**

Tel: +49 2403 55592-0

Fax: +49 2403 55592-15



Introduction

Thank you for purchasing this quality product. **To minimise the risk of injury we urge that our clients take some basic safety precautions when using this device. Please read the operation instructions carefully and make sure you have understood its content.**

Keep these operation instructions safe.

Safety precautions



The owner and/or user must have read and understood the operating instructions before using the device. Instructed personnel should be careful, competent, trained, and qualified in the safe handling of the equipment used. Warnings should be read and understood.


- Do under no circumstances and at no point touch the machine with your fingers, as this can lead to serious injuries.
- We recommend the use of safety gloves to minimise the risk of injury.
- Observe the applicable occupational safety and accident prevention regulations.
- This equipment is not intended for use by people (including children) with reduced physical, sensory, or mental abilities or people without appropriate experience or knowledge, unless they are supervised by a person responsible for their safety or have received prior instruction in the use of the equipment.
- Children must be supervised to ensure that they do not play with the equipment.
- Use a hair net for long hair.
- In addition, the local accident prevention regulations, and general safety regulations applicable to the area of application of the device must be observed.
- If you have long hair, use a hair elastic and tie your hair up.
- In addition, the local accident prevention regulations applicable to the area in which the device is used and the general safety regulations must be observed.

Operation

- First, make sure to adjust the distance between the blade and the shaft according to the size of the cable that is to be stripped. Please make sure that the device is set to only strip the insulating layer without damaging the inner conductors.
- Thread the cable into the feed and adjust the same until the cable can be pulled through without shifting the inside fixture.
- Use the hand crank to strip the cable of its insulation layer by pulling it past the blade. Alternatively, the hand crank can be removed from the device and can be replaced with a drill by utilising the drill connector bit.
- Should the device be unable to separate the cable from its insulation, it might be due to one of the following reasons:
 - The diameter of the cable is too small.
 - The blade is not positioned in the centre and has therefore to be adjusted.
 - The blade has gotten dull and needs to be sharpened/replaced.

Components and their names

Nº	Name
1	Regulating screw
2	Regulating nut
3	Hand crank
4	Feed
5	Self-locking nut
6	Feed insert
7	Drill connector bit
8	Shaft
9	Blade

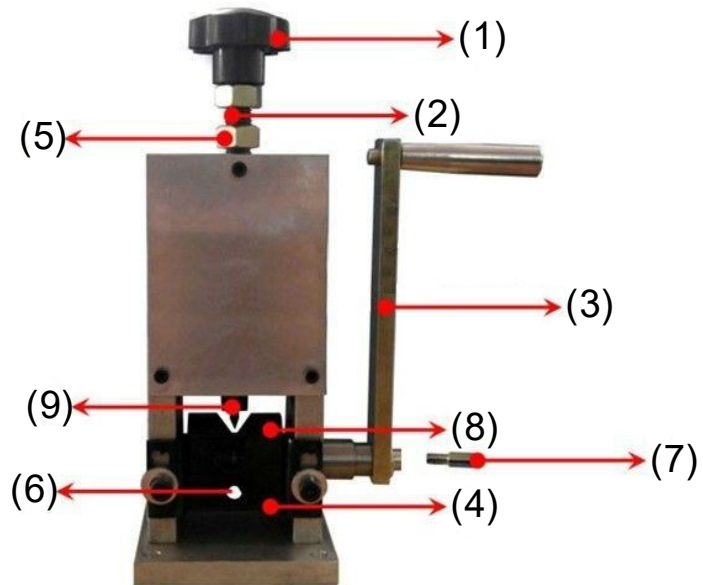

Technical data

Recommended cable diameter (mm)	1.5–25
Total size (mm)	approx. 230×130×320
Size without crank (mm)	approx. 160×130×320
Weight (kg)	5.3
Operation	Hand crank or drill

Important notice:

The reprint or reproduction, even of excerpts, and any commercial use, even in part, of this instruction manual require the written permission of WilTec Wildanger Technik GmbH.