




61954 – Fireguard XL

<p>A</p> <p>1x</p>	<p>B</p> <p>1x</p>	<p>C</p> <p>1x</p>	<p>D</p> <p>1x</p>
<p>E</p> <p>1x</p>	<p>F</p> <p>2x</p>	<p>G</p> <p>1x</p>	<p>H</p> <p>1x</p>
<p>I</p> <p>2x</p>	<p>J</p> <p>2x</p>	<p>K</p> <p>4x</p>	<p>L</p> <p>4x</p>
<p>M</p> <p>4x</p>	<p>N</p> <p>4x</p>	<p>O</p> <p>4x</p>	<p>P</p> <p>4x</p>
<p>Q</p> <p>4x</p>	<p>R</p> <p>1x</p>	<p>S</p> <p>1x</p>	<p>T</p> <p>1x</p>
<p>U</p> <p>8x</p>	<p>V</p> <p>1x</p>	<p>W1</p> <p>16x</p>	<p>X1</p> <p>8x</p>
		<p>W2</p> <p>8x</p>	<p>X2</p> <p>8x</p>

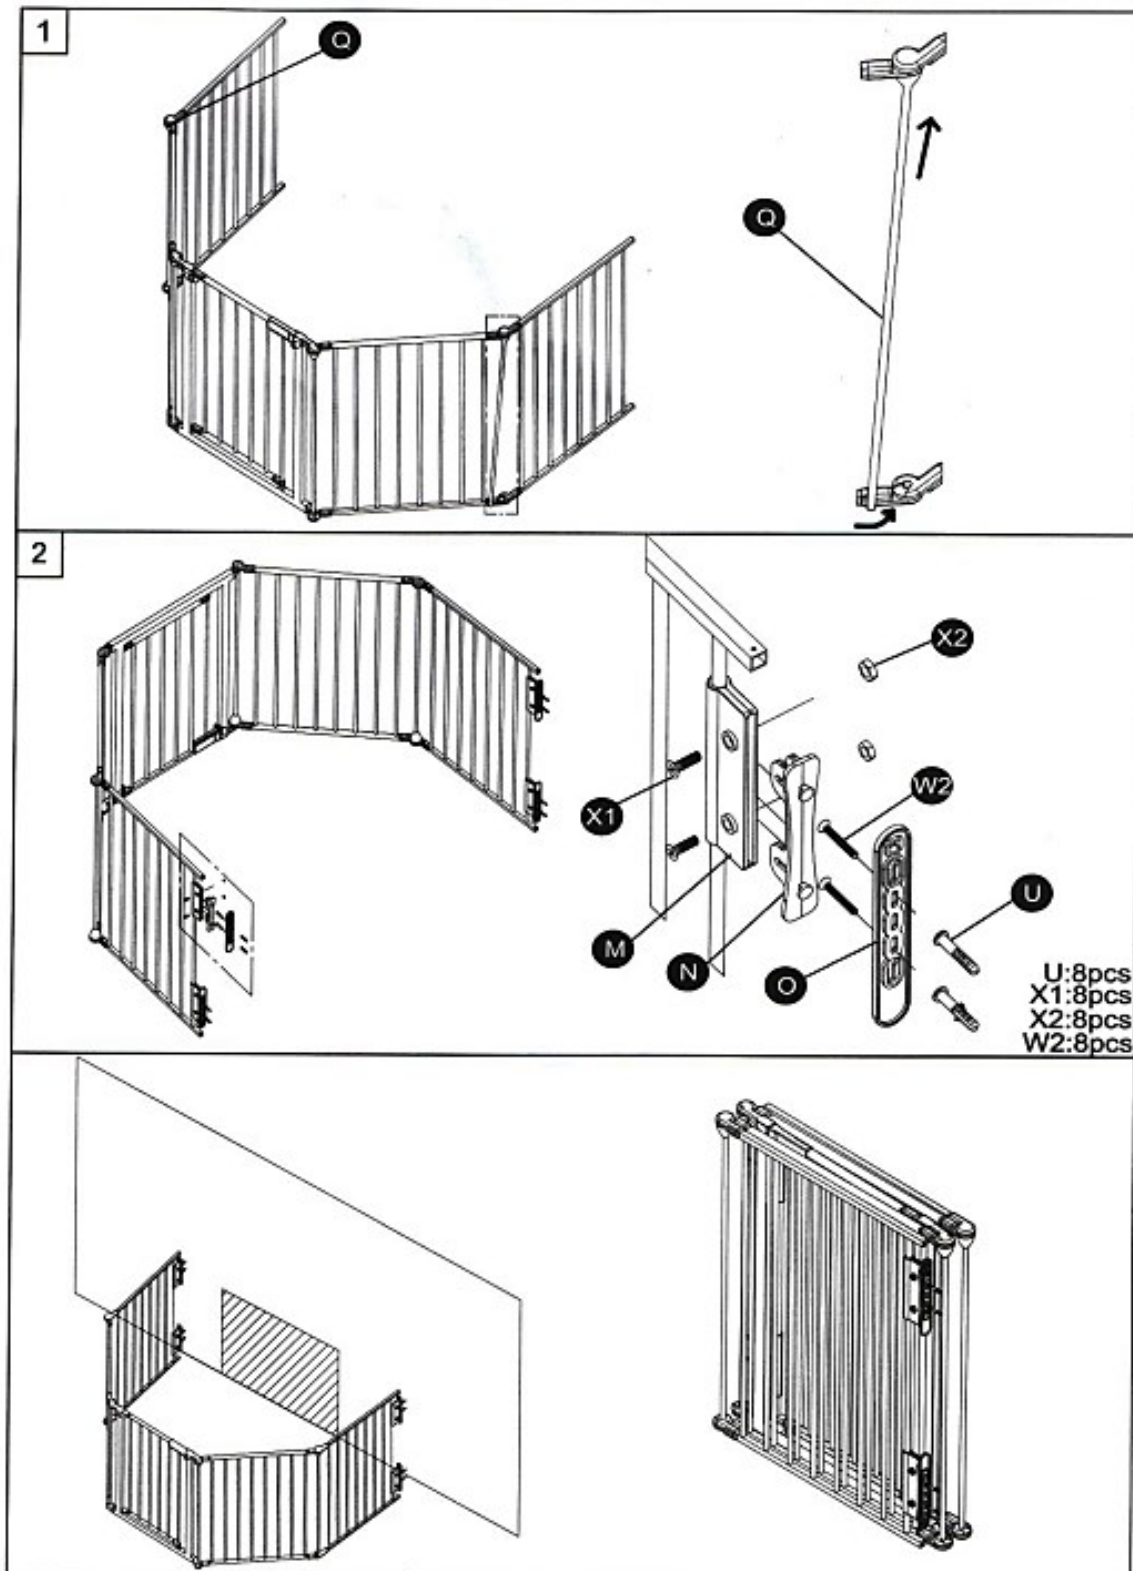

Important Note:

Reproduction and any commercial use (of parts) of this operating manual, requires a written permission of Wil-Tec Wildanger Technik GmbH.