

Operation Manual

Camping Cooker

62013



Illustration similar, may vary depending on model

Read and follow the operating instructions and safety information before using for the first time.

Technical changes reserved!

Due to further developments, illustrations, functioning steps, and technical data can differ insignificantly.

Updating the documentation

If you have suggestions for improvement or have found any irregularities, please contact us.



The information contained in this document may alter at any time without previous notice. It is prohibited to copy or spread any parts of this document in any way without prior written allowance. All rights reserved.

The WilTec Wildanger Technik GmbH cannot be held accountable for any possible mistakes in this operating manual, nor in the diagrams and figures shown.

Even though, the WilTec Wildanger Technik GmbH has undergone biggest possible efforts to ensure that the operating manual is complete, faultless, and up to date, mistakes cannot be entirely avoided.

If you should find a mistake or wish to make a suggestion for improvement, we look forward to hearing from you.

Send an e-mail to:

service@wiltec.info

or use our contact form:

<https://www.wiltec.de/contacts/>

The most recent version of this manual in various languages can be found in our online shop via:

<https://www.wiltec.de/docsearch>

Our postal address is:

WilTec Wildanger Technik GmbH
Königsbenden 12
52249 Eschweiler
Germany

To return orders for exchange, repair, or other purposes, please use the following address. Attention! To allow for a smooth execution of your complaint or return, it is important to contact our customer service team before returning the goods.

Returns Department
WilTec Wildanger Technik GmbH
Königsbenden 28
52249 Eschweiler

E-mail: **service@wiltec.info**

Tel: +49 2403 55592-0

Fax: +49 2403 55592-15

Introduction

Thank you for purchasing this quality product. **To minimise the risk of injury we urge that our clients take some basic safety precautions when using this device. Please read the operation instructions carefully and make sure you have understood its content.**

Keep these operation instructions safe.

Technical specifications

Material		Powder coated steel
Size (mm)	Frame	410×410×165
	Total size	410×560×165
Weight (kg)		3.6
Gas		Propane-Butane
Nominal power (kW)		7
Gas pressure (mbar)		30 (G30/G31)
Gas consumption (g/h)		450
Ignition type		Manual ignition
Use		Outdoor use


Assembly

1. Lock the burner in place by placing it on the support fixture and screw it to the frame with help of the screws and nuts included in the scope of delivery.
2. Install the 4 legs by screwing them to the frame with 4 screws each.
3. Attach the gas valve to the burner.
4. Attach the gas hose to the valve and make sure that it is properly connected.

Attention: Make sure to read this instruction manual before installing or using this camping cooker. This device can only be utilised with the liquefied gases of butane or propane – gas pressure 28–30 mbar.

Important: This camping cooker can only be used outside. It has thereby to be placed on a non-flammable surface to minimise the risk of accidents. Not suitable for children!

No	Name
1	Frame
2	Burner
3	Gas valve
4	Leg
5	Support

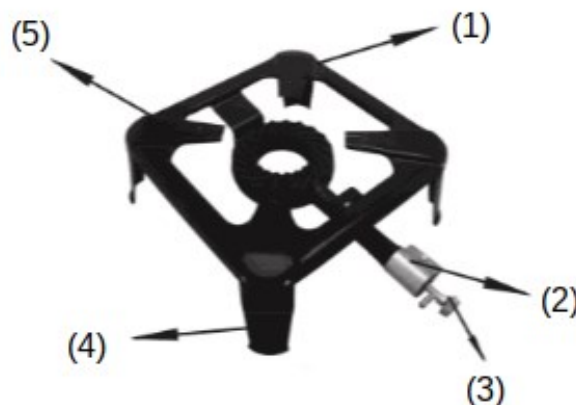

Important notice: The reprint or reproduction, even of excerpts, and any commercial use, even in part, of this instruction manual require the written permission of WilTec Wildanger Technik GmbH.