

Operation Manual

Electric Heating Blanket

62304

toboli



Illustration similar, may vary depending on model

Read and follow the operating instructions and safety information before using for the first time.

Technical changes reserved!

Due to further developments, illustrations, functioning steps, and technical data can differ insignificantly.

Updating the documentation

If you have suggestions for improvement or have found any irregularities, please contact us.



The information contained in this document may alter at any time without previous notice. It is prohibited to copy or spread any parts of this document in any way without prior written allowance. All rights reserved.

The WilTec Wildanger Technik GmbH cannot be held accountable for any possible mistakes in this operating manual, nor in the diagrams and figures shown.

Even though, the WilTec Wildanger Technik GmbH has undergone biggest possible efforts to ensure that the operating manual is complete, faultless, and up to date, mistakes cannot be entirely avoided.

If you should find a mistake or wish to make a suggestion for improvement, we look forward to hearing from you.

Send an e-mail to:

service@wiltec.info

or use our contact form:

<https://www.wiltec.de/contacts/>

The most recent version of this manual in various languages can be found in our online shop via:

<https://www.wiltec.de/docsearch>

Our postal address is:

WilTec Wildanger Technik GmbH
Königsbenden 12
52249 Eschweiler
Germany

To return orders for exchange, repair, or other purposes, please use the following address. Attention! To allow for a smooth execution of your complaint or return, it is important to contact our customer service team before returning the goods.

Returns Department
WilTec Wildanger Technik GmbH
Königsbenden 28
52249 Eschweiler

E-mail: **service@wiltec.info**

Tel: +49 2403 55592-0

Fax: +49 2403 55592-15



Introduction

Thank you for purchasing this quality product. **To minimise the risk of injury we urge that our clients take some basic safety precautions when using this device. Please read the operation instructions carefully and make sure you have understood its content.**

Keep these operation instructions safe.


Safety instructions

Please ensure to read this operation manual carefully and completely to properly familiarise yourself with the product and its functions. Only use this electric blanket and the functions listed within this operation manual for the purpose they were intended for.

- This device must be operated with a voltage of 230 V.
- Do not modify or perform repair work on the device. Repairs as well as the maintenance of electric parts must be performed by qualified experts.
- Do not operate the device, if it should be damaged and instead replace it or have it repaired by a qualified expert.
- Do not operate the device, if it has fallen, operates in an unusual manner, has been submerged or overheated, has changed its colour, or begun to deform.
- Never leave the device unattended, if it is connected to the mains supply.
- This device is not a toy. Keep it inaccessible to children and do not let them play with it.
- Protect the device from high temperatures and keep it away from heat sources such as hot surfaces, direct sunlight, and open fire. Further avoid contact with oil and sharp edges and do not use it in the vicinity of ignition sources.
- Do not use the device in flammable, explosive, or toxic environments.
- Only use water with a maximum temperature of 30 °C and mild washing agents or washing powders to clean the device.
- Always disconnect the device from the mains supply, if it is not in use.
- This product is intended for indoor use and must not be used outside.
- Do not pull at the cable of the device and do not abuse it to lift or carry the device. Furthermore, make sure that the cable is not bent or jammed and keep it away from sharp edges and objects.
- Do not use the device, if the power cord should show signs of damage or wear. Do not repair damaged cables and instead have them replaced by a qualified expert.
- Do not completely submerge the device in water or other liquids. Do not use the device in the vicinity of water sources or environments with a high level of humidity.
- Always make sure to turn the device off and disconnect it from the mains supply before cleaning or moving it.
- Only use the product for its intended purpose.
- The electric blanket can only function in combination with the power cord and control unit included in the scope of delivery.
- Keep the product away from sharp or pointy objects and do not attach pins or buttons to it.
- Make sure that the control unit does not overheat. To avoid overheating, do not cover it with cushions, blankets, or other objects.
- Do not operate the device with wet hands and avoid exposure of the power plug to water or high levels of moisture to minimise the risk of electric shock.
- Before starting the electric blanket, make sure that it is not folded and do not fold it while it is operating.
- Do not use the device on infants or small children under 3 years of age. Due to them being unable to process heat, the device is life-threatening to them.
- Children in the vicinity of the device must be always supervised by adults responsible for their safety.
- Do not iron the product as the mixture of pressure and heat may damage internal circuits.

Control unit

Nº	Name
1	Timer
2	On/off switch
3	Temperature switch
4	Display

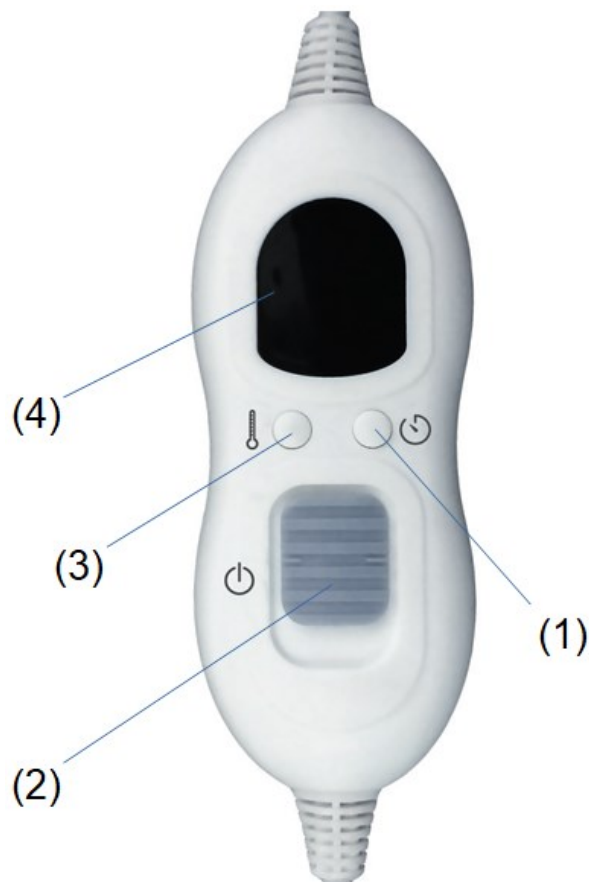

Operation

Handling

- Connect the power plug of the device with the mains supply by using an appropriate socket-outlet. If necessary, use a suitable extension cord to ensure that the cable is not stained.
- Use the on-off switch to turn the device on and activate the display.
- Use the temperature control to choose and set the temperature level.

Temperature settings

Use the temperature control button to choose and set 1 of the 3 possible temperature settings. The chosen setting as well as the heating status of the blanket are visible on the display. A blinking display thereby indicates that the electric blanket is heating up, while a permanent display indicates that the device has reached the set temperature. Should the temperature of the device fall below the set value, the device will automatically heat up again until the desired temperature is reached.

Timer

Keep the timer button pressed to set the operating time of the device, which will automatically turn off once the timer has run out. This electric blanket offers 4 different timer settings: F (10 hours), 8 hours, 4 hours, and 2 hours. The remaining time is thereby always visible on the display of the device.



Maintenance and cleaning

Important: Before cleaning the device, always make sure to remove the control unit and the power cord from the blanket. Do not wash the device inside the washing machine and do not use a tumble drier to dry it!

- The blanket must be hand-washed. Use warm water with a maximum temperature of 30 °C as well as mild washing agents or washing powder. First soak the blanket for about 5 min before then beginning to clean it. Make sure to thoroughly rinse the blanket with water, if washing agents or powders were used.
- Hang the blanket after washing to allow it to dry. Do not use clothes-pegs in the vicinity of the internal circuits as the pressure might damage them.
- Do under no circumstances wring the blanket out as this will damage its internal circuits.
- Make sure that the electric blanket has dried completely and returned to its original size before the cable and control unit are reattached and the device is used again.

Disposal regulations

EU guidelines regarding the disposal of scrap electric appliances (WEEE, 2012/19/EU) were implemented in the law related to electrical and electronic equipment and appliances.

All WiTec electric devices that fall under the WEEE regulations are labelled with the crossed-out wheeled waste bin logo. This logo indicates that this electric equipment must not be disposed with the domestic waste.

The company WiTec Technik GmbH has been registered in the German registry EAR under the WEEE-registration number DE45283704.

Disposal of used electrical and electronic appliances (intended for use in the countries of the European Union and other European countries with a separate collection system for these appliances).

The logo on the article or on its packaging points out that this article must not be treated as normal household waste but must be disposed to a recycling collection point for electronic and electrical waste equipment. By contributing to the correct disposal of this article you protect the environment and the health of your fellow men. Environment and health are threatened by inappropriate disposal.



Material recycling helps reduce the consumption of raw materials.

Additional information on recycling this article can be provided by your local community, municipal waste disposal facilities, or the store where you purchased the article.

Address:
WiTec Wildanger Technik GmbH
Königsbenden 12 / 28
D-52249 Eschweiler

Important notice:

The reprint or reproduction, even of excerpts, and any commercial use, even in part, of this instruction manual require the written permission of WiTec Wildanger Technik GmbH.