

User's manual

Pressurised Air Grease Gun 62565



Illustration similar, may vary depending on model

Read and follow the operating instructions and safety information before using for the first time.

Technical changes reserved!

Illustrations, functional steps, and technical data may deviate insignificantly due to continuous further developments.

Updating the documentation

If you have suggestions for improvement or have found any irregularities, please contact us.



The information contained in this document may alter at any time without prior notice. No part of this document may be copied or otherwise duplicated without prior written consent. All rights reserved. WilTec Wildanger Technik GmbH cannot be held liable for any possible mistakes in this operating manual, nor in the diagrams and illustrations shown.

Although WilTec Wildanger Technik GmbH has made every possible effort to ensure that this operating manual is complete, accurate, and up-to-date, errors cannot be ruled out entirely.

If you have found an error or wish to suggest an improvement, we look forward to hearing from you. Send us an e-mail to:

service@wiltec.info

or use our contact form:

<https://www.wiltec.de/contacts/>

The most recent version of this manual in several languages can be found in our online shop:

<https://www.wiltec.de/docsearch>

Our postal address is:

WilTec Wildanger Technik GmbH
Königsbenden 12
52249 Eschweiler – Germany

To return your goods for exchange, repair, or other purposes, please use the following address. Attention! To allow for a trouble-free complaint or return, it is important to contact our customer service team before returning your goods.

Retourenabteilung
WilTec Wildanger Technik GmbH
Königsbenden 28
52249 Eschweiler – Germany

E-mail: **service@wiltec.info**

Tel: +49 2403 55592-0

Fax: +49 2403 55592-15

Introduction

Thank you for choosing to purchase this quality product. To minimise the risk of injury, we ask you to always take some basic safety precautions when using this product. Please read this operating manual carefully and make sure that you understand it. Keep these operation instructions in a safe place.


Safety instructions

- Only use the grease gun correctly. Any improper use can lead to accidents.
- Do not modify the grease gun in any way.
- Keep children and animals away from your working area.
- Take appropriate precautionary measures to protect yourself and others.
- Before performing any maintenance or repair job, do disconnect the grease gun from the pneumatic source.
- Never exceed the maximum pressure of 6 bar.
- The pressurised air connection must be done via a quick coupling.
- Only operate the grease gun with pressurised air. Do not use any gas as power source.
- During use, wear appropriate protection equipment such as work gloves, work shoes, or safety goggles.
- Do not use the grease gun if there are leaks or other dysfunctions. Immediately disconnect the pressurised air connection and have the grease gun repaired by an expert.
- Make sure that the hose does not kink. Do not use the grease gun if the hose is kinked or damaged.
- Only use filling material appropriate for use with the grease gun.
- Only use the grease gun to convey greases.

Operation

Top up grease every day before use by blowing in air. The filler is used to fill the grease gun with grease from a filling pump. There are three different ways of topping the grease up:


1. topping up with a cartridge
2. topping up by hand
3. topping up with a filling pump

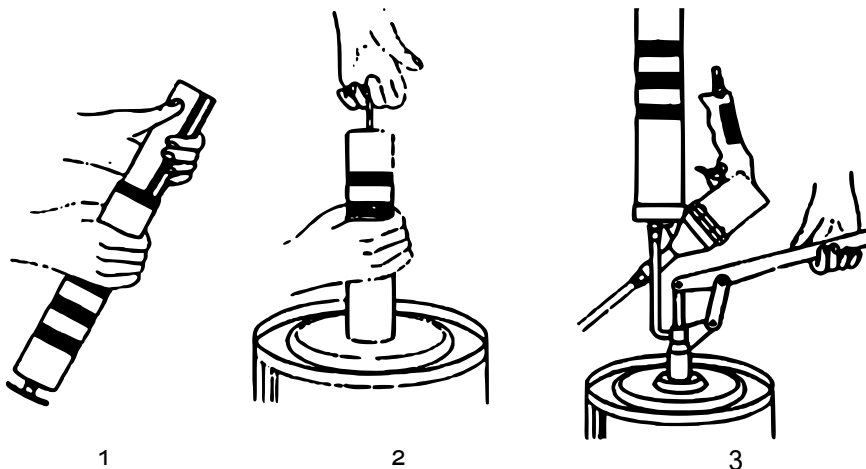

Topping up with a cartridge

1. Remove the top of the container pipe of the grease gun.
2. Completely retract the pressure piston handle.

3. Insert the open end of the cartridge into the container pipe.
4. Close the grease gun with the help of the screw cap and re-fix the top to the container pipe.
5. Slide the pressure piston handle in as deep as possible.

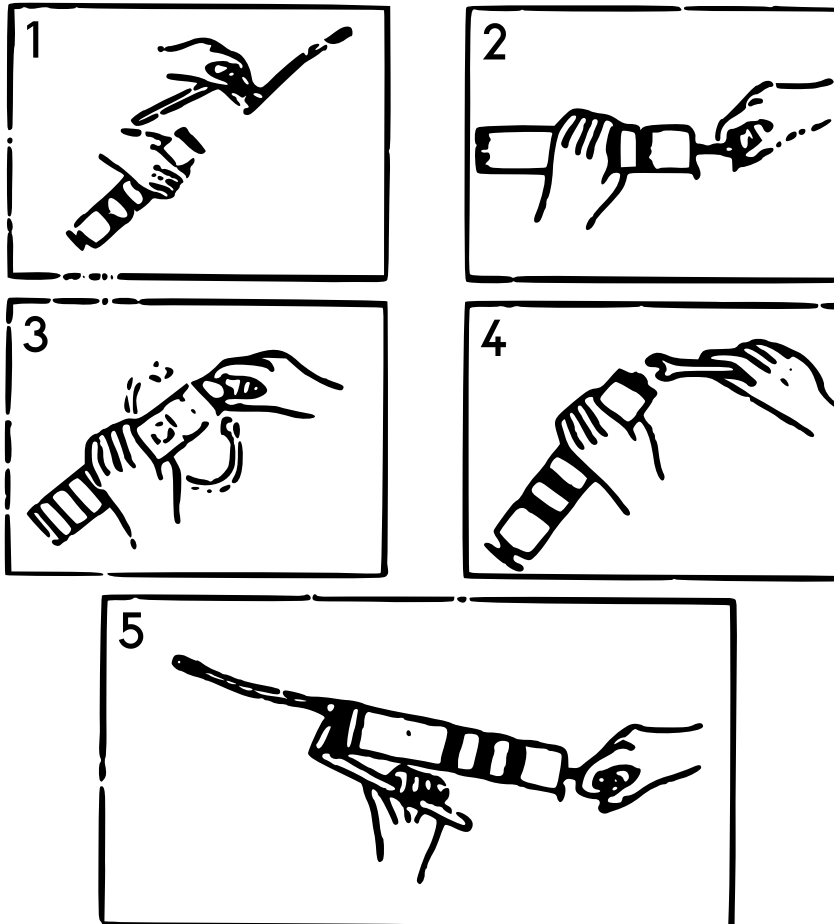

Topping up by hand

1. Remove the top of the container pipe of the grease gun.
2. Completely retract the pressure piston handle.
3. Fill the container pipe with grease.
4. Re-fix the top to the container pipe.
5. Slide the pressure piston handle in as far as possible.


topping up with a filling pump

1. Completely retract the pressure piston handle.
2. Remove the screw cap of the top of the grease gun.
3. Connect the filling pump with the grease gun via the filler.
4. Activate the filling pump to fill the container pipe.
5. Remove the filling pump from the grease gun.
6. Close the top of the grease gun with the help of the screw cap.
7. Slide the pressure piston handle in as far as possible.

Note! In case the grease gun does not work properly, this may be caused by air included in the container pipe. To remove the air, unscrew the top and proceed as follows:

1. Completely retract the pressure piston handle and let it go quickly. Repeat this several times.
2. Slide the pressure piston handle in up to the stop.
3. Re-fix the top to the container pipe.
4. Press the drain valve several times to evacuate the air.

Parts

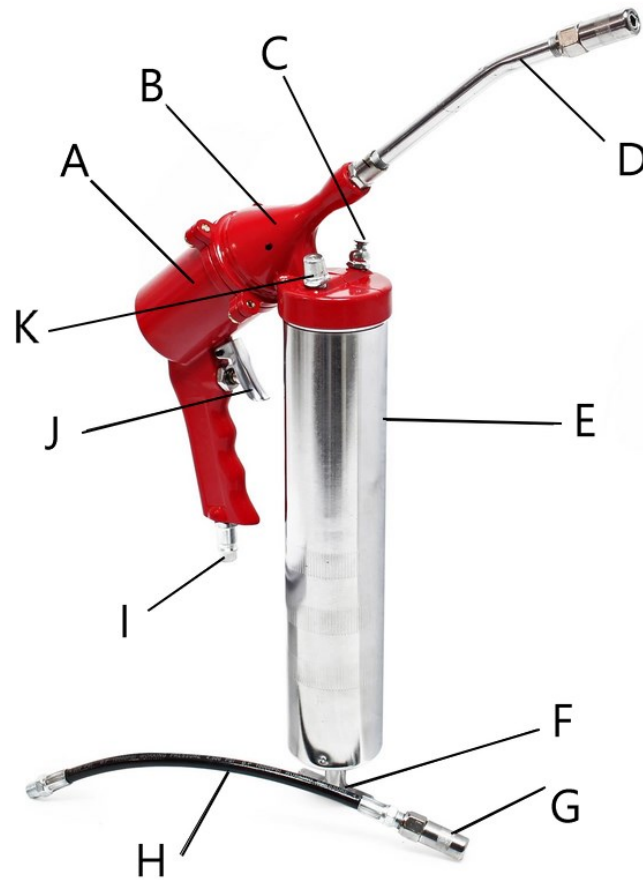

Letter	Name	Letter	Name
A	Air container	G	¼" quick coupling
B	Top	H	Hose
C	Drain valve	I	Pressurised-air connector
D	Pour-out tube	J	Trigger
E	Container tube	K	Cap screw
F	Pressure piston handle		

Important Note:

Reproduction and any commercial use (of parts) of this operating manual, requires a written permission of WilTec Wildanger Technik GmbH.