

# User's manual

## Ash Vacuum Cleaner 20 ℓ 63122



Illustration similar, may vary depending on model

Please read and follow the operating instructions and safety information prior to initial operation.

Technical changes reserved!

Illustrations, functional steps, and technical data may deviate insignificantly due to continuous further developments.



The information contained in this document may alter at any time without prior notice. No part of this document may be copied or otherwise duplicated without prior written consent. All rights reserved. WilTec Wildanger Technik GmbH cannot be held liable for any possible mistakes in this operating manual, nor in the diagrams and illustrations shown.

Although WilTec Wildanger Technik GmbH has made every possible effort to ensure that this operating manual is complete, accurate, and up-to-date, errors cannot be ruled out entirely.

If you have found an error or wish to suggest an improvement, we look forward to hearing from you. Send us an e-mail to:

[service@wiltec.info](mailto:service@wiltec.info)

or use our contact form:

<https://www.wiltec.de/contacts/>

The most recent version of this manual in several languages can be found in our online shop:

<https://www.wiltec.de/docsearch>

Our postal address is:

WilTec Wildanger Technik GmbH  
Königsbenden 12  
52249 Eschweiler Germany

To return your goods for exchange, repair, or other purposes, please use the following address. Attention! To allow for a trouble-free complaint or return, it is important to contact our customer service team before returning your goods.

Retourenabteilung  
WilTec Wildanger Technik GmbH  
Königsbenden 28  
52249 Eschweiler Germany

E-mail: **service@wiltec.info**  
Phone: +49 2403 55592-0  
Fax: (+49 2403 55592-15)



## Introduction

Thank you for choosing to purchase this quality product. To minimise the risk of injury, we ask you to always take some basic safety precautions when using this product. Please read this operating manual carefully and make sure that you understand it.

Keep these operation instructions in a safe place.

## About the product

- The ash vacuum cleaner is used to remove cold, dry ash from fireplaces or barbecue trays. To facilitate the thorough cleaning of hard-to-reach places, the vacuum cleaner is equipped with a large container and a flexible hose. It also comes with a replaceable air filter. The product is not intended for commercial use. The correct, reliable, and safe operation of the device depends on its proper use.
- Before working with the device, read the entire manual and follow all instructions and directions contained therein.
- No responsibility is assumed for damage or injury caused by failure to observe the safety regulations and instructions in this manual.
- The unit is supplied fully assembled and requires no assembly. The delivery also includes an elastic hose as well as an aluminium suction nozzle.

## Safety instructions

- This device may only be used by persons with reduced physical, sensory, or mental abilities or a lack of experience or knowledge in case a person familiar with the device and responsible for their safety has instructed and supervises them.
- Children must not use the device and should be supervised when they are near it to ensure that they do not play with it. Cleaning and maintenance work by children should not be carried out without supervision.
- The vacuum cleaner is intended for dry operation. Sucking up water, wet ash or other wet waste materials is prohibited. This creates a risk of electric shock, which may result in a health hazard to the user or uninvolved persons.
- Never vacuum hot, glowing or burning objects. This may cause a fire or explosion and result in serious injury or death to the user. The maximum temperature of the impurities to be vacuumed must not exceed 40 °C.
- The device is intended for indoor use and must not be exposed to the effects of water, including rain.
- Before connecting the power plug to the mains, make sure that the parameters of the power supply match those on the name plate.
- Before each use, check the condition of the unit, power cable, and power plug. If any defects are found, do not operate the unit. Have any defects rectified by an appropriate specialist company.
- Always disconnect the unit from the mains before carrying out maintenance work
- Store the unit in a place not accessible to uninvolved persons, especially children. Even during functional operation, make sure that the unit is stored in a place inaccessible to uninvolved persons, especially children.
- The unit must be carried by the handle, not by the power cable.
- When the device is used as a blower, do not point the hose outlet at people or animals
- Wear protective goggles and gloves during use.  
Regularly check the condition of the hose. Do not use the device with a damaged hose.

## Technical specifications

<b>Power voltage (V)</b>	230
<b>Mains frequency (Hz)</b>	50
<b>Nominal power (W)</b>	800
<b>Hose length (cm)</b>	100
<b>Length of suction nozzle (cm)</b>	23
<b>Tank volume (ℓ)</b>	20
<b>Protection class</b>	II
<b>IP protection class</b>	IPX0

## Parts list

No	Name
1	Tank
2	Lid
3	Latch
4	Handle
5	Switch
6	Power cord with plug
7	Inlet
8	Socket
9	Elastic hose
10	Suction nozzle
11	Air filter
12	-
13	Wheels




## Operating the unit

### Preparation

- First check the container of the vacuum cleaner and clean it of waste material if necessary. Then check the condition of the filter. When dirty, the filter must be cleaned using compressed air at no more than 3 bar pressure. If the dirt cannot be removed from the filter, it must be replaced with new ones. Check the condition of the seal integrated at the upper edge of the rigid filter. If it is damaged, the filter must be replaced with a new one.

**Note!** It is forbidden to operate the vacuum cleaner without a properly fitted air filter. Otherwise, it might damage the vacuum cleaner and increase the risk of electric shock.

Small wheels can be attached to the baseplate of the vacuum cleaner. For this purpose, the pin of the wheels must be pressed into the opening of the baseplate.

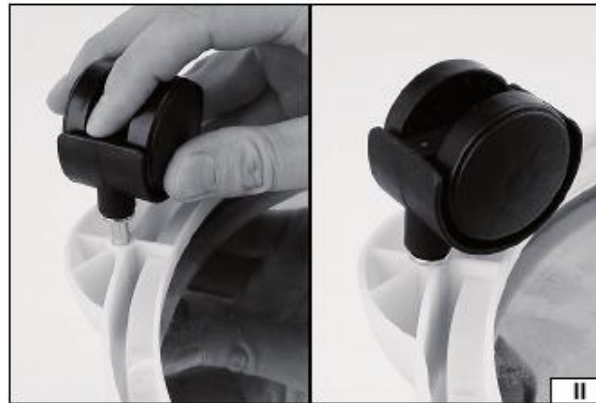

There is a small metal chain on the underside of the container. Check that it is in contact with the base during operation, as this can dissipate electrical charge that has built up during operation.



The fabric filter is pulled over the rigid filter so that the fabric filter surrounds the rigid filter at the top.



When attaching the filters to the underside of the lid, make sure that the seal of the stiff filter sits evenly. The gasket integrated at the top of the filter has a flange that allows the filter to be securely fastened.



Attach the lid to the container so that it fits perfectly on the rim. Secure the lid to the container using the latches. There are two marked spots on the lid that help to ensure that this connection is tight.




Connect the elastic hose to the inlet. The hose connector must be inserted into the hole so that its notches align with the bulges of the inlet, and then turned in the direction of the arrow marked "LOCK." Make sure that the hose does not slip out of the hole during operation.

To remove the hose later, turn the connector in the direction of the arrow marked "LOOSE" and pull it out of the inlet.



Connect the suction nozzle to the loose end of the hose by inserting it into the hose connector.

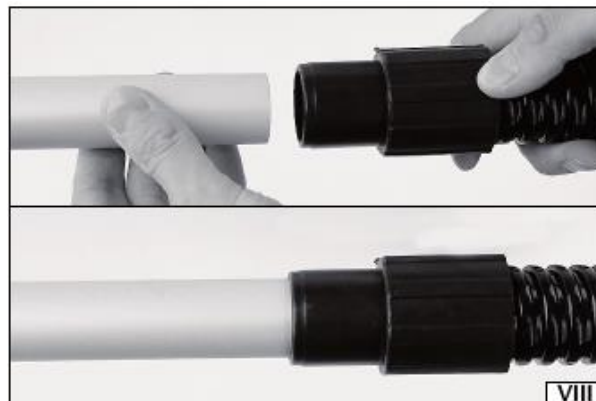

The vacuum cleaner also offers the possibility to connect a hose to the outlet so that it can also be used as a blower. To use the device as a blower, press the hose connector into the socket.





### Commissioning

**Attention!** Vacuuming hot ash is prohibited. The temperature of the suction material must not exceed 40 °C.

- Make sure that all preparatory measures have been completed.
- Also make sure that the switch of the vacuum cleaner is set to "0" (Off) before connecting the appliance to the mains.
- Next, insert the plug of the power cord into the socket and set the switch to "I" (On).
- After finishing work and before carrying out maintenance work, switch the vacuum cleaner off and disconnect the plug.

**Note!** When using the vacuum cleaner as a blower, make sure that the container has been emptied and the filter either cleaned or replaced with a new one. Otherwise, any dirt remaining in the container may be blown out through the outlet opening.

### Maintenance

**Note!** Pull out the plug before carrying out maintenance work!

- After each use of the vacuum cleaner, the container, lid seal, and air filter must be checked as described in these instructions.
- The ash vacuum cleaner is cleaned from the outside with compressed air at a maximum pressure of 3 bar. During this process, particular attention must be paid to the ventilation openings for the supply and exhaust air. If necessary, clean them with compressed air at a maximum of 3 bar. Do not use sharp metal objects to clean the ventilation openings.
- When cleaning the ash vacuum cleaner, do not immerse it in water.
- Before each use, the vacuum cleaner hose must be checked for damage. Never use a damaged hose. Any major soiling of the housing should be removed with a soft cloth.

## Regulations for waste disposal

The Waste Electrical and Electronic Equipment Directive (WEEE Directive, 2012/19/EU) of the EU was implemented in the German law related to electrical and electronic equipment and appliances.

All WilTec electric devices that fall under the WEEE directive are labelled with the symbol of a crossed-out wheeled rubbish bin. This symbol indicates that this electric device must not be disposed of with the domestic waste.

WilTec Technik GmbH is registered with the German registration authority EAR (Stiftung Elektro-Altgeräte Register) under the WEEE-registration number DE45283704.

Disposal of used electrical and electronic devices (intended for use in the countries of the European Union and other European countries with a separate waste collection system for these devices).

The symbol on the packaging or the product itself indicates that this product must not be treated as normal domestic waste but must be disposed of at a recycling collection station for electrical and electronic waste.

By disposing of this product correctly, you contribute to the protection of the environment and the health of your fellow people. Inappropriate disposal threatens the environment and health.



Material recycling helps to reduce the consumption of raw materials.

Additional information about the recycling of this product can be provided by your local commune, the municipal waste disposal facilities, or the store where you purchased the product.

Address:  
WilTec Wildanger Technik GmbH  
Königsbenden 12 / 28  
52249 Eschweiler Germany

### Important Note:

Reproduction and any commercial use (of parts) of this operating manual, requires a written permission of WilTec Wildanger Technik GmbH.