

# User's manual

## Drywall Panel Hoist

63249



Illustration similar, may vary depending on model

Read and follow the operating instructions and safety information before using for the first time.

Technical changes reserved!

Illustrations, functional steps, and technical data may deviate insignificantly due to continuous further developments.

Updating the documentation

If you have suggestions for improvement or have found any irregularities, please contact us.



The information contained in this document may alter at any time without prior notice. No part of this document may be copied or otherwise duplicated without prior written consent. All rights reserved. WilTec Wildanger Technik GmbH cannot be held liable for any possible mistakes in this operating manual, nor in the diagrams and illustrations shown.

Although WilTec Wildanger Technik GmbH has made every possible effort to ensure that this operating manual is complete, accurate, and up-to-date, errors cannot be ruled out entirely.

If you have found an error or wish to suggest an improvement, we look forward to hearing from you. Send us an e-mail to:

[service@wiltec.info](mailto:service@wiltec.info)

or use our contact form:

<https://www.wiltec.de/contacts/>

The most recent version of this manual in several languages can be found in our online shop:

<https://www.wiltec.de/docsearch>

Our postal address is:

WilTec Wildanger Technik GmbH  
Königsbenden 12  
52249 Eschweiler – Germany

To return your goods for exchange, repair, or other purposes, please use the following address. Attention! To allow for a trouble-free complaint or return, it is important to contact our customer service team before returning your goods.

Retourenabteilung  
WilTec Wildanger Technik GmbH  
Königsbenden 28  
52249 Eschweiler – Germany

E-mail: **service@wiltec.info**

Tel: +49 2403 55592-0

Fax: +49 2403 55592-15



## Introduction

Thank you for choosing to purchase this quality product. To minimise the risk of injury, we ask you to always take some basic safety precautions when using this product. Please read this operating manual carefully and make sure that you understand it.

Keep these operation instructions in a safe place.

## Safety instructions

- Check the drywall panel hoist before each use to detect errors or damages.
- Check the steel cable thoroughly. A steel cable in bad condition can break and cause injuries.
- The device must stay switched off until it has reached room temperature. Sudden temperature changes (e.g., when the device is carried from a cold to a warm room) can interfere with the correct operability of the device.
- Always operate the device in a safe environment. Avoid obstacles.
- For safety reasons, always wear a hardhat and protective goggles.
- Only use the device according to the intended use defined in this manual. Only use the device to lift drywall panels.
- Always fasten the guide rollers to prevent the device from moving undesirably.
- Do not use the drywall panel hoist if its locking springs are not locked.
- Remove the safety brakes before lowering the platform.
- Always hold the turning wheel when having removed the brake to allow the hitch to lower safely.
- Only lift one panel at a time.
- The max. lifting capacity of the drywall panel hoist is 40 kg.

## Use

To lift, turn the turning wheel clockwise. Insert the locking bolts into the corresponding holes to secure the hitch.


To lower the hitch, proceed as follows:

1. Keep the wheel with the left hand. Turn the wheel slightly counter-clockwise and at the same time slide the brake handle upwards to unlock the brake.  
**Warning!** The hitch will lower automatically after you have let go the brake. Keep the turning wheel well to allow the hitch to lower safely.
2. To lower the hitch completely, remove the locking bolt.
3. Secure the panel with the help of the hook at the end of the hitch.
4. Before lifting, insert the locking bolt into the corresponding holes.

## Technical specifications

<b>Max. working height (m)</b>	2.9
<b>Max. lifting capacity (kg)</b>	40
<b>Weight (kg)</b>	18
<b>Min. working height (m)</b>	1.67
<b>Arm length (cm)</b>	73

## Assembly

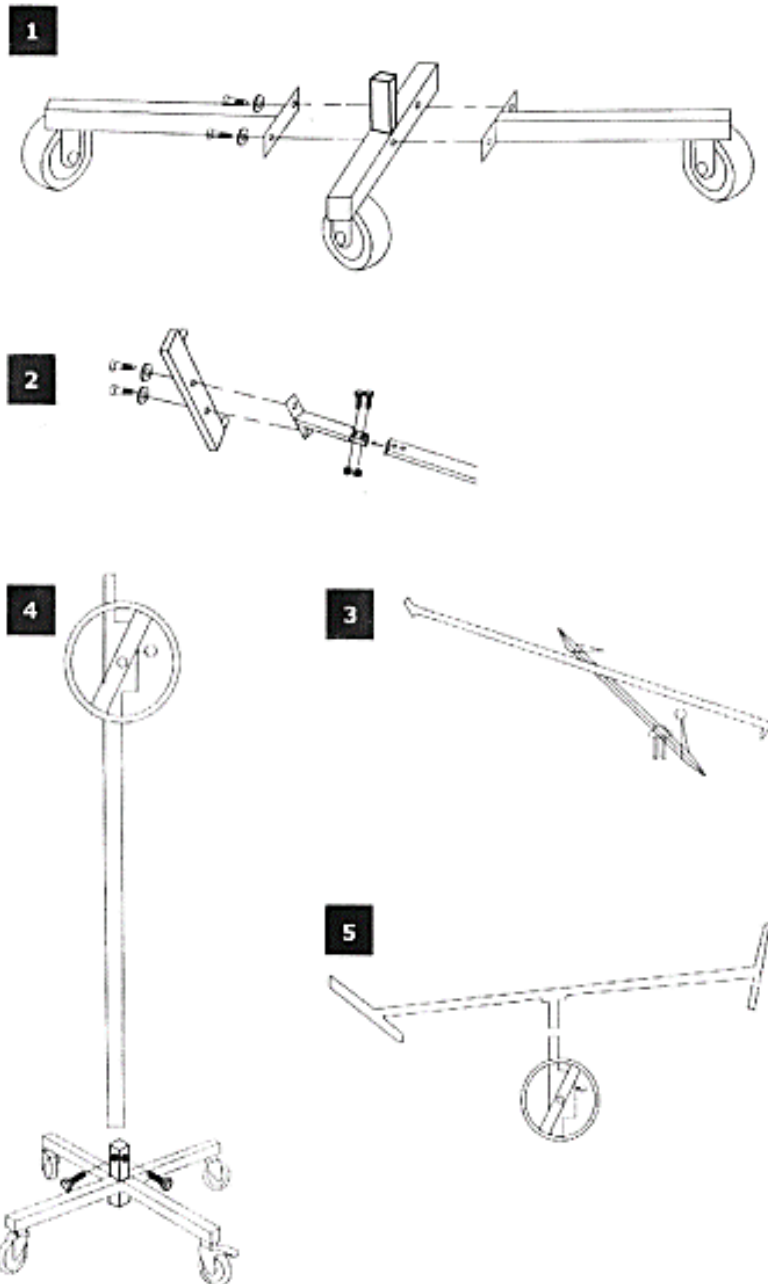

### Important Note:

Reproduction and any commercial use (of parts) of this operating manual, requires a written permission of WilTec Wildanger Technik GmbH.