

Operating instructions

Foldable Access Ramps

63875



Illustration similar, may vary depending on model

Read and follow the operating instructions and safety information prior to initial operation.

Technical changes reserved!

Illustrations, functional steps, and technical data may deviate insignificantly due to continuous further developments.

Updating the documentation

If you have suggestions for improvement or have found any irregularities, please contact us.



The information contained in this document may alter at any time without prior notice. No part of this document may be copied or otherwise duplicated without prior written consent. All rights reserved. WilTec Wildanger Technik GmbH cannot be held liable for any possible mistakes in this operating manual, nor in the diagrams and illustrations shown.

Although WilTec Wildanger Technik GmbH has made every possible effort to ensure that this operating manual is complete, accurate, and up-to-date, errors cannot be ruled out entirely.

If you have found an error or wish to suggest an improvement, we look forward to hearing from you. Send us an e-mail to:

service@wiltec.info

or use our contact form:

<https://www.wiltec.de/contacts/>

The most recent version of this manual in several languages can be found in our online shop:

<https://www.wiltec.de/docsearch>

Our postal address is:

WilTec Wildanger Technik GmbH
Königsbenden 12
52249 Eschweiler – Germany

To return your goods for exchange, repair, or other purposes, please use the following address. Attention! To allow for a trouble-free complaint or return, it is important to contact our customer service team before returning your goods.

Retourenabteilung
WilTec Wildanger Technik GmbH
Königsbenden 28
52249 Eschweiler – Germany

E-mail: **service@wiltec.info**

Tel: +49 2403 55592-0

Fax: +49 2403 55592-15



Introduction

Thank you for choosing to purchase this quality product. To minimise the risk of injury, we ask you to always take some basic safety precautions when using this product. Please read this operating manual carefully and make sure that you understand it.

Keep these operation instructions in a safe place.

Safety instructions

- The ramps have been designed to make it easier for you to load or unload ATVs/quads, motorcycles, and lawn mowers. However, they are not meant to carry the weight of a vehicle with the ramps being opened.
- Only drive a vehicle on the ramps when they are closed.
- Do not exceed the nominal load capacity of the ramps. Used for a vehicle (closed), one ramp has a maximum load capacity of 800 kg. Used for an ATV/quad (opened), one ramp has a maximum load capacity of 250 kg.
- Keep your fingers away from the foldable components when opening/closing the ramp. **Risk of injuries!**
- The owner and/or user must read, understand, and follow all warnings, precautions, and instructions before using the product.
- Read, understand, and obey all instructions before operating the device. Do not use the ramps without reading and understanding all instructions, precautions, and warnings first. Any improper use can lead to material damage and/or personal injury.
- Only use the device on a hard, level surface when loading or unloading.
- Never exceed the maximum load capacity of the back door of your vehicle. Refer to the user's manual of your vehicle to find the correct value.
- Keep your extremities (hands, feet, etc.) away from the ramps. Neither reach under the ramps nor stay under them.
- Every ramp seeming damaged, worn, or inoperable must immediately be put out of operation until repair. It is recommended that you ask a qualified person to do the repair job.
- If you suppose that the ramps have been exposed to an unusual stress or shock, they must be put out of operation until visual inspection.
- Do not place tools or other devices under the ramps.
- These ramps can only be used with the flange pointing downwards (see assembly instructions). Using the ramp in reverse assembly direction with the flange pointing upwards (to guide the wheels) considerably reduces the maximum load capacity.
- The ramps are designed to rest against the upper edge of the back door or trailer. If the loading area is not coated, the ramps might scratch the protective paint surface of your vehicle.
- Never exceed the maximum height of 100 cm (40") if using the ramps opened. Using the ramps in their opened position at a height exceeding the recommended maximum height can lead to damages of the charge and/or personal injuries.
- Make sure, before using the ramps, that the lorry or trailer is blocked and that the brakes are applied. Use chocks to block the wheels. In case the lorry or trailer moves forward when loading or unloading, the ramps might slip off the vehicle, causing the charge to fall.
- Check the bent part of the ramps to make sure that it rests entirely on the rear end of the lorry or trailer. Only use the ramps on a hard, level surface. Otherwise, a dangerous situation might arise, provoking damages and/or injuries. Avoid wet slippery surfaces and surfaces with macadam.
- Before charging, fix the ramps opened to the lorry using the safety chains.
- Do not drive the load onto the ramp opened. The load must be guided via the opened ramp by hand.
- Due to potential risks linked to this type of devices, no modifications can be made to the product.
- Only attachments and/or adaptors supplied by the manufacturer may be used. Non-observance of these instructions/warnings can lead to damages and/or injuries.
- Make sure that the load stays in the centre of the ramp and only use two ramps to load or unload a vehicle. Non-observance of these instructions/warnings can lead to damages and/or injuries.



- The ramps must not be used to support both ends at the same time or just one side of a vehicle as you would do with mounting stands.
- The maximum wheel width is 9".
- Do not use other lifting devices in combination with these ramps.
- Do not remove the brakes, the engine, parts of the gearing, the drive chain, drive shaft, Cardan joints, or wheels with the vehicle being on the ramps.
- Make sure that the wheels used to move the vehicle onto the ramps are well aligned forwards and stay in the centre of the ramps.
- Another person, who must not stay in the line of the vehicle, should observe and guide the driver when loading or unloading via the ramps.
- Drive at low speed and with caution. Never accelerate or brake abruptly. Once the vehicle has reached the top of the ramp, you should only apply the brakes to prevent going too far ahead.
- Put the vehicle in neutral and apply the parking brake firmly. The vehicle should not move when the brakes are released. Put the vehicle in reverse or park and secure the wheels to the ground with jack blocks.
- Make sure that both wheels are correctly placed on the access ramp. Slightly joggle the vehicle from one side to the other and in the direction of movement to make sure that both the vehicle and ramps are stable, and make sure that you are not staying within the danger zone. Make sure that the ramps have not been damaged or bent during charging.

Parts list and assembly


Before assembling the device, check if all components are present.

No	Name	Quantity
1	Foldable ramp carrying strap	2
2	Bent piece of ramp with safety chains	2
3	Wheel stop	2
4	Screw and nut (M10×20)	8
5	Screw, nut, and washer (M8×35)	4
6	Screw, nut, and washer (M8×20)	4
7	Screw and washer (M8×16)	4
8	Screw, nut, and washer (M6×16)	2

Tool required for assembly: 13 mm half-moon wrench

Installation

Warning! Only assembly the device according to the illustrations. Do not assemble the device with the flange pointing upwards. The flange pointing downwards is meant to stabilise the ramp; it is not meant to guide the wheels.

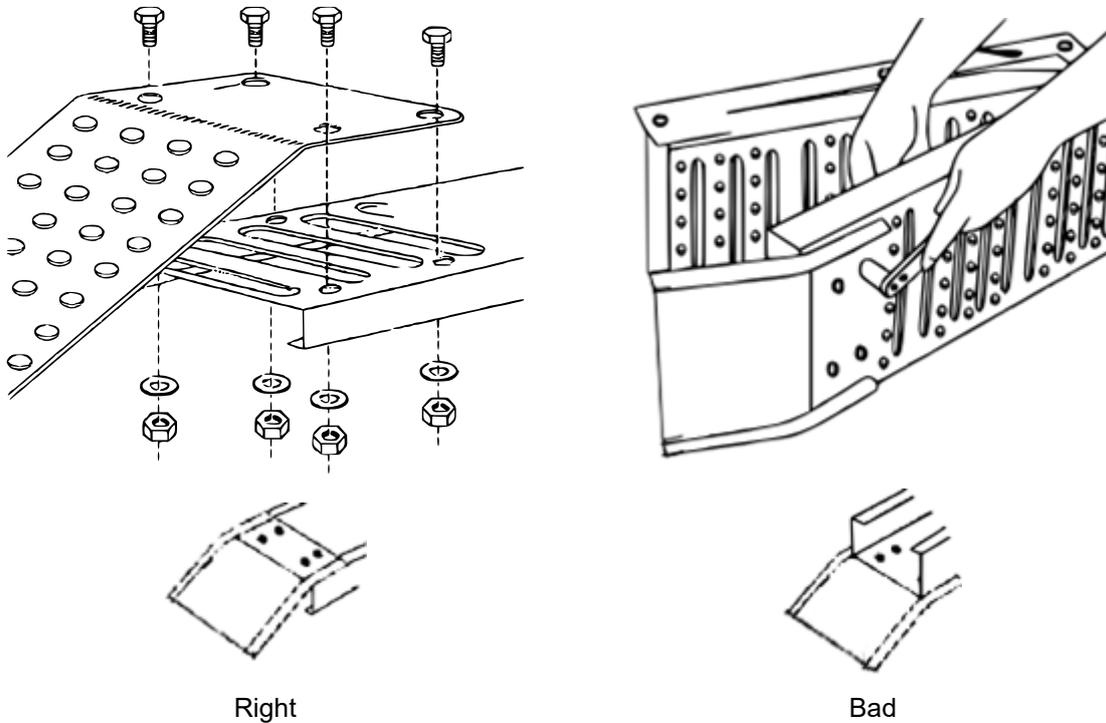


Notes

- Load and unload your equipment with caution.
- The load must be centred between the sides of the ramps.
- The surface of the ramp must be dry, clean, and free from oil and grease.
- When loading or unloading a vehicle, make sure that the engine is off.



Step 1: Open the first portion of the ramp and screw the pent piece using 4 screws per ramp.

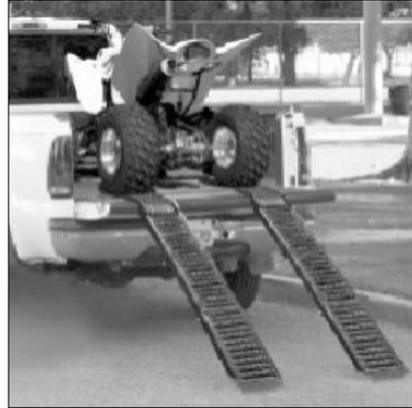

Step 2: To use the product for ATVs/quads, remove the stop and open the 2 parts as shown.

Secure the ramps to the loading area using the safety chains.



Maintenance and inspection

- These ramps must be maintained following the instructions. Every ramp must be checked before use. The ramps must not be used if they are somehow damaged.
- Before use, visually inspect the ramps to find potential cracks, bends, loose or missing parts, or rust.
- Clean all surfaces and keep all stickers, warnings, and instructions in good condition.
- Always keep the surfaces of the ramps clean, dry, and free from oil and grease.

Important note:

Reproduction and any commercial use (of parts) of this operating manual, requires a written permission of WilTec Wildanger Technik GmbH.