

Operating instructions

Camping Washing Machine

64215, 64216

wiltec



Illustration similar, may vary depending on model

Please read and follow the operating instructions and safety information prior to initial operation.

Technical changes reserved!

Illustrations, functional steps, and technical data may deviate insignificantly due to continuous further developments.



The information contained in this document may alter at any time without prior notice. No part of this document may be copied or otherwise duplicated without prior written consent. All rights reserved.

WilTec Wildanger Technik GmbH cannot be held liable for any possible mistakes in this operating manual, nor in the diagrams and illustrations shown.

Although WilTec Wildanger Technik GmbH has made every possible effort to ensure that this operating manual is complete, accurate, and up-to-date, errors cannot be ruled out entirely.

If you have found an error or wish to suggest an improvement, we look forward to hearing from you.

Send us an e-mail to:

service@wiltec.info

or use our contact form:

<https://www.wiltec.de/contacts/>

The most recent version of this manual in several languages can be found in our online shop:

<https://www.wiltec.de/docsearch>

Our postal address is:

WilTec Wildanger Technik GmbH
Königsbenden 12
52249 Eschweiler – Germany

To return your goods for exchange, repair, or other purposes, please use the following address. Attention! To allow for a trouble-free complaint or return, it is important to contact our customer service team before returning your goods.

Retourenabteilung
WilTec Wildanger Technik GmbH
Königsbenden 28
52249 Eschweiler – Germany

E-mail: **service@wiltec.info**

Tel: +49 2403 55592-0

Fax: +49 2403 55592-15

Introduction

Thank you for choosing to purchase this quality product. To minimise the risk of injury, we ask you to always take some basic safety precautions when using this product. Please read this operating manual carefully and make sure that you understand it. Keep these operation instructions in a safe place.

 
Safety instructions

- The device is not intended for use by persons (including children) with impaired or limited physical, sensory, and mental abilities or lack of experience and/or real knowledge, unless they are supervised by a person responsible for their safety or follow the instructions made by this person on how to correctly use the device.
- Children should be supervised to ensure that they do not play with the device.
- Never connect the earth plug to a gas pipe, water pipe, telephone cable, or lightning conductor.
- Do not use the device in case the power cord or plug is damaged. **Danger of electric shock! Fire hazard!**
- Only use the hoses included. Old hoses must not be used again.



<p>Do not expose the washing machine to direct sunlight or rain.</p>	<p>Do not place the washing machine to a humid location.</p>	<p>Make sure that no water may contact the plugs and switches.</p>
<p>Let the water thoroughly drain from the drain tube.</p>	<p>Do not disconnect the plug by pulling the cable.</p>	<p>Keep the washing machine away from fire or sources of heat.</p>
<p>Do not wipe off the washing machine with flammable material (e.g., petrol).</p>	<p>Do not pour water exceeding 60 °C into the washing machine.</p>	

Parts

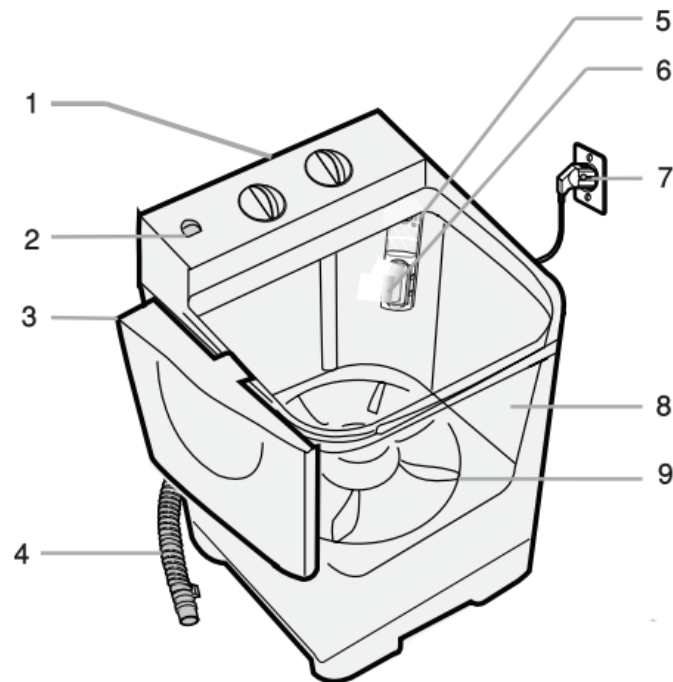


No	Name/description	No	Name/description
1	Control panel	6	Fluff filter
2	Water inlet	7	Power cable
3	Wash tub lid (some models have a scrub lid). You can use the washtub lid to clean the most heavily soiled laundry by scrubbing it with detergent.	8	Wash tub
4	Drain hose	9	Pulsator
5	Fluff-filter holder		

Accessories


- Suction hose
- Connection of water inlet hose
- Operating instructions
- Compensation disk

Control panel

 
The control panel and water inlet vary depending on the model of the device. Refer to the control panel corresponding to your device.

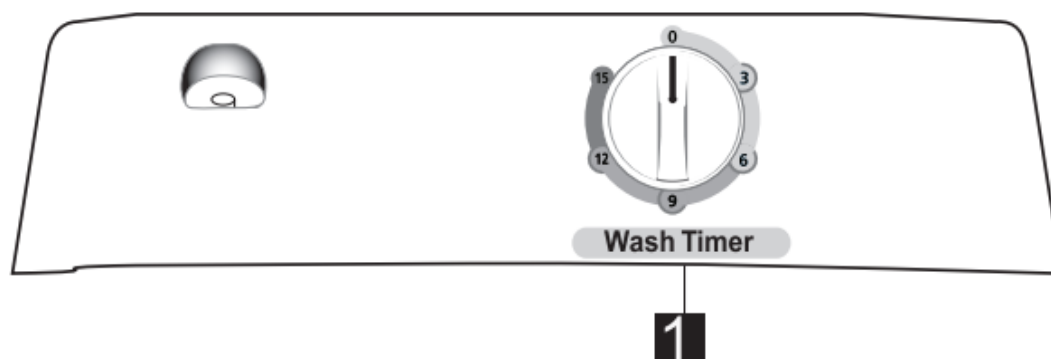

No	Name/description
1	Washing machine timer — for setting the washing time (1–15 min)

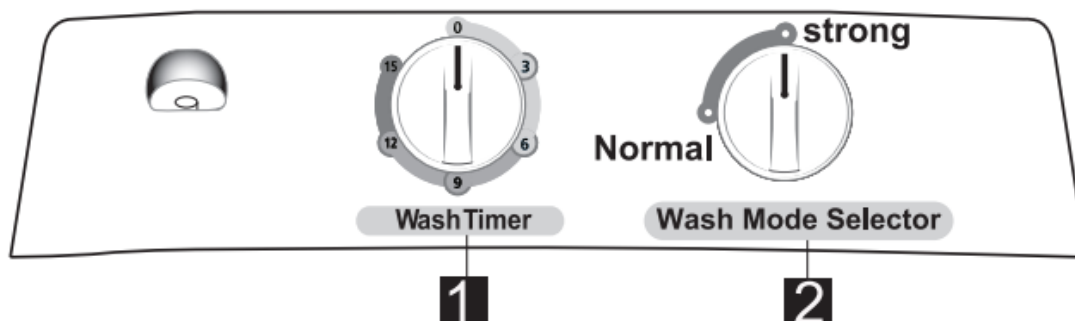 

No	Name/description
1	Washing machine timer — for setting the washing time (1–15 min)
2	Selector switch — for switching over to the operational modes “Normal” and “Strong”

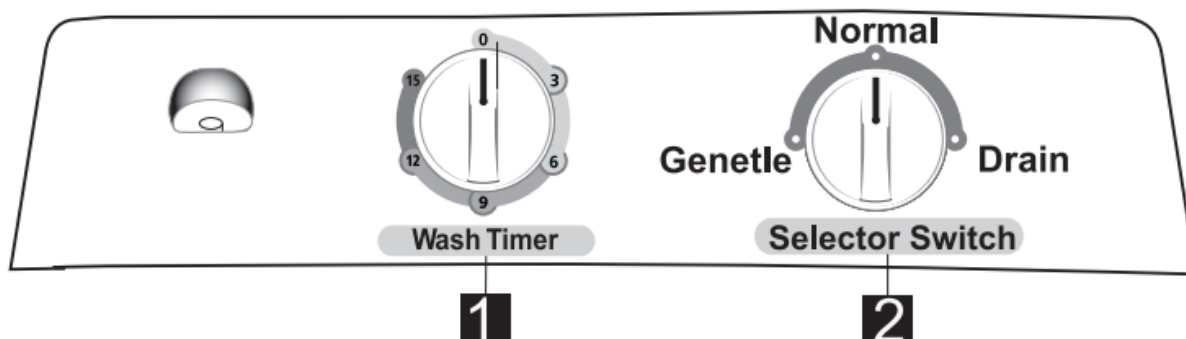 

No	Name/description
1	Washing machine timer — for setting the washing/soaking time
2	Selector switch — for switching over to the operational modes “Normal,” “Strong,” “Drain”

The position of the controllers and the water inlet may vary for the individual products.

Using the double water inlet

The machine has two water inlets. Each drum has a separate water inlet.

 
Attention!

- The maximum water inlet pressure is 3 bar.
- The minimum water inlet pressure is 0.2 bar.


If spin-drying does not come to a standstill in the space of 12 s after opening the lid, stop operation and contact an expert.

Installation

- Place the washing machine to a level and stable surface.
- Keep the washing machine at a distance of more than 5 cm from the wall to avoid noises during washing.

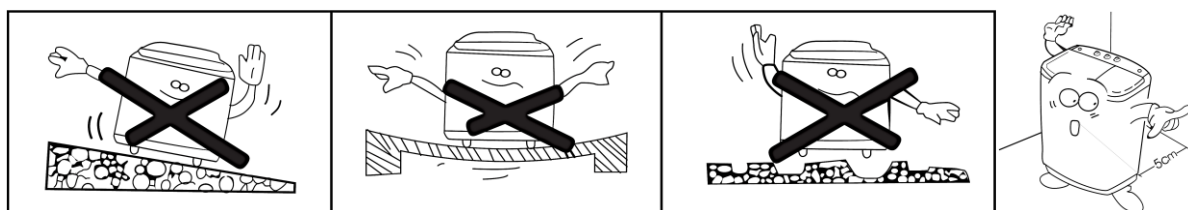

 Connecting the drain hose (if there is no drain pump)

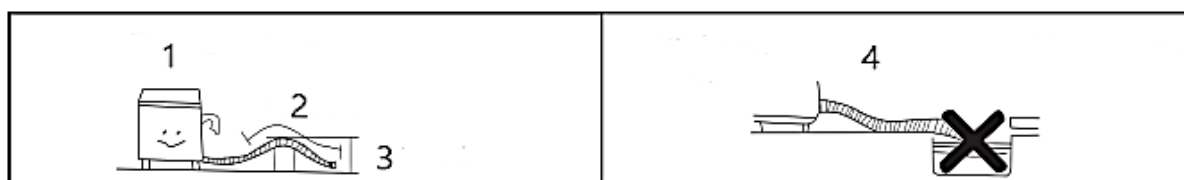

No	Name/description
1	Drain hose extension
2	Below 2 m
3	Below 15 cm
4	The end of the drain hose must never be put into water.



Operation

Preparing clothes before washing

<p>Make sure that all objects such as keys, pins, or coins are removed from the clothes.</p>	<p>Greasy or coloured clothes should be washed separately.</p>
<p>Turn inside out before washing fleecy clothes.</p>	<p>Wash delicate clothes in a nylon net.</p>

Washing

  - Before washing, note the following:
 - Connect the water-inlet hose and open the water cock.
 - Connect the power cable to the power supply.
- Switch the washing selector switch to the desired washing mode.
- Place the clothes that should be washed into the washing drum.
- Pour water into the washing drum, then add detergent.
- Set the washing timer to 1–15 min.

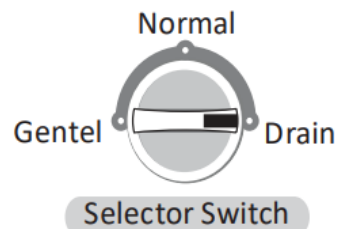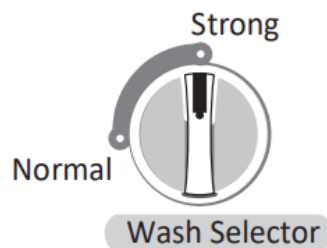


Washing

  

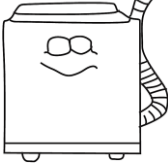 
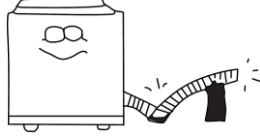 
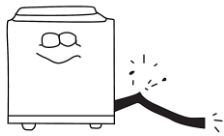 
Type of clothes	Washing time (min)	Setting
Very solid, heavy fabric	10–15	Strong
Linen, cotton, etc.	8–10	
Normal clothes (socks, etc.)	7	Normal
Somewhat solid synthetic fibre	2–5	
100 % wool, mixed wool, fine synthetic fibre with label demanding hand wash only	2–5	

Maintenance

- After washing, disconnect the plug from the mains.
- Clean the device with a clean, dry, and soft cloth.
- The drums need to be cleaned after lading lest no deposits form.
- Remove the fluff filter and clean it.

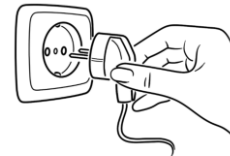

Troubleshooting

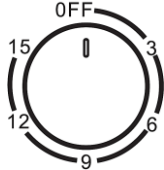Problem	Check		
Washing does not start	Rotary knob set to "Off" position? 	Energy supplied? 	
No water is drained (if no pump is present)	Is the drain hose placed to a too high position? 	Is the drain hose twisted or too much inclined? 	Is the drain hose frozen? 
Washing too weak	<ul style="list-style-type: none"> • Are there too many clothes in the drum? • Is the fan belt too loose? • Is the tension too low? 		

Regulations for waste disposal

The Waste Electrical and Electronic Equipment Directive (WEEE Directive, 2012/19/EU) of the EU was implemented in the German law related to electrical and electronic equipment and appliances.

All WilTec electric devices that fall under the WEEE directive are labelled with the symbol of a crossed-out wheeled rubbish bin. This symbol indicates that this electric device must not be disposed of with the domestic waste.

WilTec Technik GmbH is registered with the German registration authority EAR (Stiftung Elektro-Altgeräte Register) under the WEEE-registration number DE45283704.

Disposal of used electrical and electronic devices (intended for use in the countries of the European Union and other European countries with a separate waste collection system for these devices).

The symbol on the packaging or the product itself indicates that this product must not be treated as normal domestic waste but must be disposed of at a recycling collection station for electrical and electronic waste.

By disposing of this product correctly, you contribute to the protection of the environment and the health of your fellow people. Inappropriate disposal threatens the environment and health.



Material recycling helps to reduce the consumption of raw materials.

Additional information about the recycling of this product can be provided by your local commune, the municipal waste disposal facilities, or the store where you purchased the product.

Address:
WilTec Wildanger Technik GmbH
Königsbenden 12 / 28
52249 Eschweiler Germany

Important note:

Reproduction and any commercial use (of parts) of this operating manual, requires a written permission of WilTec Wildanger Technik GmbH.