

# AOYUE<sup>®</sup> 932

## VACUUM PICK UP

### INSTRUCTION GUIDE

1. Install proper IC suction header on 932 vacuum pick up.
2. Place the suction header level on IC.
3. Press down the button on the suction pencil to let out the air within the vacuum unit, then release the button to produce vacuum suction force to pick up IC.
4. Put the Icon a proper place, press down the button, the vacuum unit discharges air to let the IC fall off the suction header.
5. Three Suction headers are provided with this suction pencil, Large size, medium size, small size respectively for:
  - (1) Large size for 40g.
  - (2) Medium size for 18g.
  - (3) Small size for 3g.

### Specification

Power Input	110-130V
	210-240V
Power Consumption	20-25W
Weight	2.2 Kgs.

Manufacturer:

**AOYUE TONGYI ELECTRONIC EQUIPMENT FACTORY**

Jishui Industrial Zone, Nantou, Zhongshan City,

Guangdong Province, P.R.China

<http://www.aoyue.com>