

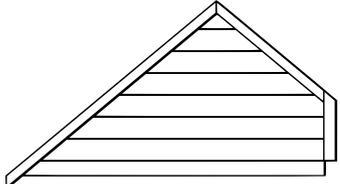


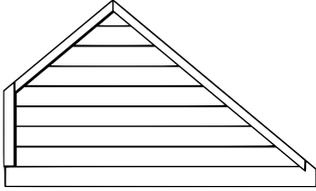

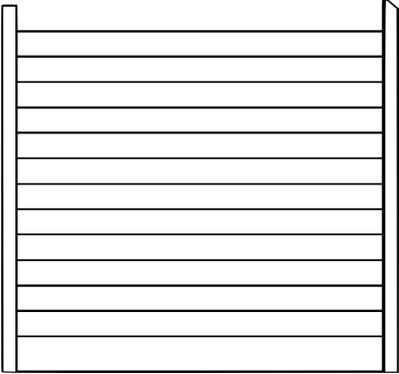
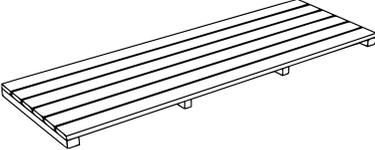
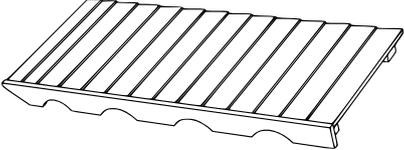
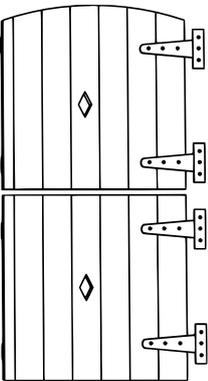


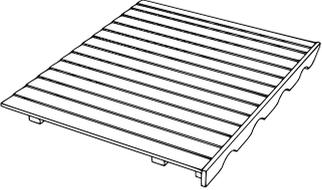


N°	Figure	Qté	N°	Figure	Qté
1		1	10		2
2		1	11		1
			12		1
3		1	13		1
4		1	14		1
			15		1
5		1	16		1
			17		1
6		1	18		1

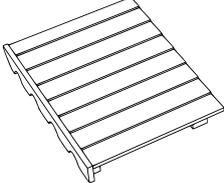


7		1						
8		1			19	1		
					20	1		
					21	2		
					22	2		
					23	2		
				 13-mm-Abstandhalter (Espaceur de 13 mm)	24	2		
9		1						

A	B	C	D	E	F	G	H	I
 3,5×60	 3,5×50	 3,0×30	 3,0×25	 3,0×20	 3,0×16	 3,5×24		
4	26	14	16	39	36	8	8	4

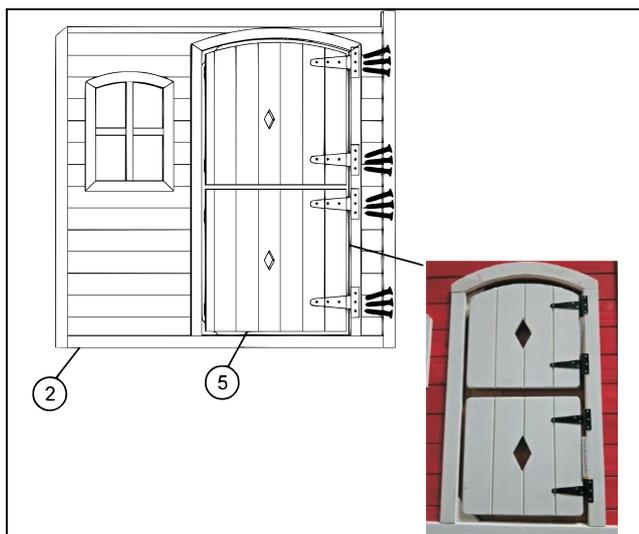


Étape 1 | F×12


Lors de l'assemblage de la porte et de la fenêtre, laissez un espace de 13 mm pour éviter un pincement ultérieur.

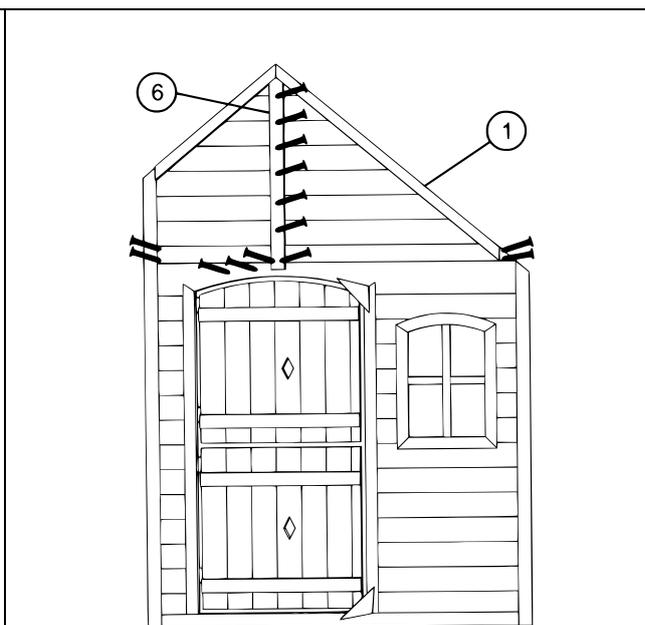


Étape 2 | E×14

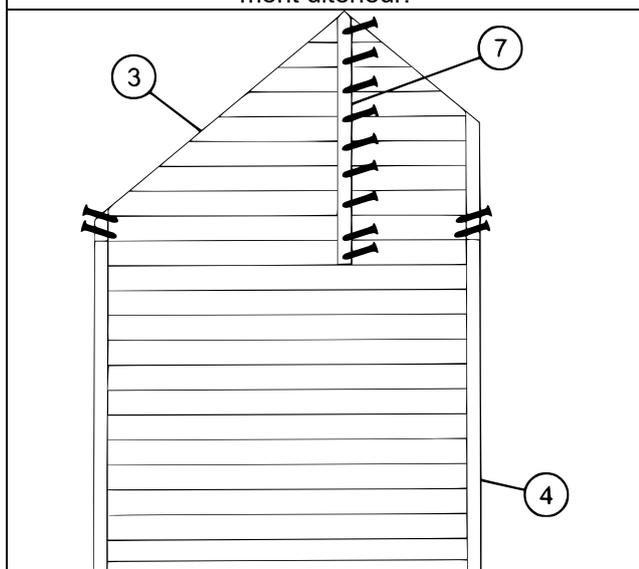


Étape 3 | E×13

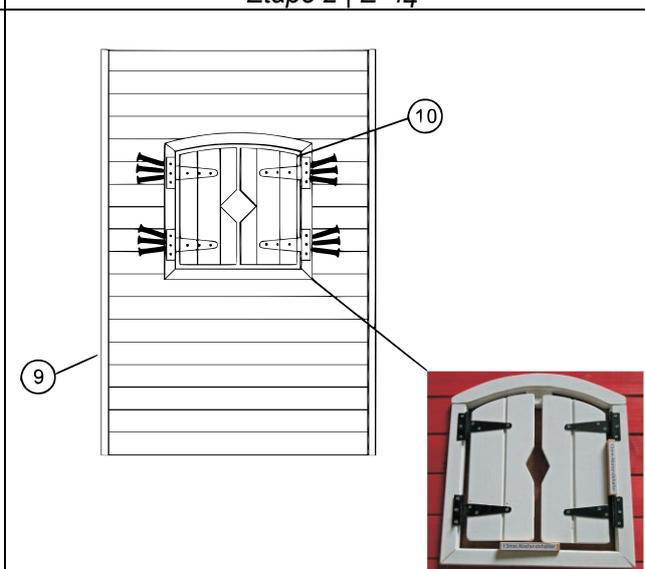


Étape 4 | F×12

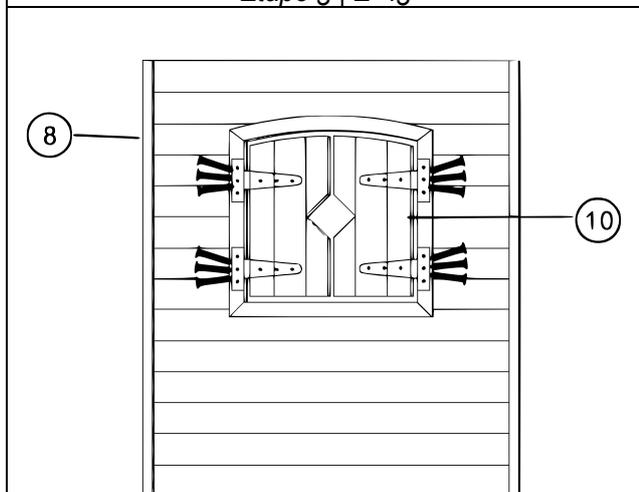


Étape 5 | F×12

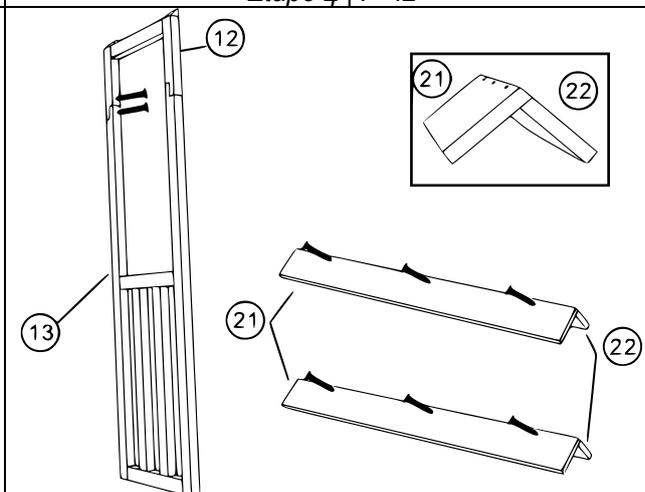


Étape 6 | C×8

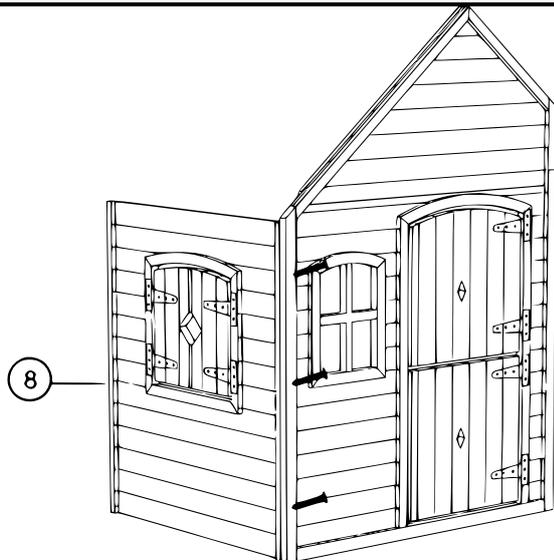


Étape 7 | B×3

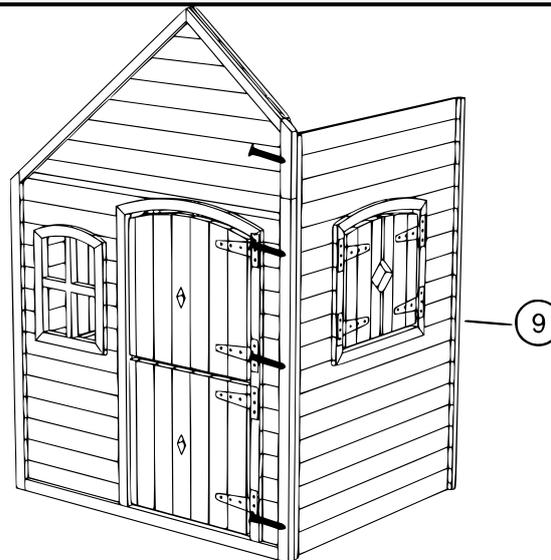


Étape 8 | B×4

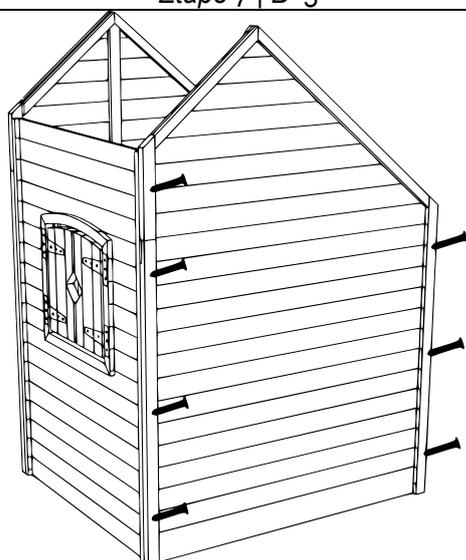


Étape 9 | B×7

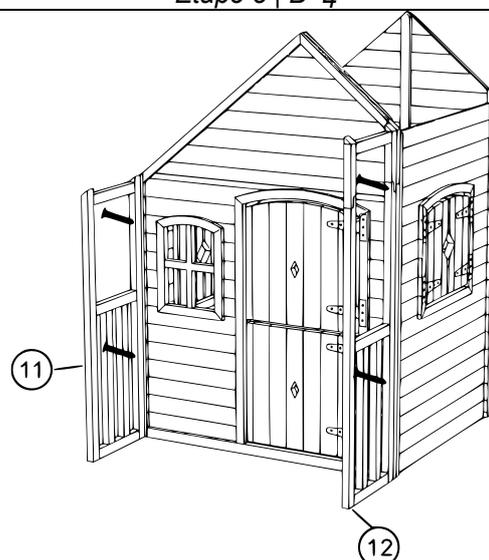


Étape 10 | A×4

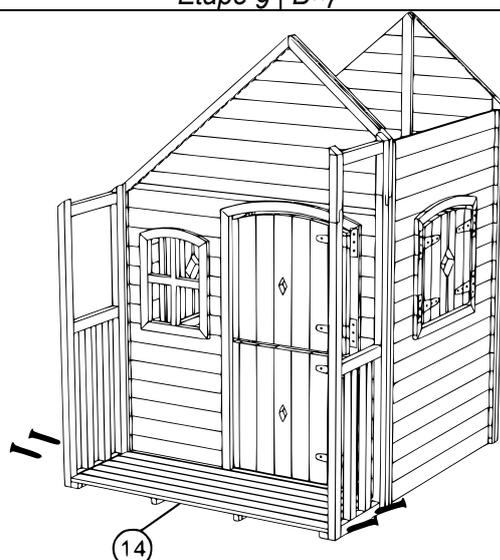


Étape 11 | B×4

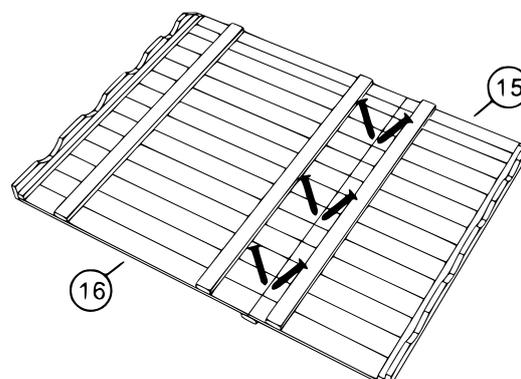


Étape 12 | E×6

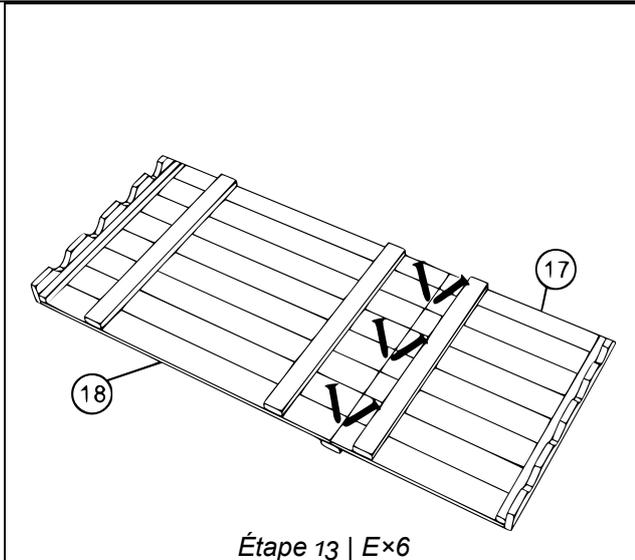


Étape 13 | E×6

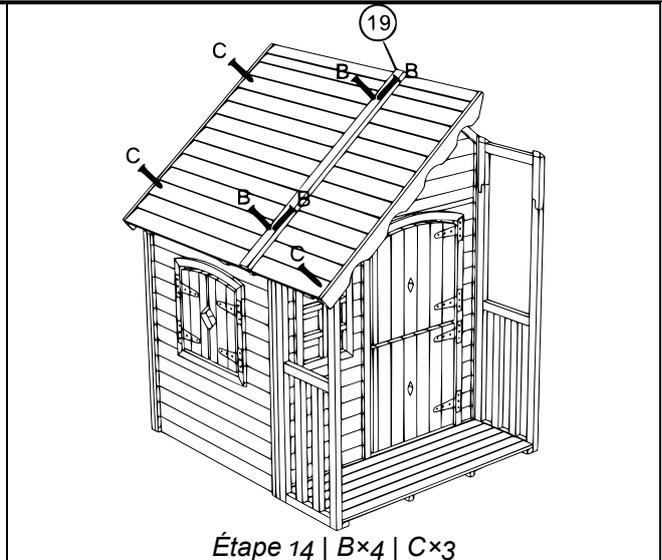


Étape 14 | B×4 | C×3

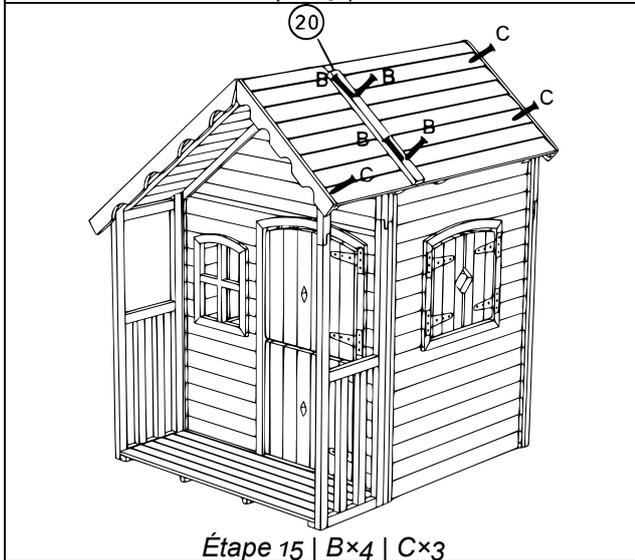


Étape 15 | B×4 | C×3

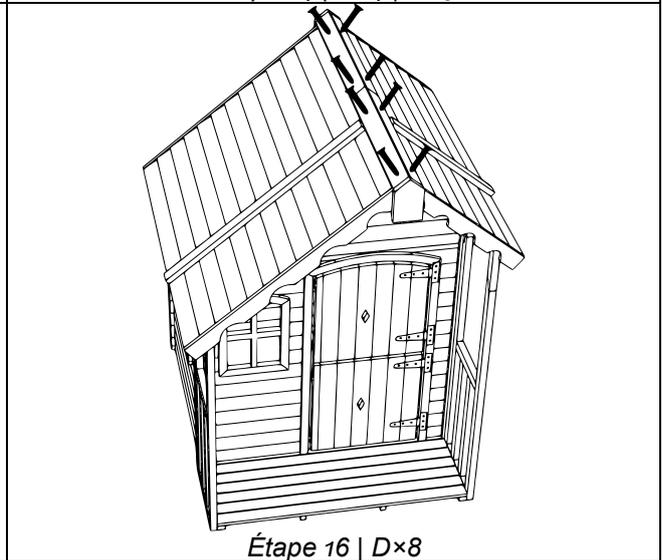

Étape 16 | D×8

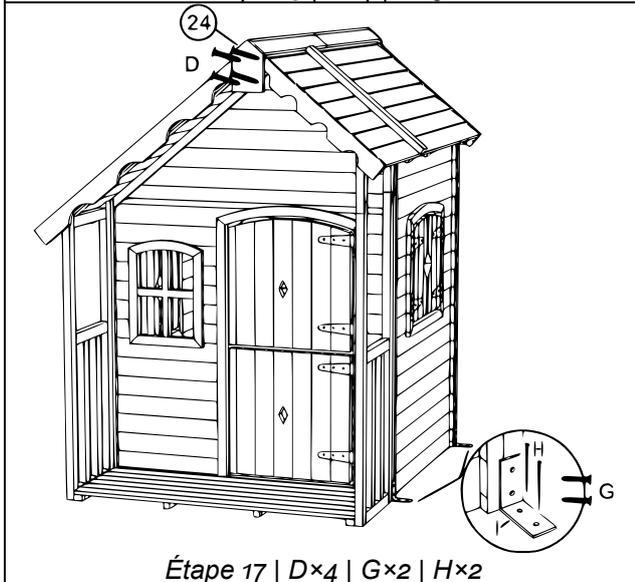

Étape 17 | D×4 | G×2 | H×2

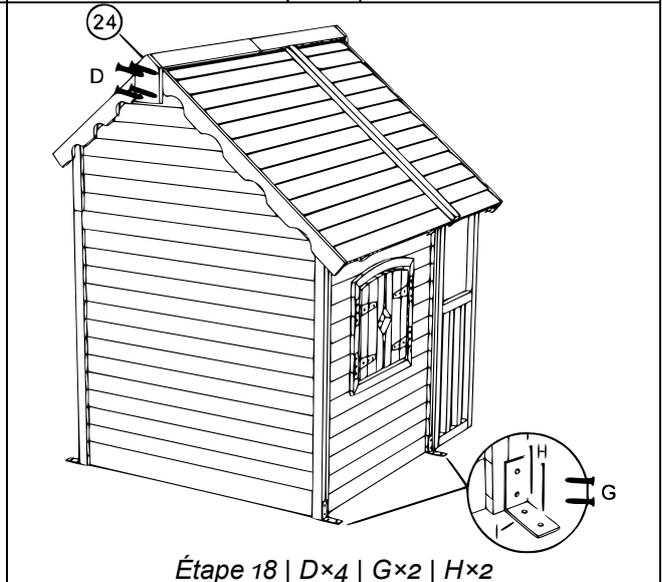

Étape 18 | D×4 | G×2 | H×2

Avis important :

Toute reproduction et toute utilisation à des fins commerciales, même partielle de ce mode d'emploi, ne sont autorisées qu'avec l'accord préalable de la société WilTec Wildanger Technik GmbH.