


Step 1

Take the door out of its frame.




Step 2

Retrace the inner rim where the panel shall be installed.

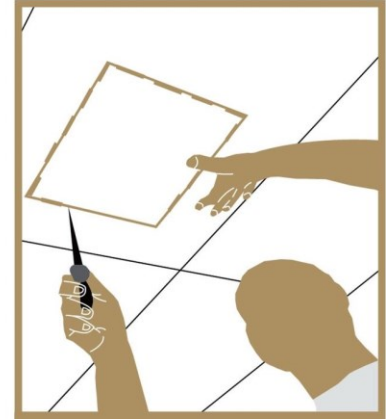


Step 3

Cut the opening. With drywall ceilings and drywall walls, use a special drywall saw.

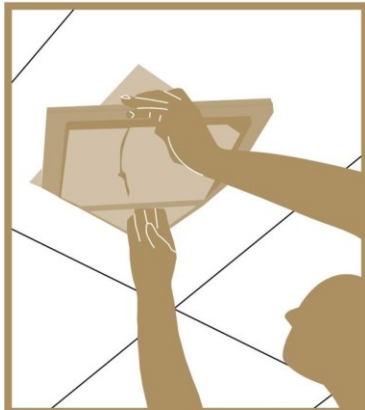

Step 4

Install the frame of the access panel into the opening.

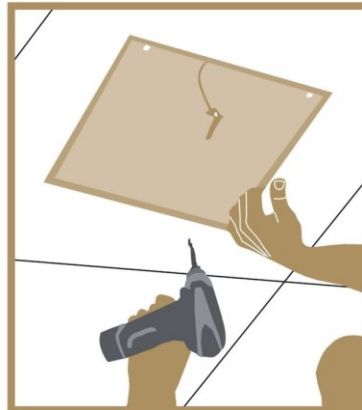

Step 5

Then fix the frame using 25 mm drywall screws. Install the door to check if it opens and closes without any problem. Before passing on to the last step, remove the door again.



Step 6

Finally, apply drywall tape and drywall jointing before re-installing the door of the access panel.

Important Note:

Reproduction and any commercial use (of parts) of this operating manual, requires a written permission of WilTec Wildanger Technik GmbH.