

Instruction Manual

Naturewater Single-Stage Water Filter

51086–51097



Illustration similar, may vary depending on model

Read and follow the operating instructions and safety information before using for the first time.

Technical changes reserved!

Illustrations, functional steps, and technical data may deviate insignificantly due to continuous further developments.

Updating the documentation

If you have suggestions for improvement or have found any irregularities, please contact us.



The information contained in this document may alter at any time without prior notice. No part of this document may be copied or otherwise duplicated without prior written consent. All rights reserved. WilTec Wildanger Technik GmbH cannot be held liable for any possible mistakes in this operating manual, nor in the diagrams and illustrations shown.

Although WilTec Wildanger Technik GmbH has made every possible effort to ensure that this operating manual is complete, accurate, and up-to-date, errors cannot be ruled out entirely.

If you have found an error or wish to suggest an improvement, we look forward to hearing from you. Send us an e-mail to:

service@wiltec.info

or use our contact form:

<https://www.wiltec.de/contacts/>

The most recent version of this manual in several languages can be found in our online shop:

<https://www.wiltec.de/docsearch>

Our postal address is:

WilTec Wildanger Technik GmbH
Königsbenden 12
52249 Eschweiler Germany


To return your goods for exchange, repair, or other purposes, please use the following address. Attention! To allow for a trouble-free complaint or return, it is important to contact our customer service team before returning your goods.

Retourenabteilung
WilTec Wildanger Technik GmbH
Königsbenden 28
52249 Eschweiler Germany

E-mail: **service@wiltec.info**
Phone: +49 2403 55592-0
Fax: (+49 2403 55592-15)

Introduction

Thank you for choosing to purchase this quality product. To minimise the risk of injury, we ask you to always take some basic safety precautions when using this product. Please read this operating manual carefully and make sure that you understand it. Keep these operation instructions in a safe place.

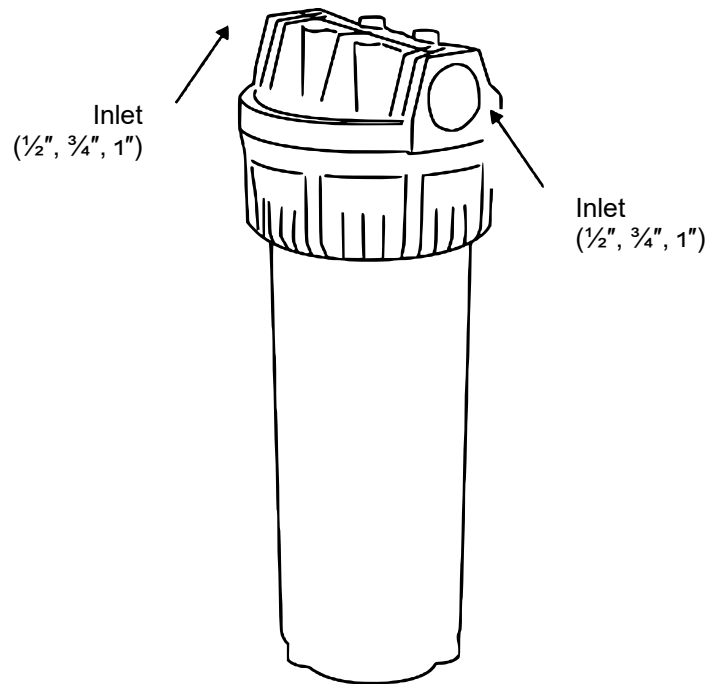

1. You can choose different filter inserts, e.g., sediment filters, carbon filters, cotton filters, ceramic filter, etc. and insert into the housing.
2. The different connections for the inlet and outlet can be chosen by the customer.
3. Open the casing and remove the filter cartridge. Remove the wrapping on the inside of the cartridge. Then place the filter cartridge back into the casing and close it again.
4. Check the connection between this product and everything connected to it.
5. Connect the feed to the tap and ensure that its positioning is secure.
6. Open the tap. The water will be redirected from the pipe through the filter system from where it will flow out of the opening valve.
7. The used water filter inserts (e.g., carbon filter, cotton filter, etc.) and cartridges need to be exchanged according to the water quality in regular intervals. The sediment and activated carbon filters cannot be washed out and need to be replaced approximately every 6 months.

Important Note:

Reproduction and any commercial use (of parts) of this operating manual, requires a written permission of WilTec Wildanger Technik GmbH.