

User's Manual

7-piece Blind Rivet Pliers Set

61074



Illustration similar, may vary depending on model

Read and follow the operating instructions and safety information before using for the first time.

Technical changes reserved!

Illustrations, functional steps, and technical data may deviate insignificantly due to continuous further developments.

Updating the documentation

If you have suggestions for improvement or have found any irregularities, please contact us.



The information contained in this document may alter at any time without prior notice. No part of this document may be copied or otherwise duplicated without prior written consent. All rights reserved. WilTec Wildanger Technik GmbH cannot be held liable for any possible mistakes in this operating manual, nor in the diagrams and illustrations shown.

Although WilTec Wildanger Technik GmbH has made every possible effort to ensure that this operating manual is complete, accurate, and up-to-date, errors cannot be ruled out entirely.

If you have found an error or wish to suggest an improvement, we look forward to hearing from you. Send us an e-mail to:

service@wiltec.info

or use our contact form:

<https://www.wiltec.de/contacts/>

The most recent version of this manual in several languages can be found in our online shop:

<https://www.wiltec.de/docsearch>

Our postal address is:

WilTec Wildanger Technik GmbH
Königsbenden 12
52249 Eschweiler – Germany

To return your goods for exchange, repair, or other purposes, please use the following address. Attention! To allow for a trouble-free complaint or return, it is important to contact our customer service team before returning your goods.

Retourenabteilung
WilTec Wildanger Technik GmbH
Königsbenden 28
52249 Eschweiler – Germany

E-mail: **service@wiltec.info**

Tel: +49 2403 55592-0

Fax: +49 2403 55592-15

Introduction


Thank you for choosing to purchase this quality product. To minimise the risk of injury, we ask you to always take some basic safety precautions when using this product. Please read this operating manual carefully and make sure that you understand it. Keep these operation instructions in a safe place.

Safety instructions

- Keep your working area clean and well illuminated. A cluttered and poorly lit workplace increases the risk of accidents.
- Pay attention to what you are doing and be cautious when using the blind rivet pliers.
- Check the blind rivet pliers before every use to know if it is operational. Do not use it if there is any damage visible.
- Only use the blind rivet pliers with original mouthpieces.
- Only use the blind rivet pliers correctly. Any improper use can lead to material damage and/or personal injury.
- The blind rivet pliers must not be used as stationary tool.

Technical specifications

Length (mm)	360
Weight (g)	980
Max. working stroke (mm)	9
Max. effective working stroke (mm)	7
Material	Steel
Mouthpiece sizes	M3–M12

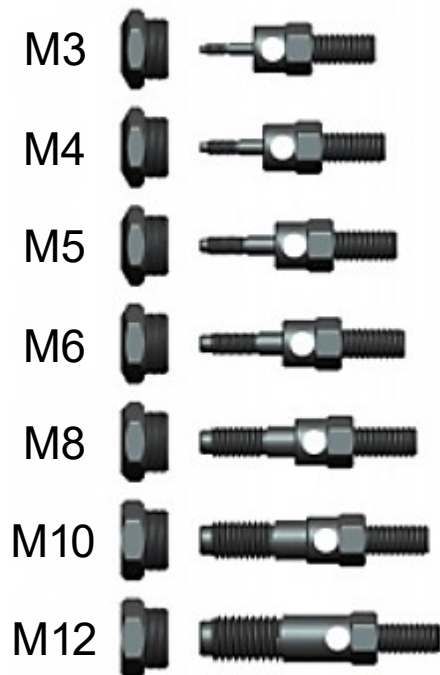

Working steps



Step 1

Open the handle and place the rivet nut onto the mouthpiece.



Step 2

Slide the shaft holding the rivet nut into the predrilled hole where the rivet nut shall be placed.



Step 3

Press the levers of the handle together to fix the rivet nut.



Step 4

After inserting the rivet nut, turn the adjusting knob clockwise as shown to separate the pliers from the rivet nut.

Important Note:

Reproduction and any commercial use (of parts) of this operating manual, requires a written permission of WilTec Wildanger Technik GmbH.