

Operation Manual

Sausage Clipper 61853

toboli



Illustration similar, may vary depending on model

Please read and follow the operating instructions and safety information prior to initial operation.

Technical changes reserved!

Illustrations, functional steps, and technical data may deviate insignificantly due to continuous further developments.



The information contained in this document may alter at any time without prior notice. No part of this document may be copied or otherwise duplicated without prior written consent. All rights reserved. WilTec Wildanger Technik GmbH cannot be held liable for any possible mistakes in this operating manual, nor in the diagrams and illustrations shown.

Although WilTec Wildanger Technik GmbH has made every possible effort to ensure that this operating manual is complete, accurate, and up-to-date, errors cannot be ruled out entirely.

If you have found an error or wish to suggest an improvement, we look forward to hearing from you. Send us an e-mail to:

service@wiltec.info

or use our contact form:

<https://www.wiltec.de/contacts/>

The most recent version of this manual in several languages can be found in our online shop:

<https://www.wiltec.de/docsearch>

Our postal address is:

WilTec Wildanger Technik GmbH
Königsbenden 12
52249 Eschweiler Germany

To return your goods for exchange, repair, or other purposes, please use the following address. Attention! To allow for a trouble-free complaint or return, it is important to contact our customer service team before returning your goods.


Retourenabteilung
WilTec Wildanger Technik GmbH
Königsbenden 28
52249 Eschweiler Germany

E-mail: **service@wiltec.info**
Phone: +49 2403 55592-0
Fax: (+49 2403 55592-15)

Introduction

Thank you for choosing to purchase this quality product. To minimise the risk of injury, we ask you to always take some basic safety precautions when using this product. Please read this operating manual carefully and make sure that you understand it. Keep these operation instructions in a safe place.

Components

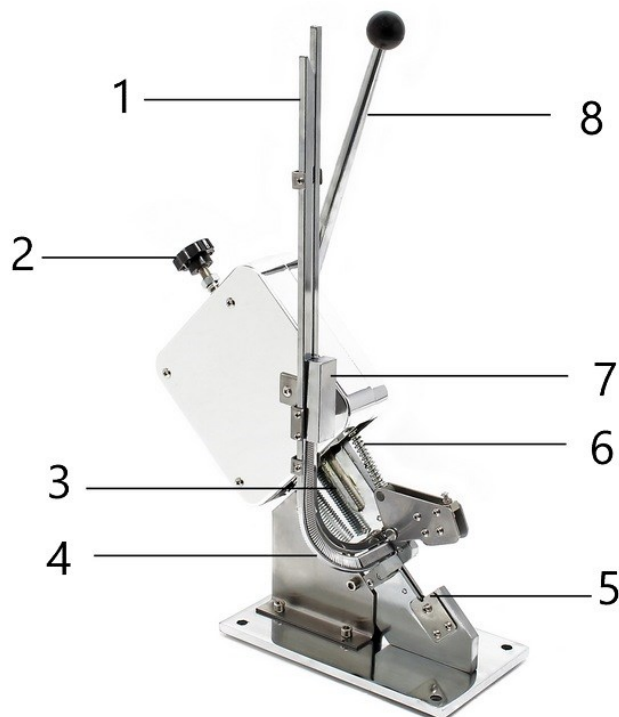

No	Name
1	Straight guide bar
2	Adjusting screw
3	Return spring
4	U-shaped guide bar
5	Lower forming point
6	Connecting bar with spring
7	Counterweight
8	Handle



Safety instructions

- The device must not be used by persons (including children) with impaired or limited mental, physical, or sensory abilities or by persons with a lack of experience and/or knowledge.
- Keep children away from the device to make sure that they do not play with it.
- Do not use the device in case it is damaged or cannot be operated properly.
- To avoid any injury, be very careful when cleaning and maintaining the device.
- Only use the device properly. Any improper use can lead to material damage and personal injury.
- We are not to be held responsible for any damage resulting from improper use.

Use

- Place the device on a level, clean, and dry surface. To have additional stability, the device can be fixed to the surface with the help of the pilot holes of the base. **Attention!** The mounting material is not included in the delivery.
- Move the handle **(8)** back. Then slide the clips onto the guide bar **(4)** and close them by pressing the counterweight **(7)**.
- Place the object to be closed onto the forming point **(5)** and push the handle **(1)** down. Now the clip clasps around the object.
Note! In case the handle is difficult to be moved back or down, you might add some drops of lubricant into the corresponding opening at the end of the handle.
- The pressing force can be adjusted with the help of the adjusting screw **(2)**; thus, the clips will not be closed too strongly or too slightly around the object. Turn the screw clockwise to loosen, turn it counter-clockwise to tighten. Secure the adjustment with the help of the counter-nut.

Cleaning and maintenance

- Thoroughly clean the device after every use. For cleaning, use warm soapy water or any cleaning agent without abrasive.
- Do not use steel brushes or similar objects to clean the device, as they could damage its surface.
- Before every use, check the device for damages. Should the operation of the device be impaired in any way, the device must not be used.

Important Note:

Reproduction and any commercial use (of parts) of this operating manual, requires a written permission of WilTec Wildanger Technik GmbH.