

Operation Manual

Extension Bar 140 cm for Drywall Lift 50789



Illustration similar, may vary depending on model

Please read and follow the operating instructions and safety information prior to initial operation.

Technical changes reserved!

Illustrations, functional steps, and technical data may deviate insignificantly due to continuous further developments.



The information contained in this document may alter at any time without prior notice. No part of this document may be copied or otherwise duplicated without prior written consent. All rights reserved. WilTec Wildanger Technik GmbH cannot be held liable for any possible mistakes in this operating manual, nor in the diagrams and illustrations shown.

Although WilTec Wildanger Technik GmbH has made every possible effort to ensure that this operating manual is complete, accurate, and up-to-date, errors cannot be ruled out entirely.

If you have found an error or wish to suggest an improvement, we look forward to hearing from you. Send us an e-mail to:

service@wiltec.info

or use our contact form:

<https://www.wiltec.de/contacts/>

The most recent version of this manual in several languages can be found in our online shop:

<https://www.wiltec.de/docsearch>

Our postal address is:

WilTec Wildanger Technik GmbH
Königsbenden 12
52249 Eschweiler Germany

To return your goods for exchange, repair, or other purposes, please use the following address. Attention! To allow for a trouble-free complaint or return, it is important to contact our customer service team before returning your goods.

Retourenabteilung
WilTec Wildanger Technik GmbH
Königsbenden 28
52249 Eschweiler Germany

E-mail: **service@wiltec.info**
Phone: +49 2403 55592-0
Fax: (+49 2403 55592-15)



Introduction

Thank you for choosing to purchase this quality product. To minimise the risk of injury, we ask you to always take some basic safety precautions when using this product. Please read this operating manual carefully and make sure that you understand it.
Keep these operation instructions in a safe place.

Safety instructions

CAUTION:

This manual explains the assembly, use and disassembly of the extension bar for dry wall lift after use for safe transport and simple storage. We strongly recommend our clients to obey the instructions and information for use before using the drywall lift.

To protect yourself from severe injuries, proceed with common sense and respect the following safety precautions while using the drywall lift!

ATTENTION:

ALWAYS:

- read the instructions before use and make sure to respect all warnings.
- check the lift before daily use, especially the cable.
- assimilate the lift to the room temperature before beginning to work (movement from a cold to a warm room may cause condensations that can impair the effect of the brake).
- make sure that the brake drum is clean and dry before using the lift.
- keep the work area free of obstacles.
- wear a hard hat when working with the lift.
- pay attention for hanging obstacles when lifting a panel.

NEVER:

- use the lift in case the traverse fixation is not secured with its fastening springs.
- use the lift for any objects but drywall panels.
- lift more than one panel at the same time.
- exceed the maximum charge of 70 kg.

Mounting the dry wall lift extension bar

1. Release the brake.
2. Unroll the wire cable until there is no more tension.
3. Remove the cable from its lock (Fig. 1).

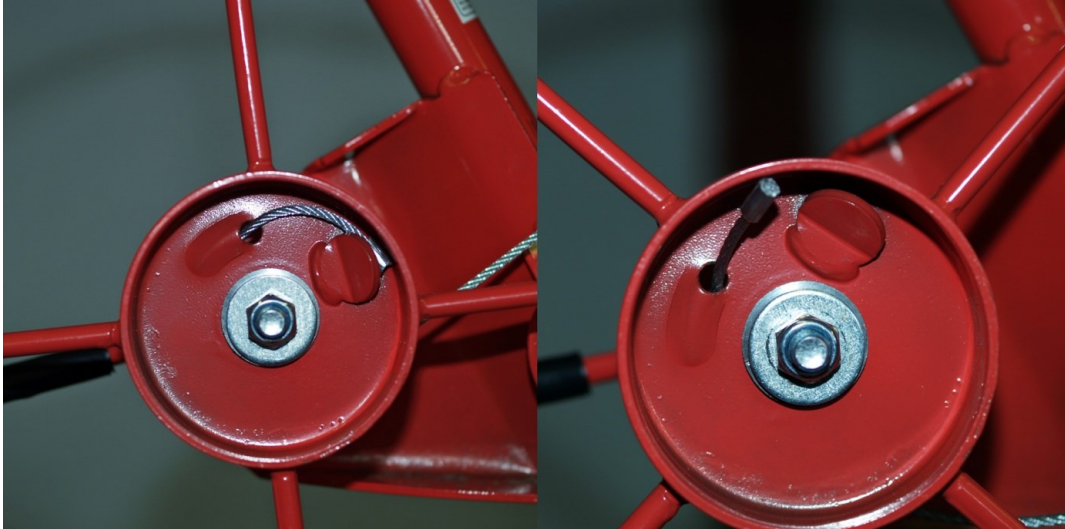


Figure 1

4. Remove the cable from its guide (Fig. 2).



Figure 2

5. Pull out the telescopic bar upwards (Fig. 3).

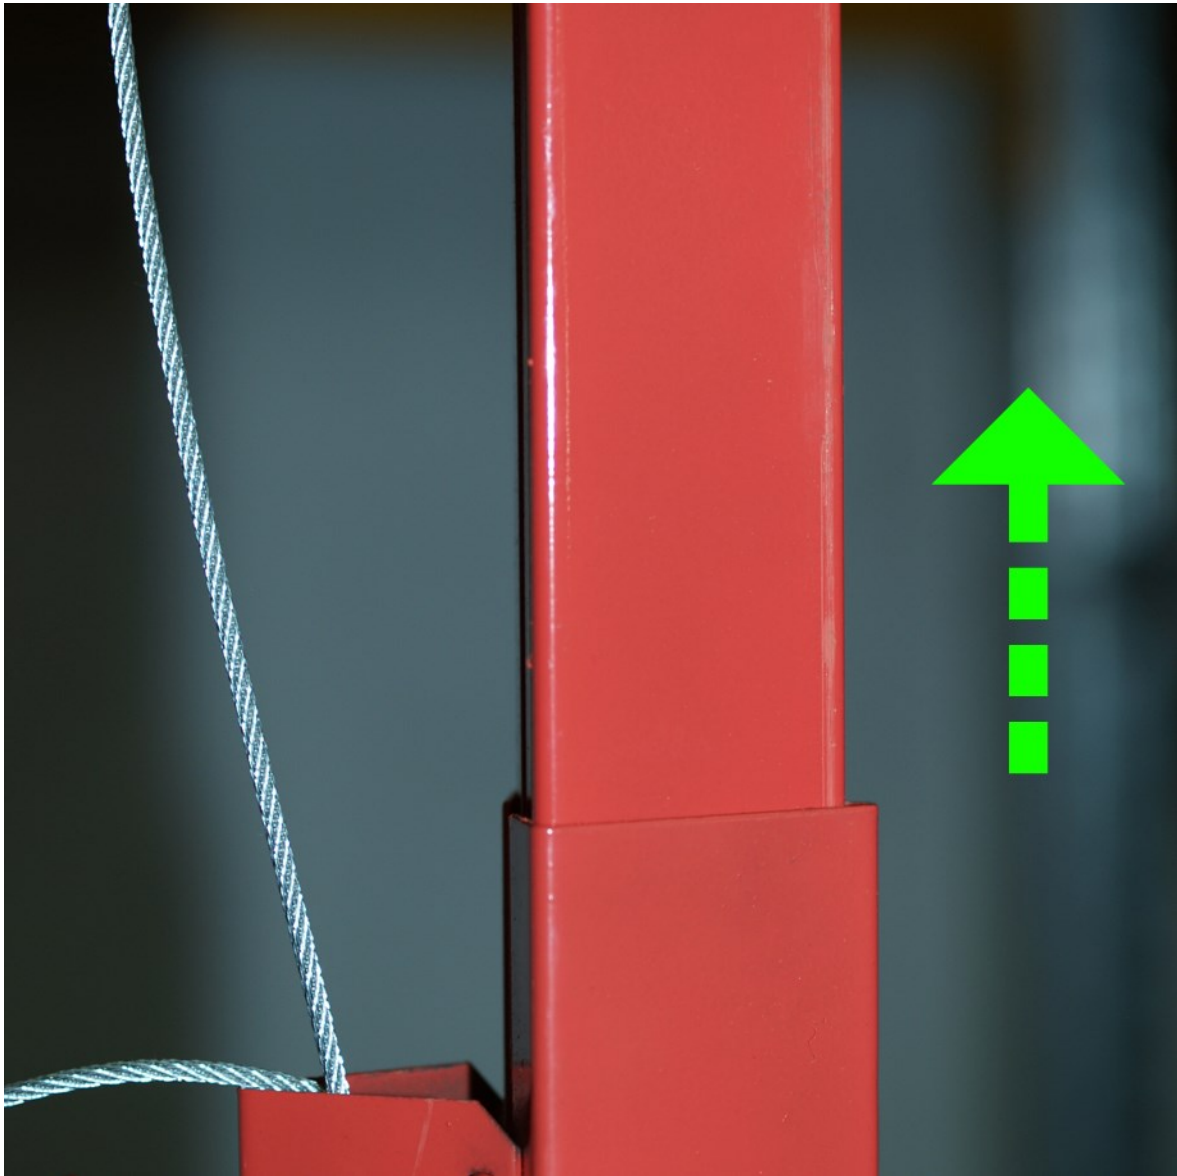


Figure 3

6. Insert the extension bar (Fig. 4).

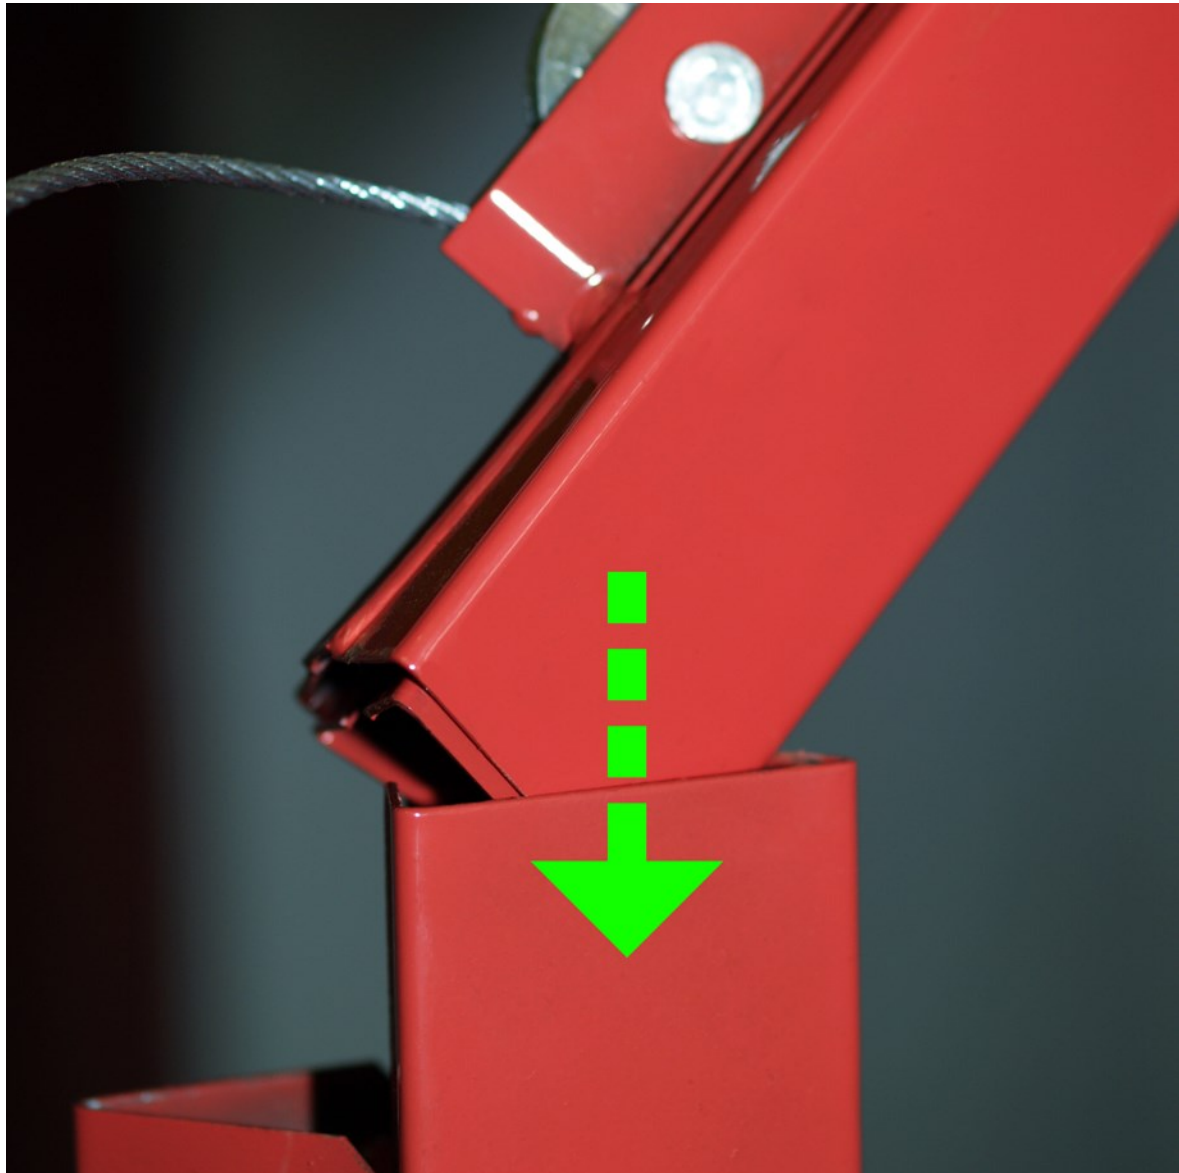


Figure 4


7. Thread the wire cable of the extension bar into the guide (making sure that the cable is situated above the guide roll) (Fig. 5).



Figure 5

8. Lock the brake.

9. Guide the cable alongside the underside of the hand crank and fix it to the lock (Fig. 6).

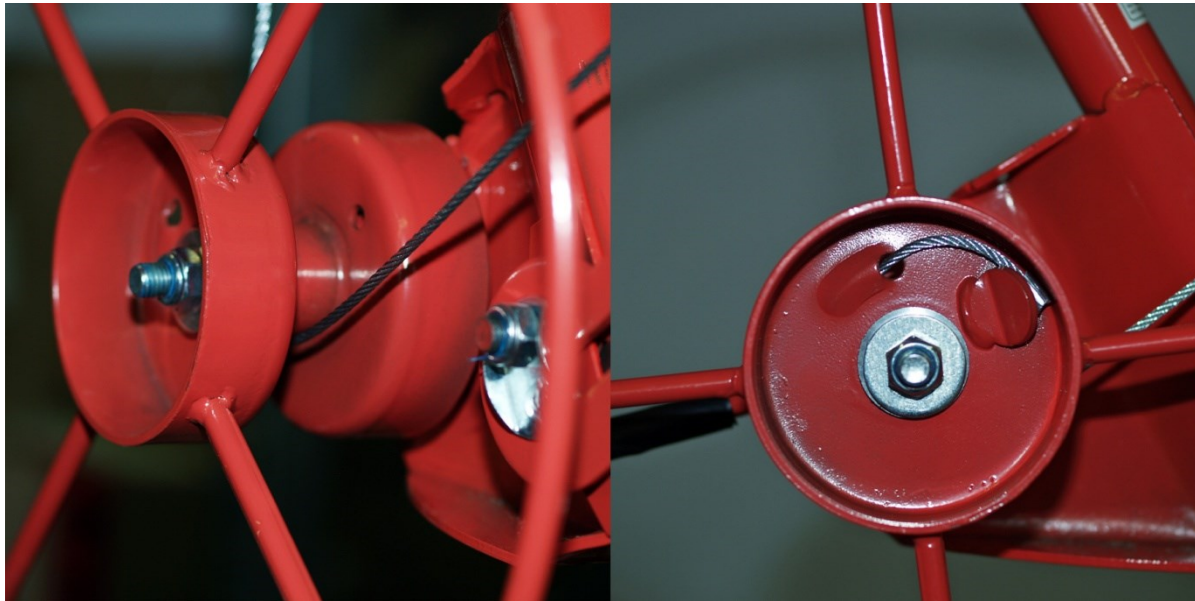

Picture 6

10. Release the brake, apply the hand crank until the cable is tense again.

Ready!

Disassembly

To disassemble the extension bar, follow the assembly steps in reverse order.

Important Note:

Reproduction and any commercial use (of parts) of this operating manual, requires a written permission of WilTec Wildanger Technik GmbH.