

Operation Manual

Parts Washer

61310



Illustration similar, may vary depending on model

Please read and follow the operating instructions and safety information prior to initial operation.

Technical changes reserved!

Illustrations, functional steps and technical data may deviate insignificantly due to continuous further developments.



The information contained in this document may alter at any time without prior notice. No part of this document may be copied or otherwise duplicated without prior written consent. All rights reserved. WilTec Wildanger Technik GmbH cannot be held liable for any possible mistakes in this operating manual, nor in the diagrams and illustrations shown.

Although WilTec Wildanger Technik GmbH has made every possible effort to ensure that this operating manual is complete, accurate and up-to-date, errors cannot be ruled out entirely.

If you have found an error or wish to suggest an improvement, we look forward to hearing from you.

Send us an e-mail to:

service@wiltec.info

or use our contact form:

<https://www.wiltec.de/contacts/>

The most recent version of this manual in several languages can be found in our online shop:

<https://www.wiltec.de/docsearch>

Our postal address is:

WilTec Wildanger Technik GmbH
Königsbenden 12
52249 Eschweiler Germany

To return your goods for exchange, repair or other purposes, please use the following address. Attention! To allow for a trouble-free complaint or return, it is important to contact our customer service team before returning your goods.

Retourenabteilung
WilTec Wildanger Technik GmbH
Königsbenden 28
52249 Eschweiler Germany

E-mail: **service@wiltec.info**

Phone: +49 2403 55592-0

Fax: (+49 2403 55592-15)



Introduction

Thank you for choosing to purchase this quality product. To minimise the risk of injury, we ask you to always take some basic safety precautions when using this product. Please read this operating manual carefully and make sure that you understand it.

Keep these operation instructions in a safe place.

Safety instructions

- Modifications due to technical progress can be made by the manufacturer without advance notice and may not be considered yet in this user's manual.
- Before use, check the device for completeness, functionality, and tightness.
- Never use a damaged or dysfunctional device. Contact the manufacturer or have the device controlled by a qualified repairman.
- Always work with care and the attention required.
- Never apply excessive force when using the device.
- Fill in cleaning agent up to the level marked inside the tank.
- Do not use cleaning agents with a flashpoint below 65 °C.
- Only use cleaning agents on petroleum base or those being biodegradable. Only cleaning agents approved for use in electric parts washers are permitted.
- Keep children and casual bystanders away from your work zone.
- Only use the parts washer in well-ventilated rooms.
- Do not smoke near the device and do not operate it near sources of heat such as heaters, open flames, and sparks.
- Should the parts washer begin to burn, do not try to move it. The cover, having a melting protection, closes automatically and extinguishes the fire. Never modify in any way the cover and do not try to fix it by hand in open position.
- Only use the device with earthed mains of 230 V / 50 Hz.
- Do not perform work with this product when being tired or influenced by alcohol, drugs, or medicine.
- When performing any kind of work with the parts washer, wear a suitable protection clothing such as safety gloves, safety shoes, safety goggles, etc.
- Only keep packing material (films, plastic bags, polystyrene, etc.) out of children's, in particular babies' reach. Packing material hold dangers that might not be visible (e.g., risk of suffocation).

Intended use

- The device is appropriate for cleaning parts and assemblies of parts.
- The device is not suitable for use together with any cleaning agent the flashpoint of which is below 65 °C. **Attention!** Do not use any nitro-cellulose combination thinner!


Maintenance

- Clean the pumping unit after every single use.
- Long-term contact with cleaning agents must be avoided absolutely; otherwise, the warranty will be voided.

Technical specifications

Energy supply	230 V / 50 Hz
Power consumption (W)	26
Delivery rate ($\frac{l}{min}$)	15
Capacity (ℓ)	approx. 13.25
Size (cm)	47 × 36 × 25
Weight (kg)	6.5

Exploded view and parts list

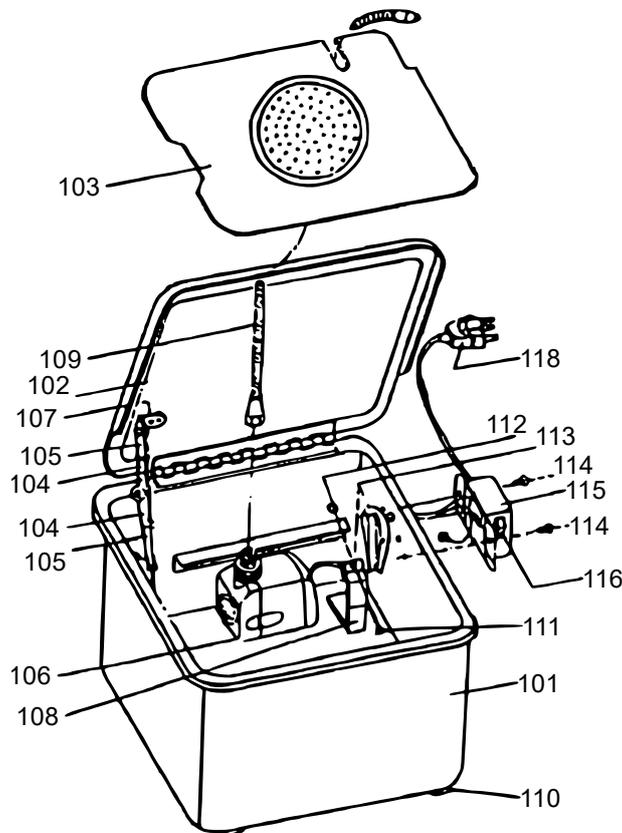

Nº	Name	Qty.	Nº	Name	Qty.
101	Tank	1	110	Plastic plate	4
102	Lid	1	111	Screw (M5×30)	1
103	Work plate	1	112	Nut (M5)	1
104	Arm (articulated joint)	2	113	Cable cover	1
105	Safety panel	2	114	Screw (M4×12)	2
106	Pump	1	115	Handle	1
107	Rivet	5	116	On/off switch	1
108	Pump holder	1	118	Power cable	1
109	Flexible hose	1			

Regulations for waste disposal

The Waste Electrical and Electronic Equipment Directive (WEEE Directive, 2012/19/EU) of the EU was implemented in the German law related to electrical and electronic equipment and appliances.

All WilTec electric devices that fall under the WEEE directive are labelled with the symbol of a crossed-out wheeled rubbish bin. This symbol indicates that this electric device must not be disposed of with the domestic waste.

WilTec Technik GmbH is registered with the German registration authority EAR (Stiftung Elektro-Altgeräte Register) under the WEEE-registration number DE45283704.

Disposal of used electrical and electronic devices (intended for use in the countries of the European Union and other European countries with a separate waste collection system for these devices).

The symbol on the packaging or the product itself indicates that this product must not be treated as normal domestic waste but must be disposed of at a recycling collection station for electrical and electronic waste.

By disposing of this product correctly, you contribute to the protection of the environment and the health of your fellow people. Inappropriate disposal threatens the environment and health.



Material recycling helps to reduce the consumption of raw materials.

Additional information about the recycling of this product can be provided by your local commune, the municipal waste disposal facilities, or the store where you purchased the product.

Address:
WilTec Wildanger Technik GmbH
Königsbenden 12 / 28
52249 Eschweiler Germany

Important Note:

Reproduction and any commercial use (of parts) of this operating manual, requires a written permission of WilTec Wildanger Technik GmbH.