

Operation Manual

Floor-mounted 2-bike Rack

62832

toboli



Illustration similar, may vary depending on model

Read and follow the operating instructions and safety information before using for the first time.

Technical changes reserved!

Due to further developments, illustrations, functioning steps, and technical data can differ insignificantly.

Updating the documentation

If you have suggestions for improvement or have found any irregularities, please contact us.



The information contained in this document may alter at any time without previous notice. It is prohibited to copy or spread any parts of this document in any way without prior written allowance. All rights reserved.

The WilTec Wildanger Technik GmbH cannot be held accountable for any possible mistakes in this operating manual, nor in the diagrams and figures shown.

Even though, the WilTec Wildanger Technik GmbH has undergone biggest possible efforts to ensure that the operating manual is complete, faultless, and up to date, mistakes cannot be entirely avoided.

If you should find a mistake or wish to make a suggestion for improvement, we look forward to hearing from you.

Send an e-mail to:

service@wiltec.info

or use our contact form:

<https://www.wiltec.de/contacts/>

The most recent version of this manual in various languages can be found in our online shop via:

<https://www.wiltec.de/docsearch>

Our postal address is:

WilTec Wildanger Technik GmbH
Königsbenden 12
52249 Eschweiler
Germany

To return orders for exchange, repair, or other purposes, please use the following address. Attention! To allow for a smooth execution of your complaint or return, it is important to contact our customer service team before returning the goods.

Returns Department
WilTec Wildanger Technik GmbH
Königsbenden 28
52249 Eschweiler

E-mail: **service@wiltec.info**

Tel: +49 2403 55592-0

Fax: +49 2403 55592-15

Introduction


Thank you for purchasing this quality product. **To minimise the risk of injury we urge that our clients take some basic safety precautions when using this device. Please read the operation instructions carefully and make sure you have understood its content.**

Keep these operation instructions safe.

General guidelines and safety

- It is the user's responsibility to read and follow all instructions
- Inspect the product before use to ensure that it is properly assembled and that all parts function safely and are free from defects.
- Never modify this product in any way.
- Not all circumstances can be covered in these instructions. Please use the appliance properly and follow general safety precautions when using this product.

Parts list

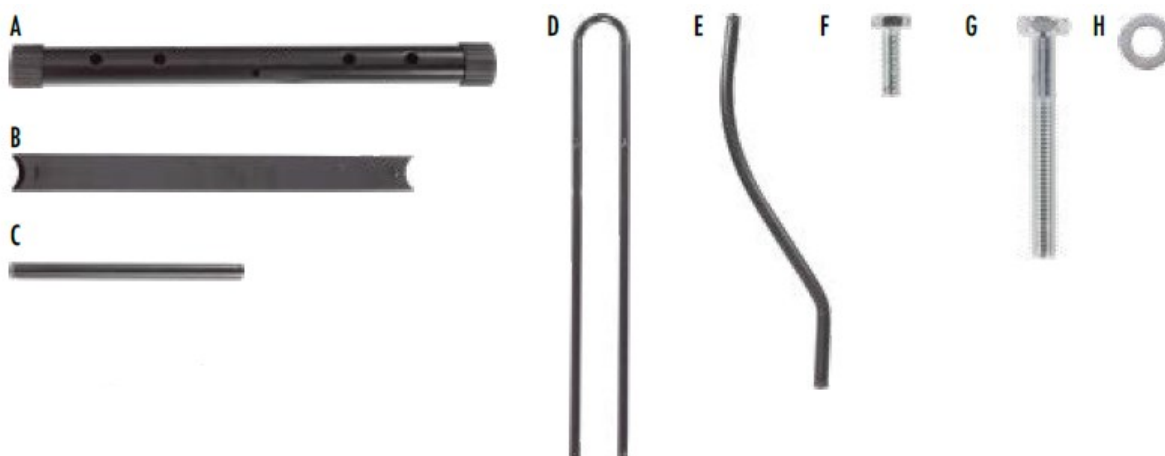

Part	Name	Quantity	Part	Name	Quantity
A	Base leg	2	E	Tire loop support	4
B	Base support leg	1	F	M6×20 screw	14
C	Connection bar	1	G	M6×65 screw	2
D	Tire loop	2	H	M8 washer	2

Tools required

- 10 mm wrench
- 14 mm wrench

Assembly instructions

When assembling the bicycle rack, tighten the bolts by hand until the entire part is fitted. When all the parts are fitted, tighten all the bolts with wrenches.

There are two options for assembly.

- **Option 1** is designed so that both bicycles are on one side.
- **Option 2** is designed so that one bicycle can be mounted on either side of the stand.

Option 1

Step 1

Attach the tyre loop (**D**) to one of the base legs (**A**) using M6×20 screws (**F**).



Step 2

Attach the tyre loop supports (**E**) to the other base leg (**A**) using M6×20 screws (**F**).



Step 3

Fit the two base leg assemblies together and secure with M6×20 screws (**F**).




Step 4

Fit the connector bar (**C**) between the two tyre loops (**D**) and secure with M6×20 bolts (**F**).



Step 5

Fit the base support bar **(B)** between the two base legs **(A)** and secure it with M6×65 screws **(G)** and washers **(H)**. Securely tighten all bolts with wrenches.

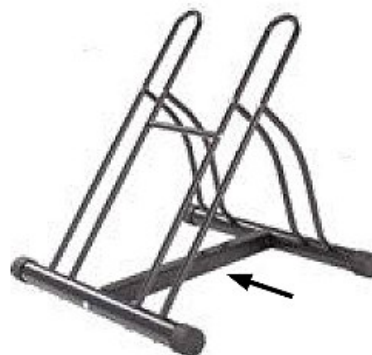

Option 2

Step 1

Attach one tire loop **(D)** and one tire loop support **(E)** to one of the base legs **(A)** using M6×20 bolts **(F)**.



Step 2

Repeat step 1 on the other base leg.



Step 3

Fit the two base leg assemblies together and secure with M6×20 bolts **(F)**.




Step 4

Fit the connector (**C**) between the two tire loops (**D**) and secure with M6×20 bolts (**F**).



Step 5

Fit the base support bar (**B**) between the two base legs (**A**) and secure with M6×65 bolts (**G**) and washers (**H**). Securely tighten all bolts with wrenches.

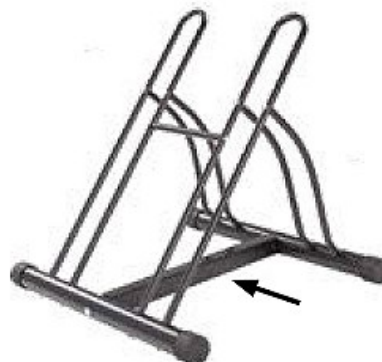

Important notice:

The reprint or reproduction, even of excerpts, and any commercial use, even in part, of this instruction manual require the written permission of WilTec Wildanger Technik GmbH.